

To Connect the Wireless IP Camera

1. Press and hold the **WPS** button of the DVR unit. To release button until hear the beep sound. The **Wireless indicator** that is located at front panel of the DVR unit will light up.



2. Press and hold the **WPS** button of IP camera until the **power LED** turns off (about 5 seconds), and then, the LED will start to blink at every 2 seconds. And then, wait about 120 seconds for IP camera to communicate with the DVR unit.



3. If the DVR unit and IP camera has successful to communicate. The WPS status indicator that is located at front panel of the DVR unit will start flashing.



4. And, the surveillance monitor should see the live video from IP camera.



Preview UI

