



THANK YOU FOR VOTING TEXECOM

INSTALLATION MANUAL

Premier 48

Premier 88

Premier 168

Premier 640

Security Control Panels

Issue 5



Texecom
www.texe.com


Contents

1. System Overview	4	5. Programming the Control Panel	32
System Architecture	4	Introduction	32
Control Panels	4	Copying and Pasting	34
Remote Keypads	5	Log Off Engineer	34
Zone Expanders.....	5	Resetting the Engineers Code (User 00).....	34
Output Expanders.....	5		
Communicators	5	5.1 Zone Setup	35
Other Devices	6	Zone Types	36
2. Installation.....	7	Zone Attributes 1	37
Installation Sequence.....	7	Zone Attributes 2	37
Control Panel.....	7	Attributes for Moment or Latch Keys.....	38
Power Supply Ratings	11	Attributes for Custom Zones.....	38
Connecting AC Mains.....	11	Zone Areas.....	38
Connecting Batteries.....	11	Zone Text	38
Connecting Devices to the Network	12	Zone Chime	38
Remote Keypads	14	Zone Masking	38
8XP Zone Expander	15	DD 243	38
60IXD Zone Expander	16	5.2 Area Programming.....	39
OP16 Output Expander.....	17	Timers	39
Zone and Output Numbering	18	Arming Modes	40
Zone Connections	19	Area Arm Suites.....	40
Auxiliary Tamper Connections.....	20	Area Suite Text	41
Speaker Connections	20	Suite Arm Modes	41
External Sounder Connections	20	Area Options.....	42
Panel Outputs 1 - 5	21	Time Arm Area	45
Digicom Outputs 1 - 8.....	21	Area Text.....	46
2-Wire Smoke Detector	22	5.3 Global Options	47
Expander Auxiliary Input	22	System Timers.....	47
Plug-on Communicators	23	System Config.....	48
RP9 Radio-Pad	24	System Options	51
GSM Module	24	Monitor Hardware.....	52
AV Module	24	Control Timers.....	52
ComIP Module	24	System Text	53
PC-Com	25	Part Arm Text.....	53
UNI-Com	25	Holiday Dates	54
PRINT-Com	25	Speaker Tones.....	54
RPD-Com	25	PC Output Text	55
GSM-Com.....	25	Custom O/P Text	55
Connecting a Computer	25	5.4 Keypad Setup	56
Connecting a Printer	25	Keypad Areas	57
3. Commissioning and Troubleshooting	26	Keypad Zone Mapping	57
Commissioning.....	26	Keypad Options.....	57
Trouble-Shooting.....	26	Keypad Speaker Volume.....	57
Reset and Service Messages.....	28	Keypad Sounder Options.....	57
4. Factory Defaults	29		

5.5 Expander Setup	58	5.9 Engineer Utilities	89
Expander Areas.....	59	View Event Log.....	89
Expander Location Text.....	59	Do Bell Test.....	92
Expander Auxiliary Input.....	59	Do Walk Test.....	92
Expander Speaker Volume.....	59	View Zone Status.....	93
Expander Sounder Options.....	59	Do System Tests.....	93
5.6 System Outputs	60	Confirm Devices.....	94
Available Outputs.....	61	View RKP Status.....	94
Programming Outputs.....	61	Check Exp. Status.....	94
Output Group - Not Used.....	61	Set System Time.....	95
Output Group - System.....	61	Set System Date.....	95
Output Group - Area.....	63	Change Eng. Code.....	95
Output Group - Zone.....	65	Adjust Volumes.....	95
Output Group - User Code Entered.....	65	Default NVM Data.....	96
Output Group - Control Timer.....	65	Location Text.....	96
Output Group - PC Control.....	65	Print Log Data.....	96
Output Group - Door Control.....	65	Soak Test Areas.....	96
Output Attributes.....	66	View iD Data.....	97
X-10 Outputs.....	66	Configure Radio.....	97
Custom Outputs.....	66	5.10 Programming Part Arms	98
5.7 UDL/Digi Options	67	Alter Part Arms.....	98
Reset Digi.....	67	6. Specifications	99
Start Test Call.....	67	Control Panel.....	99
MSN/Pre-Dial No.....	67	Remote Keypads.....	100
Program Digi.....	68	Zone Expanders.....	100
Digi Options.....	71	Output Expanders.....	101
Area Accounts.....	71	Standards.....	101
UDL Options.....	72	Warranty.....	101
Radio/SMS Options.....	74	EN50131 Markings.....	101
Com Port Setup.....	76	Declaration of Conformity.....	102
Zone Alarm Reporting Codes.....	78	7. Quick Reference Guide	103
5.8 Setup Users	84	Log Off Engineer.....	103
Programming New Users.....	85	Zone Setup.....	103
User Types.....	85	Area Programming.....	104
User Functions and Options.....	86	Global Options.....	105
User Options 1.....	87	Keypad Setup.....	106
User Options 1.....	87	Expander Setup.....	106
User Config.....	88	System Outputs.....	106
User Time Lock.....	88	UDL/Digi Options.....	108
User Name Text.....	88	Setup Users.....	110
Door Control.....	88	Engineer Utils.....	111
Deleting Users.....	88		

1. System Overview

System Architecture

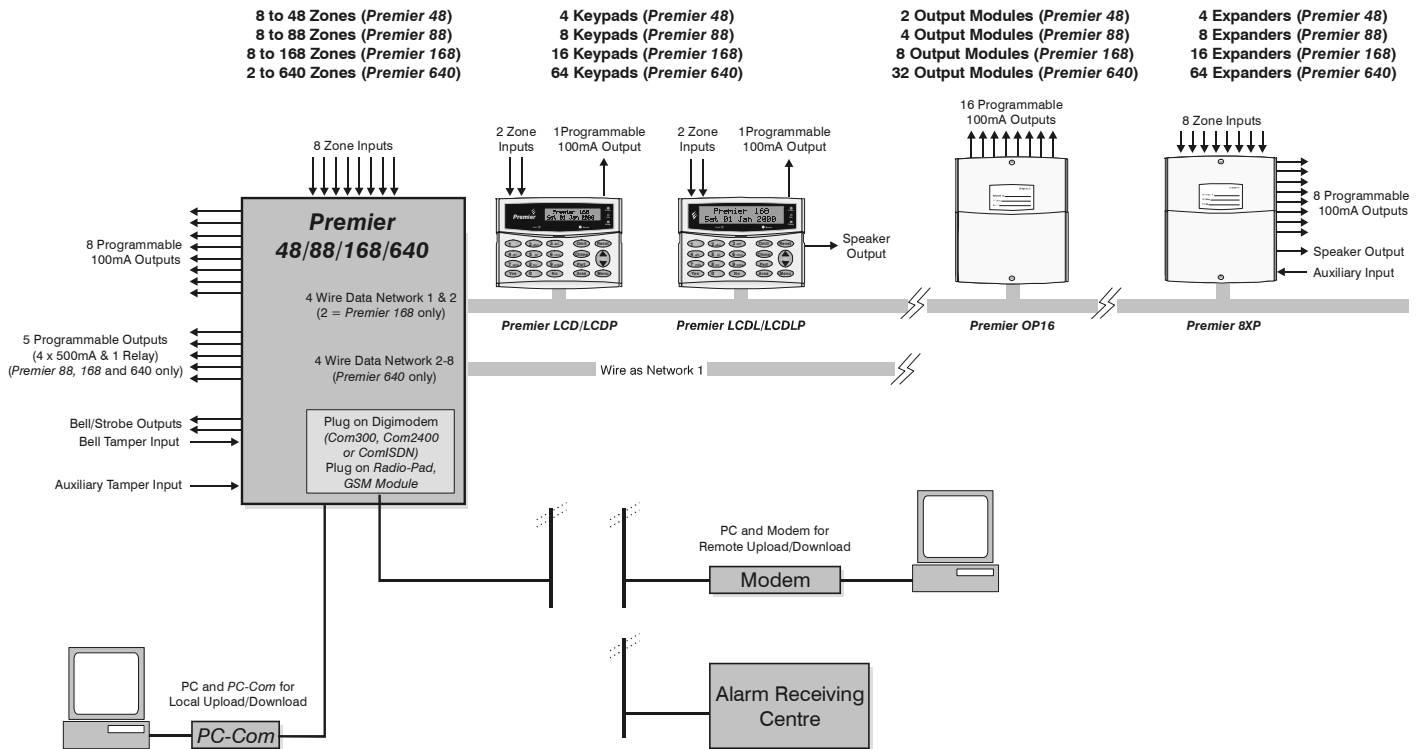

Control Panels

Premier 48

- 8 fully programmable Double Pole or End Of Line zones
- Expandable to 48 zones via keypads and zone expanders
- 1 x 4-wire data network (standard 7/0.2 alarm cable)
- Up to 4 keypads and 4 zone expanders
- Up to 2 output modules
- 4 independent areas each with 3 part arms
- 4 area arm suites
- 25 programmable User codes
- 500 Event Log (time & date stamped)
- 2 programmable panel outputs (2 x 1A)
- 1.5 Amp power supply

Premier 88

- 8 fully programmable Double Pole or End Of Line zones
- Expandable to 88 zones via keypads and zone expanders
- 1 x 4-wire data network (standard 7/0.2 alarm cable)
- Up to 8 keypads and 8 zone expanders
- Up to 4 output modules
- 8 independent areas each with 3 part arms
- 8 area arm suites
- 50 programmable User codes
- 1000 Event Log (time & date stamped)
- 5 programmable panel outputs (4 x 1A & 3A relay)
- 2.0 Amp power supply

Premier 168

- 8 fully programmable Double Pole or End Of Line zones
- Expandable to 168 zones via keypads and zone expanders
- 2 x 4-wire data network (standard 7/0.2 alarm cable)
- Up to 16 keypads and 16 zone expanders (8 per network)
- Up to 8 output modules (4 per network)
- 16 independent areas each with 3 part arms
- 16 area arm suites
- 100 programmable User codes
- 2000 Event Log (time & date stamped)
- 5 programmable panel outputs (4 x 1A & 3A relay)
- 2.0 Amp power supply

Premier 640

- Expandable to 640 zones via keypads and zone expanders
- 8 x 4-wire data network (standard 7/0.2 alarm cable)
- Up to 64 keypads and 64 zone expanders (8 per network)
- Up to 32 output modules (4 per network)
- 16 independent areas each with 3 part arms
- 100 programmable User codes
- 2500 Event Log (time & date stamped)
- 5 programmable panel outputs (4 x 1A & 3A relay)
- 2.0 Amp power supply

Premier 48, 88, 168 and 640

- 8 programmable digicom outputs (100mA each)
- 32 character zone text
- Facility for Plug-on Digimodem (*Com300/2400/ComISDN*)
- Facility for Plug-on Paknet *RP9 Radio-Pad*
- Facility for Plug-on *GSM Module*
- Facility for Plug-on *IP Module (ComIP/Chiron/WebWayOne)*
- Facility for a plug-on RedCARE/RM8 Relay Module
- *PC-Com*/printer port

Remote Keypads**Premier LCD**

- 32 character text display
- 2 fully programmable DP or EOL zones
- 1 fully programmable output (100mA -ve applied)
- Fully adjustable back-lighting, normally bright, dim or off, changing to bright during entry or following a key press
- Built in piezo sounder
- Programmable 'Info.' LED

Premier LCDL

ALL the features of the *Premier LCD* plus:

- Larger 32 character text display
- Speaker output

Premier LCDP

- *Premier LCD* with a built in Proximity Tag Reader

Premier LCDLP

- *Premier LCDL* with a built in Proximity Tag Reader

Premier RKP8/16Plus

- LED Arming keypad
- 2 fully programmable EOL zones
- CANNOT be used for Programming

Zone Expanders**Premier 4XP**

- 4 fully programmable DP or EOL zones
- 2 fully programmable outputs (100mA -ve applied each)
- Remotely wired

Premier 8XP

- 8 fully programmable DP or EOL zones
- 8 fully programmable outputs (100mA -ve applied each)
- Speaker output
- Programmable auxiliary input
- Remotely wired

Premier 60iXD

- 2 loops x 30 fully programmable iD zones
- iD biscuit technology
- Plug-on

"iD" is a registered trade mark of Chloride Safety System Limited.

Output Expanders**Premier OP16**

- 16 fully programmable outputs (100mA each)
- 1 fault output (100mA -ve applied)
- Can be connected to mimic panels to give zone indication
- Can be connected to relays and sounders

Premier RM8 Relay Module

- Plug-on relay card (RedCARE footprint)
- 8 separate inputs for stand alone operation
- 8 x 3Amp relay outputs (n/o, n/c, com)
- Output 'ON' LED indication

Communicators**Com300**

- Multi-protocol communicator supporting Fast Format, Contact ID, SIA Level II and EasyCom Pager protocols
- 300-baud modem for remote uploading and downloading using the *Wintex UDL* software and a PC
- For use with an analogue telephone line (REN = 1)

Com2400

- Multi-protocol communicator supporting Fast Format, Contact ID, SIA Level II and EasyCom Pager and SMS Messaging protocols
- 2400-baud modem for remote uploading and downloading using the *Wintex UDL* software and a PC
- Sends SMS text messages to mobile phones
- For use with an analogue telephone line (REN = 1)

ComISDN

- Multi-protocol communicator supporting Fast Format, Contact ID, SIA Level II and EasyCom Pager protocols
- 300-baud (analogue) or 19200-baud (digital) Modem for remote uploading and downloading using the *Wintex UDL* software and a PC
- For use with an ISDN telephone line

ComIP

- Multi-protocol communicator supporting Fast Format, Contact ID and SIA Level II protocols via TCP/IP
- High speed modem for remote uploading and downloading using the *Wintex UDL* software and a PC
- For use with ADSL/DSL/Broadband/WAN/LAN etc.

RP9 Radio-Pad

- Paknet radio communicator supporting Fast Format and Contact ID protocols
- 4800-baud modem for remote uploading and downloading using the *Wintex UDL* software and a PC

GSM Module

- Provides a GSM telephone path for *Premier* Digital Communicators
- Sends SMS text messages to mobile phones
- Arm, Disarm, Reset the alarm, turn outputs on and off, omit zones and send messages to the control panel using SMS text messages
- 9600-baud modem for remote uploading and downloading using the *Wintex UDL* software and a PC

Other Devices

PC-Com

- For connecting a PC to the control panel via an RS232 Serial port allowing local uploading and downloading using *Wintex UDL* software

USB-Com

- For connecting a PC to the control panel via a USB 1.0 or 2.0 port allowing local uploading and downloading using *Wintex UDL* software

UNI-Com

- For connecting a serial device i.e. PC modem or mobile phone to the control panel

PRINT-Com

- For connecting a serial printer to the control panel

RPD-Com

- For connecting a *RP9 Radio-Pad* to the control panel

GSM-Com

- For connecting a *GSM Module* to the control panel

2. Installation

Installation Sequence

Before attempting to install the alarm system, read this section. Once you have an overall understanding of the installation sequence, carefully work through each step.

1: Design the Layout

Make a rough sketch of the premises to get an idea of where the alarm detection devices, keypads, zone expanders etc. are to be located.

2: Mounting the Panel

The control panel should be mounted in a dry area close to an unswitched AC power source and the incoming telephone line (if using a communicator).



NOTE You must complete all wiring before connecting the battery or applying AC mains to the control panel.

3: Install the Keypads and Zone Expanders

Mount and connect the keypads, zone expanders and output modules to the control panel (see page 12 for wiring details).

4: Install the Alarm Detection Devices

Install the detection devices, PIR's, Contacts, PA Buttons etc. and connect them to the control panel (see page 19 for wiring details).

5: Install the External Sounder

Install the external sounder and connect to the control panel (see page 20 for wiring details).

6: Other Wiring

Complete all other wiring including speakers, telephone line and output connections etc. (see pages 20 - 21 for details).

7: Applying Power to the Control Panel

Once steps 1 to 6 are completed, power can be applied to the control panel.

When applying power for the first time, the factory default settings must be loaded (see page 26 for details). Power should always be connected in the following order:

- Connect the red battery lead to the positive terminal of the battery and then connect the black battery lead to the negative terminal



NOTE The panel will only become 'live' when the AC Mains is connected or the 'Battery Kick-start' button is pressed.

- Connect the AC mains

For a complete list of factory default settings, see page 29.

8: Programming the Control Panel

Please refer to section 5 for instruction on programming the control panel.

9: Testing the System

Test the system thoroughly to ensure that all features and functions operate as required (see page 89 for details).

Control Panel

Mounting

Mount the control panel on a flat, plumb wall using at least three screws of appropriate size.



NOTE It is essential to ensure that none of the fixing slots or cable entries are accessible after fixing.

Mains cabling must be secured (e.g. with a cable tie) to one of the anchor points provided.

Wiring the Control Panel

WARNING: ELECTRICITY CAN KILL

BEFORE connecting the control panel ALWAYS disconnect the supply at the consumer unit. If in ANY doubt consult a qualified electrician.



IMPORTANT SAFETY INFORMATION. HAZARDOUS VOLTAGES INSIDE, NO USER SERVICEABLE PARTS, NO USER ACCESS.



NOTE ONLY connect the mains supply to the mains terminal block, NEVER connect the mains supply directly to the PCB.

ALWAYS refer to National Wiring Regulations when conducting installation.

An appropriate and readily accessible disconnection device (e.g. an unswitched fused spur) MUST be provided as part of the installation.


The disconnection device must NOT be fitted in a flexible cord.

Where identification of the neutral in the mains supply is NOT possible a two-pole disconnection device MUST be used.


The building mains supply MUST incorporate appropriate short-circuit backup protection (e.g. a fuse or circuit breaker) of High Breaking Capacity (HBC, at least 1500A).

Use mains cable of adequate carrying capacity for the rated current (i.e. at least 0.75mm²).


Control Panel Layout

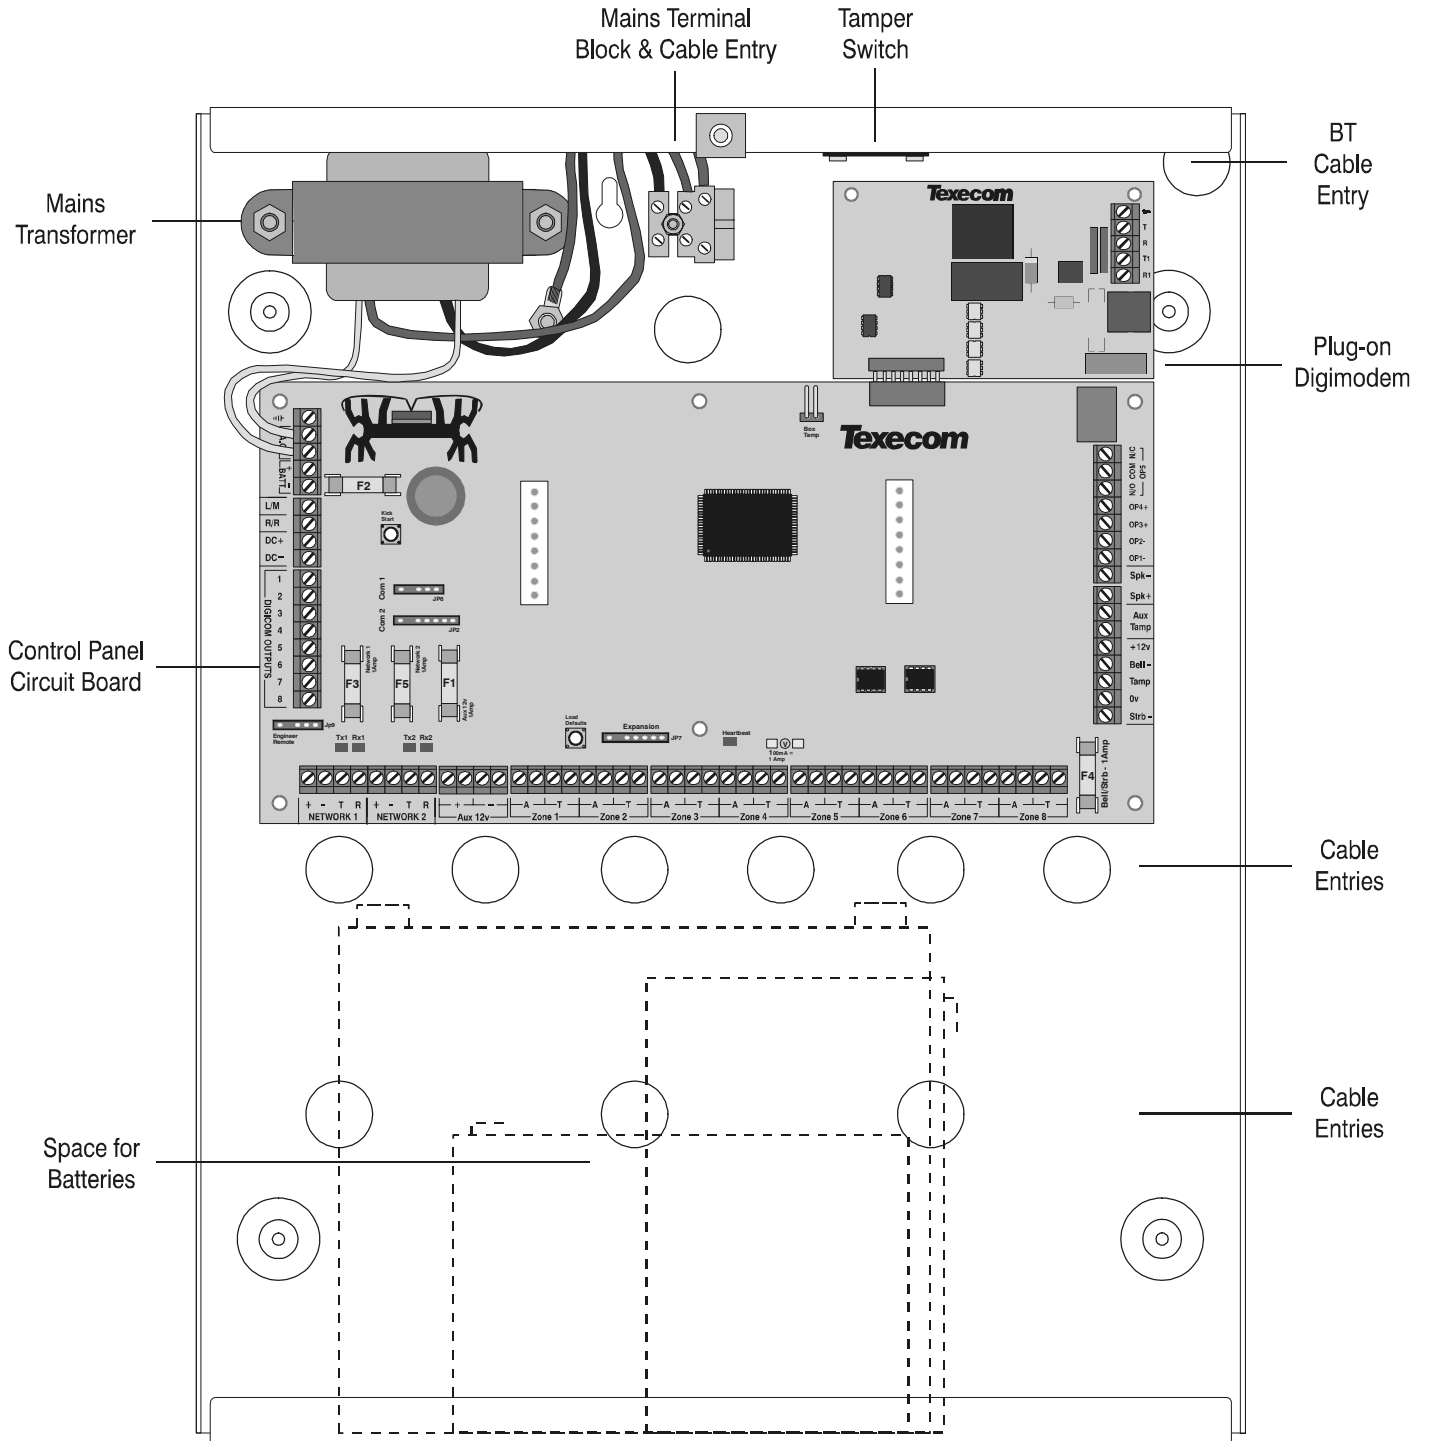

Control Panel PCB Layout

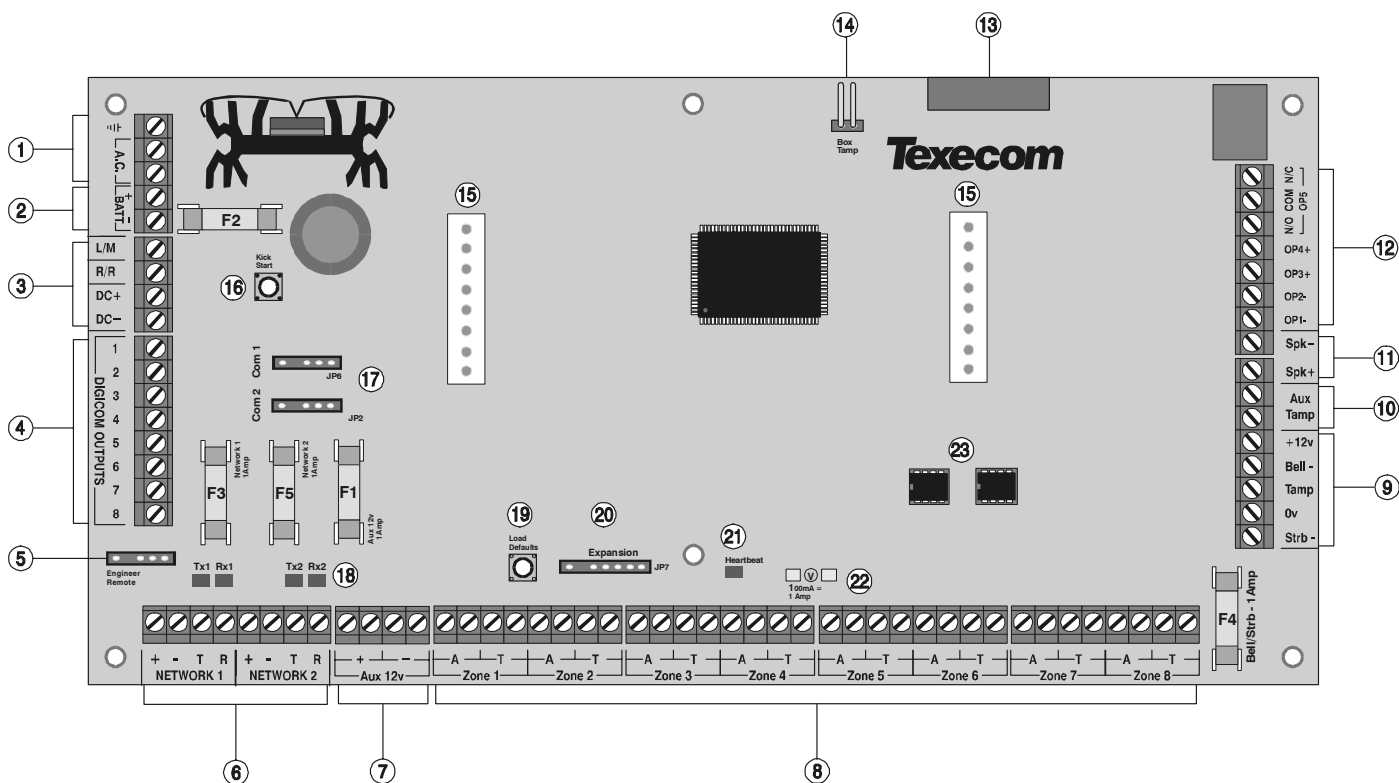

Premier 48, 88 and 168

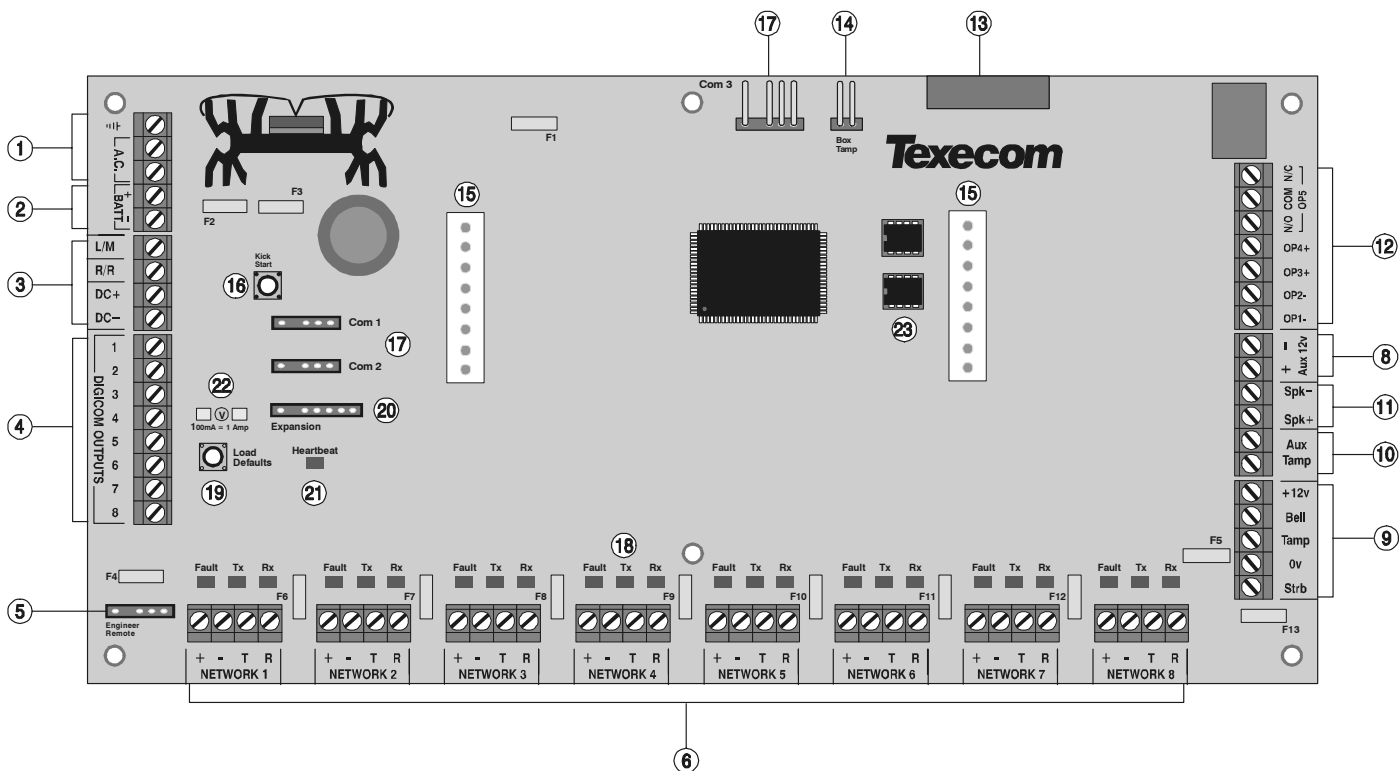

Premier 640

1: AC Input

Connected to the 16.5V transformer.

DO NOT CONNECT THE MAINS SUPPLY TO THE AC INPUT TERMINALS ON THE PCB.

2: Battery Connections

A 12V rechargeable battery must be connected to these terminals in order to provide continuous system operation in the event of an AC Mains failure (see page 11 for details).

3: Digicom Power & Inputs

These terminals provide unused power; remote reset and line fault inputs and are normally used for connecting a stand-alone communicator to the control panel (see page 21 for details).

4: Digicom Outputs

Outputs 1 to 8 are low current (100mA '-ve' applied) and would normally be used when connecting a stand-alone communicator to the control panel (see page 21 for details). Each output is fully programmable (see page 61 for details).

5: Engineers Keypad

A portable Engineers keypad can be plugged on here to allow easier access for programming and testing.



NOTE When using a keypad as an Engineers keypad, the address must be set to '10' (see page 14 for details). The keypad zones and lid tamper are not monitored.

6: Network Data Connections

Networks 1 & 2 provide connection for the keypads and zone expanders (Network 2, *Premier 168* only). The '+' and '-' terminals provide power whilst the 'T' transmits data and 'R' receives data (see page 12 for details).

7: Auxiliary 12V Power

These terminals are for connecting devices that require 12V power (protected by a 1A fuse).

8: Programmable Zones 1 - 8

These terminals provide the connections for the zones (see page 19 for wiring details). Each zone is fully programmable (see page 35 for details).

9: External Sounder Connections

These terminals are used for connecting to an external sounder unit (see page 20 for details).

10: Auxiliary Tamper Connections

These terminals can be used for monitoring the tamper loop of an auxiliary device (see page 19 for details).

11: Loudspeaker Connections

These terminals can be used for connecting up to one 16Ω or two 8Ω loudspeakers (see page 20 for details).

12: Panel Outputs

Outputs 1 & 2 are 500mA '-ve' applied, outputs 3 & 4 are 500mA '+ve' applied and output 5 is a clean contact relay (see page 21 for wiring details). These outputs are all fully programmable (see page 60 for details).



NOTE Panel outputs 3, 4 and 5 are only available on the *Premier 88, 168 and 640*.

13: Plug-on Communicator Connections

This socket provides connection for *Premier* plug-on communicator (see page 23 for details).

14: Box Tamper Connection

The box tamper micro switch is connected here. The micro switch provides tamper protection for the main control panel in case of unauthorised access. To disable the box tamper, remove the micro switch lead and fit a jumper link across the two pins.

15: Plug-on RedCARE/Dualcom Connections

These pins provide connections for a plug-on RedCARE, Dualcom, Digicom or *RM8 Relay module*. Each output is fully programmable (see page 61 for details).



NOTE When a device is plugged on to these pins, not all outputs may be available, please refer to the relevant documentation for details.

16: Battery Kick-start Button

When powering up the panel without AC Mains present, this button must be pressed in order to connect the battery.



NOTE If AC Mains is present this button does not need to be pressed.

17: Communication Ports

Com Port 1 is a serial communications port and can be used for connecting a PC running *Wintex* or any supported serial device to the control panel (see page 76 for details).

Com Port 2 is a serial communications port and can be used for connecting a PC running *Wintex* or any supported serial device to the control panel (see page 76 for details).

Com Port 3 is a serial communications port and can be used for connecting a PC running *Wintex* or any supported serial device to the control panel (see page 76 for details).

18: Network Data Indicators

The red LED indicates that data is flowing out of the control panel and normally flashes very quickly. The green LED indicates that data is flowing into the control panel and normally flashes slowly, the green LED flashes faster as more devices are connected (see page 12 for details).

19: Load Defaults Button

Press and hold this button whilst applying power to the control panel to load the factory default settings. Press and hold this button for 7 seconds with power already on the panel to restore just the Engineer code to the factory setting of **1** **2_{abc}** **3_{def}** **4_{ghi}**.



NOTE Loading the factory defaults can take up to 60 seconds to complete.

Loading defaults will only be possible if the NVM has not been locked (see page 49 for details).

For a complete list of factory defaults, see page 29.

20: Expansion

The Expansion Port can be used for connecting a *60XPiD* Zone Expander (see page 16 for details) or an AV Module (see page 24 for details).

21: Heartbeat LED/Power Light

Flashes steadily to indicate that the control panel is functioning correctly. If the light is ON or OFF all the time, then there could be a problem (see page 26 for details).

22: Current Reading Pads

To calculate the current draw of the control panel, measure the voltage across the two pads and multiply by 10 i.e. Reading = 34mV (x10) = 340mV = 340mA.

23: NVM 1 & 2

All system programming data and the event log is stored in one or two removable non-volatile memory devices.

F1 - F5: Protection Fuses (Premier 48, 88 and 168)

The following fuses are provided:

- F1 (1Amp) Auxiliary 12V Power fuse
- F2 (1.6 Amp) Battery fuse
- F3 (1 Amp) Network 1 fuse
- F4 (1 Amp) Bell/Strobe fuse
- F5 (1 Amp) Network 2 fuse (*Premier 168 only*)

F1 - F5: Protection Fuses (Premier 640)

The following electronic fuses are provided:

- F3 (1600 mA) Battery
- F4 (250mA) Speaker
- F5 (900mA) Network 1
- F6 (900mA) Bell/Strobe
- F7 (900mA) Network 2
- F8 (900mA) Network 3
- F9 (900mA) Network 4
- F10 (900mA) Network 5
- F11 (900mA) Network 6
- F12 (900mA) Network 7
- F13 (900mA) Network 8
- F14 (900mA) Auxiliary 12V

Power Supply Ratings

If installing to PD6662, the system standby times in the event of a mains power failure vary depending on the grade and how AC fail is signalled:

System Standby Times		
Grade 2	Grade 3 AC Fail signalled as AC Fail	Grade 3 AC Fail signalled as Fault
12 Hours	12 Hours	24 Hours

The "Rated Power" of the control panel will depend on the size of the standby battery, standby time and the installation grade:

7 Ah Standby Battery			
Max Power Available from control panel	Grade 2 – Rating	Grade 3 – Rating AC Fail signalled as AC Fail	Grade 3 – Rating AC Fail signalled as Fault
2 A	580mA	580mA	290mA
17 Ah Standby Battery			
Max Power Available from control panel	Grade 2 – Rating	Grade 3 – Rating AC Fail signalled as AC Fail	Grade 3 – Rating AC Fail signalled as Fault
2 A	1.25A	1.25A	750mA

When calculating the current consumption of the system you must include the current taken by the control panel and all the devices that it powers. If the total current exceeds the "Rated Output" for the grade you are installing to then an additional power supply is required.


Connecting AC Mains

The AC Mains supply is connected to a 3 way 'Euro Type' fused terminal block, which is fitted with a 125mA or 500mA fuse.



All other wiring MUST be carried out before AC mains is connected to the control panel.

After connecting the AC Mains, fit the mains cover, this can be found in the spares bag.

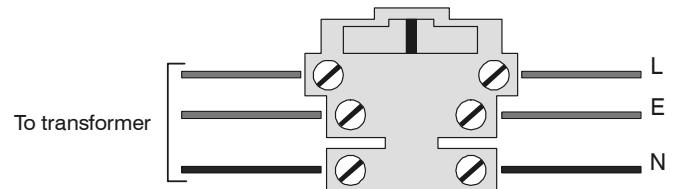**Connecting Batteries**

If installing to PD6662: 2004 then only One 12V 7Ah battery or 12V 17Ah battery can be fitted inside the control panel to provide continued operation in the event of an AC mains failure, otherwise, two 12V 7Ah batteries can be connected.



All other wiring MUST be carried out before the battery is connected to the control panel.

 
Connect the red battery lead to the positive terminal of the battery and then connect the black battery lead to the negative terminal.



The panel will only become 'live' when the AC Mains is connected or the 'Battery Kick-start' button is pressed.




OR



OR

If not installing to PD6662: 2004

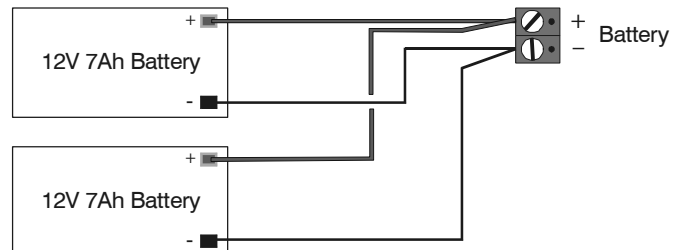

Connecting Devices to the Network

Before connecting keypads, zone expanders and output modules, isolate ALL power from the control panel (AC Mains & Battery). Do not continue if there is still power present on the control panel.



Connecting devices with power still present on the control panel may damage the device or control panel and invalidate any warranty.

Keypads, zone expanders and output modules are all connected to the same network terminals located at the bottom left hand corner of the control panel and may be connected serially (daisy chain), in parallel (star) or any combination of the two (see Figure 1, page 13 for details).



No more than 8 zone expanders, 8 keypads and 4 output modules can be connected to each network.

The maximum number of devices that can be connected in total will depend on the control panel fitted.

Whenever new devices are connected to the networks, they must be confirmed onto the system using the 'Confirm Devices' menu option (see page 94 for details).

Wiring the Network

The networks are made up of four terminals incorporating power and data. To ensure correct operation, all four terminals on the device must be connected to the corresponding terminals on the control panel, or previous device (see Figure 1, page 13 for details). The table below shows each terminal and its description:

Terminal	Description
+	+12V Supply
-	0V Supply
T	Transmit Data
R	Receive Data

Devices can be connected using 4-core cable. However, it is recommended that 6 or 8-core cable is used as the spare cores can be used to 'Double Up' on the power connections if needed.



Standard 7/0.2 alarm cable can be used for most installations. However, under certain conditions it may be necessary to use screened cable.

Cable Distances

The maximum recommended distance for devices when using standard 7/0.2 alarm cable is:

- 250m for each branch when using the star (parallel) configuration
- When using a daisy chain (series) configuration the maximum distance will depend on the number of devices connected on the chain. The more devices that are connected, the shorter the distance to the last device (this is due to voltage drop in the cable)

Whichever method of wiring configuration is used, ensure that the voltage between the '+' and '-' terminals at each device is no lower than 10.0V when the system is running on the standby battery.

The table below shows maximum cable runs when one keypad or expander is installed using standard 7/0.2 alarm cable with various loads:

Configuration	Max. Cable Run
1. Keypad + 2 PIR's @15mA	250m
2. Expander + 2 PIR's @15mA	250m
3. Expander + 8 PIR's @15mA	100m
4. As No. 3 + 16Ω Speaker	30m

Distances of up to 1km can be achieved between the control panel and a device. However, a power supply must be installed close to the device to power it locally, this will help to overcome voltage drop caused by the long cable run.

Overcoming Voltage Drop

There are several ways to overcome voltage drop:

- Use thicker lower resistance cable. Standard 7/0.2 alarm cable has a resistance of 8Ω per 100m
- Double up on the power connections – this will require using a 6 or 8-core cable rather than a 4-core cable
- Install a power supply to power the device locally, remember to common the two negative connections

Installing a Power Supply

When a power supply is installed, the 0V connections on the power supply must be connected through to 0V on the control panel and the +12V connection between the control panel and the device must be disconnected (see Figure 2, page 13 for details).

Network Diagnostics

Each network has two LED's to indicate data flow. The red LED indicates data flowing out of the 'T' terminal and the green LED indicates data flowing into the 'R' terminal. The table below shows each LED status and its meaning:

LED Status	'T' Wire OUT	'T' Wire IN
Red LED Flashing	Normal	Normal
Red LED On	Panel Fault	Cable Short
Red LED Off	Panel Fault	Panel Fault

LED Status	'R' Wire OUT	'R' Wire IN
Green LED Flashing	Panel Fault	Normal
Green LED On	Panel Fault	Cable Short
Green LED Off	Normal	No Data From Devices



The LED's are provided as an aid for fault finding and therefore should not be completely relied upon to indicate that there is a fault.

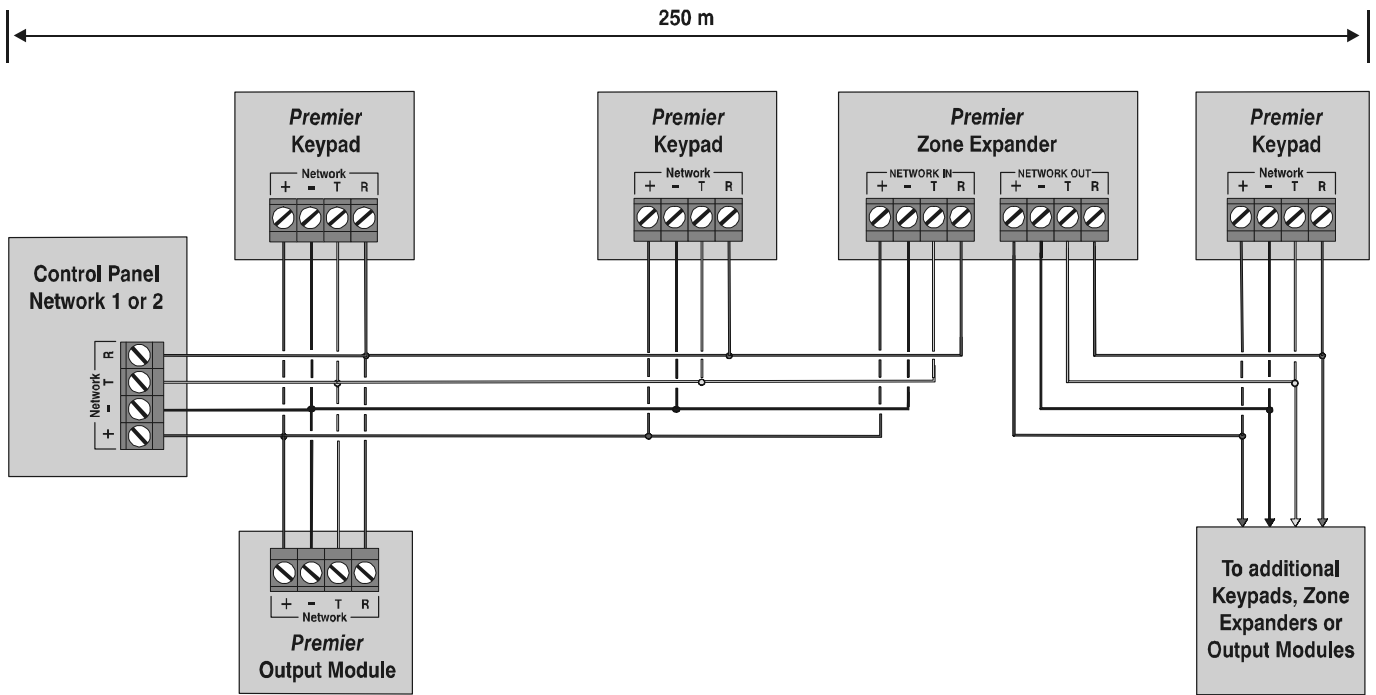


Figure 1: Network Connections (250m without additional power supply).


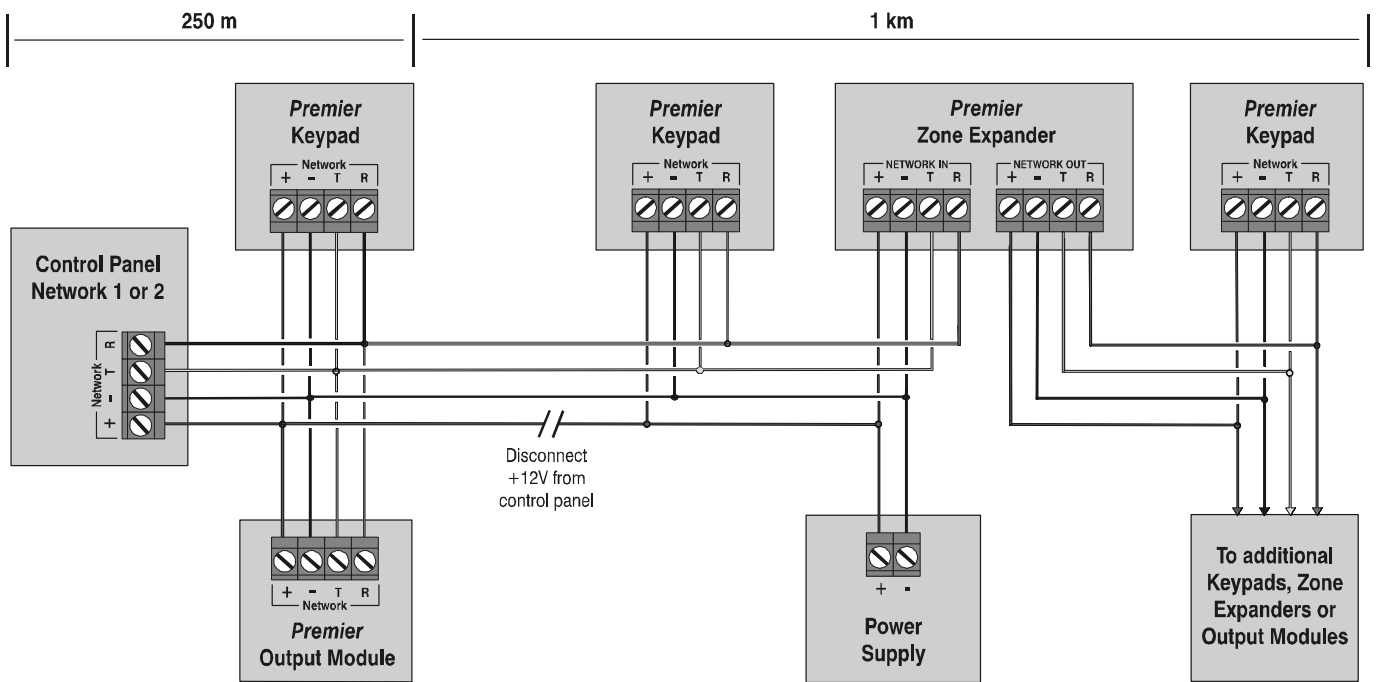


Figure 2: Network Connections (1km with additional power supply).

Remote Keypads

Keypad Layout

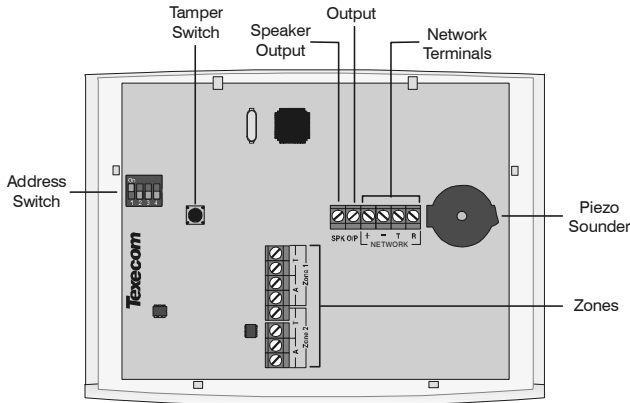

Connecting Keypads

Keypads are connected to the network terminals located at the bottom left hand corner of the control panel (see pages 12 & 13 for details).

Keypad Addressing

Each keypad must be assigned a different address using the DIL switches located on the left hand side of the PCB. The table below shows the keypad addressing:

Address	DIL 1	DIL 2	DIL 3	DIL 4	
1	On or off	Off	Off	Off	
2	Off	On	Off	Off	
3	Off	Off	On	Off	
4	Off	Off	Off	On	
5 *	On	Off	Off	On	
6 *	Off	On	Off	On	
7 *	Off	Off	On	On	
8 *	On	Off	On	On	
Engineers	On	On	On	On	

* Premier 88, 168 and 640 only

NOTE Never set two keypads on the same network to the same address.

When using a keypad as an Engineer's keypad, the DIL switches must all be 'On'.

Keypad Zones

The keypad has two programmable zones (see page 19 for details). Each zone is also fully programmable (see page 35 for details).

Zone Numbering

The table below shows the zone allocation when the keypads are installed:

Address	Zones (Network 1)	Zones (Network 2)
1	Unmapped	Unmapped
2	Unmapped	Unmapped
3	Unmapped	Unmapped
4	Unmapped	Unmapped
5 *	Unmapped	Unmapped
6 *	Unmapped	Unmapped
7 *	Unmapped	Unmapped
8 *	Unmapped	Unmapped

* Premier 88, 168 and 640 only

NOTE The zones inside the keypads are not seen by the system until they have been mapped to a zone number (see page 57 for details).

For Premier 640 see page 18 for details

Keypad Output

The remote keypad has one programmable output, which can be used to drive auxiliary devices such as LED's, sounders or relays etc. Wire as per Panel Outputs shown on page 21 (see page 60 for details). The electrical characteristics for the output are shown below:

Output	Max Current	Type
1	100mA	Switched -ve

Keypad Speaker Output (LCDL/LCDLP Only)

The Premier LCDL and Premier LCDLP keypads have an output that can be used for driving up to one 16Ω or two 8Ω loudspeakers (see page 20 for details).

NOTE The speaker volume is also fully adjustable (see page 57 for details).

Programmable 'Info.' LED

The 'Info.' LED on the front of the keypad can be programmed to mimic the keypad output or show the armed status of an area (see page 57 for details).

Adjustable Backlighting

To adjust the keypad backlighting press the **YES** key for 5 seconds, then with the **YES** key still pressed use to increase or decrease the backlighting until the required brightness is achieved, then release both keys.


NOTE The backlight can only be adjusted when the keypad is not in a menu.

Keypad Lid Tamper

The lid tamper of each keypad can be disabled if required using the relevant keypad option in the Keypad Setup menu (see page 57 for details).

8XP Zone Expander

Expander Layout

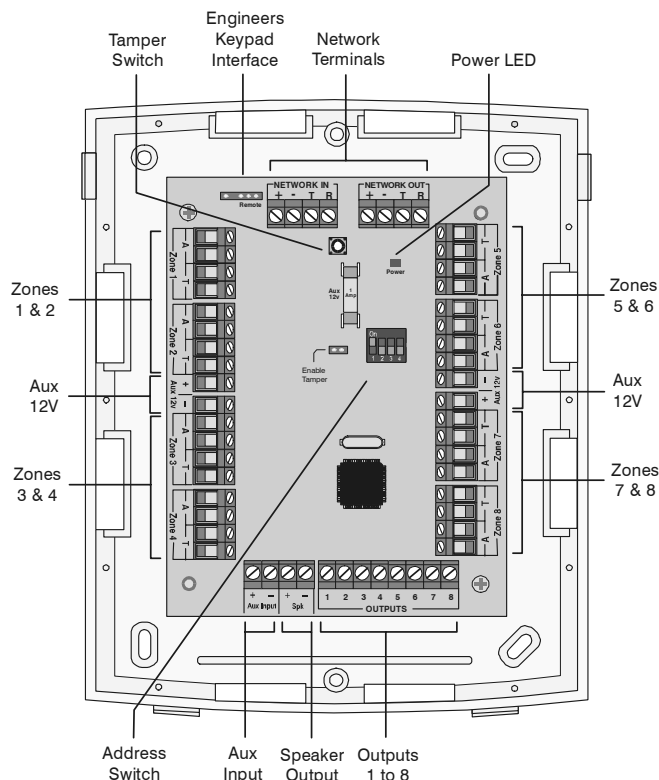

Connecting Expanders

Expanders are connected to the network terminals located at the bottom left hand corner of the control panel (see pages 12 & 13 for details).

Expander Addressing

Each Expander must be assigned a different address using the DIL switches located in the centre of the PCB. The table below shows the expander addressing:

Address	DIL 1	DIL 2	DIL 3	DIL 4	
1	On or off	Off	Off	Off	
2	Off	On	Off	Off	
3	Off	Off	On	Off	
4	Off	Off	Off	On	
5 *	On	Off	Off	On	
6 *	Off	On	Off	On	
7 *	Off	Off	On	On	
8 *	On	Off	On	On	
Disabled	On	On	On	On	

* Premier 88, 168 and 640 only

NOTE Never set two expanders on the same network to the same address.

Expander Zones

The expander has eight programmable zones (see page 19 for wiring details). Each zone is also fully programmable (see page 35 for details).

Zone Numbering

The table below shows the zone allocation when the expanders are installed:

Address	Zones (Network 1)	Zones (Network 2)
1	9 - 16	73 - 80
2	17 - 24	81 - 88
3	25 - 32	89 - 96
4	33 - 40	97 - 104
5 *	41 - 48	105 - 112
6 *	49 - 56	113 - 120
7 *	57 - 64	121 - 128
8 *	65 - 72	129 - 136

* Premier 88, 168 and 640 only

NOTE Network 2 can only be used on the Premier 168.

For Premier 640 see page 18 for details

Expander Auxiliary Input

The expander has one programmable input. This auxiliary input can be used to monitor auxiliary devices such as tamper loops etc. Wire as per Aux Tamper shown on page 20 (see page 59 for details). The system will respond as follows:

Input Status	System Response
0V Applied	Input Secure
0V Removed	Input Active
EOL	Various *

* For wiring details, see page 22.

NOTE For further details on how the input status affects the system please refer to page 59.

Expander Outputs

The zone expander has eight programmable outputs, which can be used to drive auxiliary devices such as LED's, sounders or relays etc. Wire as per Panel Outputs shown on page 21 (see page 60 for details). The electrical characteristics for the outputs are shown below:

Outputs	Max Current	Type
1 to 8	100mA	Switched -ve

Expander Speaker Output

The expander has an output that can be used for driving up to one 16Ω or two 8Ω loudspeakers (see page 20 for details).

Expander Lid Tamper

The lid tamper of each expander can be disabled if required by fitting a jumper link across the centre and right hand pins of the 'Enable Tamper' pins (JP2) leaving the left hand pin free. These pins are located to the left of the address DIL switch just beneath the fuse.

60iXD Zone Expander

The 60iXD expander provides the following facilities:

- Two iD loops each supporting up to 30 biscuits
- Fused 12V output for powering detectors
- Engineer's keypad port for local iD diagnostics

NOTE The 60iXD expander module is only supported on Premier 640 control panels from version 1.0 onwards, Premier 88/168 control panels from version 5.0 onwards and Premier 48 from version 2.0 onwards. The Premier 48 can only support a maximum of 48 zones/biscuits.


Installation

Before connecting the 60iXD expander module, isolate ALL power from the control panel (AC mains and battery), do not continue if there is still power present on the control panel.

1. Connect the iD expander to the control panel, see 60iXD installation manual (INS261) for details.
2. Connect the iD devices to the expander module, see "iD Connections".
3. Reapply power to the control panel and program the necessary options on the panel see 60iXD installation manual (INS261) for details.

iD Connections

Each iD biscuit is connected across a two-wire detector loop. Apart from observing the correct polarity, any wiring configuration can be used, as shown in the diagram below:

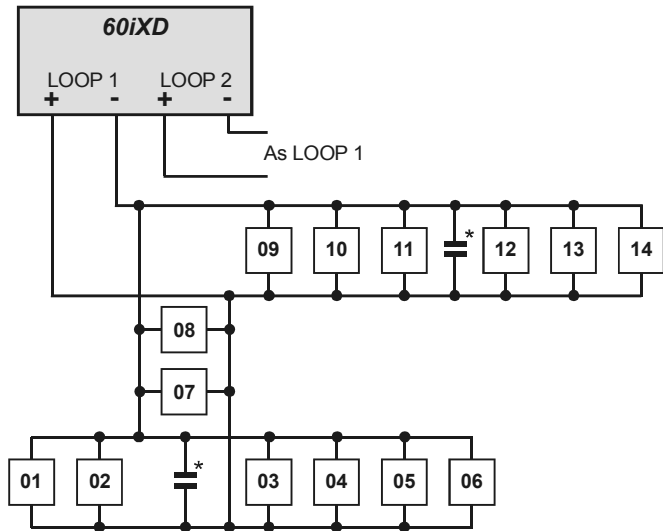

* The 60iXD expander module is supplied with 4 off 10nF capacitors in the spares pack. It is recommended that you connect a 10nF capacitor approximately at the half way point of each iD spur. It is especially important to do this on iD spurs that are less than 30 metres.

Cabling Considerations

The iD loop can be wired using standard 4-core alarm cable, this allows 2 cores to be used for the iD biscuit and 2 cores for supplying 12V power for PIR's etc.

The number of biscuits that can be connected per cable run is determined by the impedance of the cable used. Standard 4-core alarm cable (7/0.2mm) has a resistance of approximately 8 Ohms per 100 metres. The following table shows the maximum number of biscuits that can be connected at the end of a single cable run using standard 4-core alarm cable:

Cable Length	Maximum Number of Biscuits
100m	30
200m	15
400m	7
800m	3

If a different type of cable is used, the distances should be re-calculated. e.g., if 7/0.4mm cable is used, a single run of 200m would support 30 devices on the end as the resistance of the cable is halved.


When installing the iD loop it is usually more practical to run several cables from the expander module to the different areas of protection. This effectively reduces any distance problems and makes fault finding much easier.

To reduce the risk of induced interference and wherever possible, cables should not be positioned along side mains power, telephone or other data transmission cables, or run within the same ducting or trunking as any other cables.

The wiring for the system's internal sounders (loudspeakers) should not be connected in the same multi-core as the iD loop.


Biscuit Connections

Each iD biscuit is identified by its own number 01 to 30 and contains its own internal sensor that is continuously monitored by the expander module. The diagram below shows the connections to the biscuit for monitoring both tamper and alarm contacts.

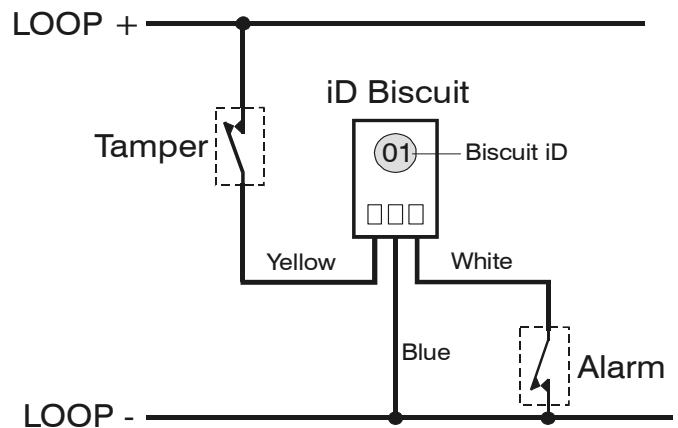

When the tamper switch is opened, the iD biscuit is taken offline and a tamper condition is generated by the control panel. If the alarm switch is opened the biscuit's internal sensor changes state and the control panel will see this as an active condition and will respond as appropriate.


The diagram below shows the typical wiring of a biscuit to a standard PIR.

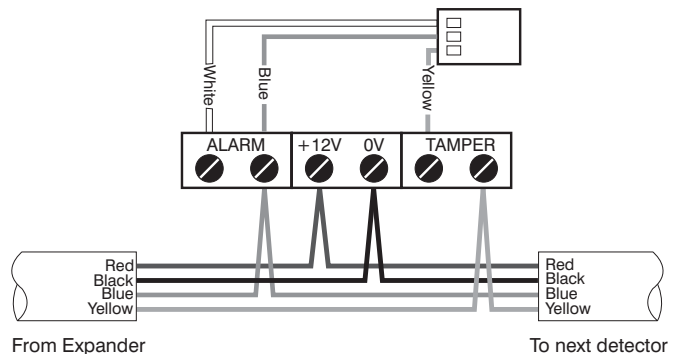

"iD" is a registered trade mark of Chloride Safety System Limited.

OP16 Output Expander

Output Module Layout

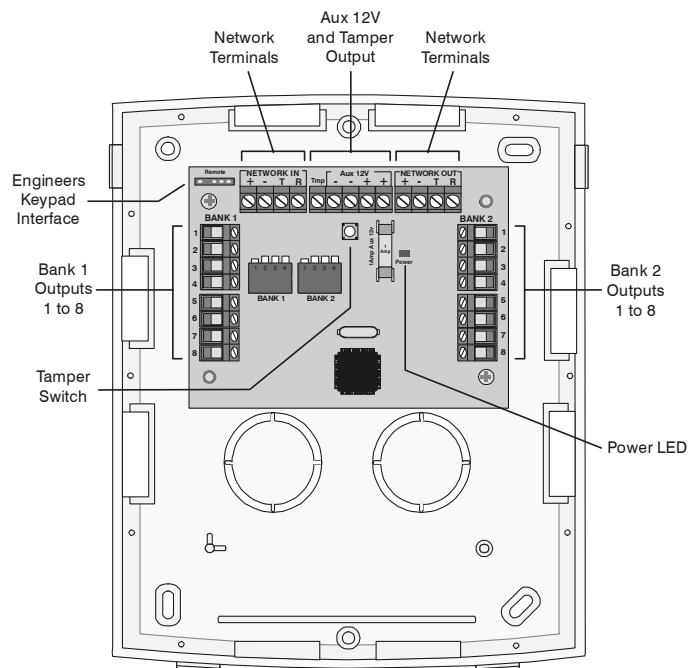

Connecting Output Modules

Output modules are connected to the network terminals located at the bottom left hand corner of the control panel (see pages 12 & 13 for details).

Output Module Addressing

Each output module must be assigned a different address using the DIL switches located in the centre of the PCB.

The table below shows the expander addressing:

Address	DIL 1	DIL 2	DIL 3	DIL 4	
1	On or off	Off	Off	Off	
2	Off	On	Off	Off	
3*	Off	Off	On	Off	
4*	Off	Off	Off	On	
5 **	On	Off	Off	On	
6 **	Off	On	Off	On	
7 **	Off	Off	On	On	
8 **	On	Off	On	On	
Disabled	On	On	On	On	

* Premier 88, 168 and 640 only

** Premier 168 and 640 only



In order for an output module to mimic zone expander outputs, the output module must be addressed the same as the zone expander that it is mimicking.

Any combination of addresses can be used on each output module i.e. Bank 1 can be addressed to mimic expander 3 and Bank 2 can be addressed to mimic expander 8.

Bank 1 switch sets the address of the device that Bank 1 outputs 1 to 8 will mimic.

Bank 2 switch sets the address of the device that Bank 2 outputs 1 to 8 will mimic.

Output Module Numbering

The table below shows the output allocation when the output modules are installed:

Address	Outputs (Network 1)	Outputs (Network 2) **
1	Expander 1, 1 - 8	Expander 1, 1 - 8
2	Expander 2, 1 - 8	Expander 2, 1 - 8
3 *	Expander 3, 1 - 8	Expander 3, 1 - 8
4 *	Expander 4, 1 - 8	Expander 4, 1 - 8
5 **	Expander 5, 1 - 8	Expander 5, 1 - 8
6 **	Expander 6, 1 - 8	Expander 6, 1 - 8
7 **	Expander 7, 1 - 8	Expander 7, 1 - 8
8 **	Expander 8, 1 - 8	Expander 8, 1 - 8

* Premier 88, 168 and 640 only

** Premier 168 and 640 only



Network 2 can only be used on the Premier 168.

For Premier 640 see page 18 for details

Outputs

The output module has 16 programmable outputs, which can be used to drive auxiliary devices such as LED's, sounders or relays etc. Wire as per Panel Outputs shown on page 21 (see page 60 for details). The electrical characteristics for the outputs are shown below:

Bank	Outputs	Max Current	Type
1	1 to 8	100mA	Switched -ve
2	1 to 8	100mA	Switched -ve

Tamper Output

The tamper switch on the output module is connected to the tamper output at the top of the module. If monitoring of the lid tamper is required, this output must be connected to a suitable input on the control panel or zone expander.

Zone and Output Numbering

Premier 48/88/168

Expander Zones

Address	Zones Network 1	Zones Network 2
1	9 - 16	73 - 80
2	17 - 24	81 - 88
3	25 - 32	89 - 96
4	33 - 40	97 - 104
5 *	41 - 48	105 - 112
6 *	49 - 56	113 - 120
7 *	57 - 64	121 - 128
8 *	65 - 72	129 - 136

* Premier 88 and 168 only

Keypad Zones

Address	Zones Network 1	Zones Network 2
1	Unmapped	Unmapped
2	Unmapped	Unmapped
3	Unmapped	Unmapped
4	Unmapped	Unmapped
5 *	Unmapped	Unmapped
6 *	Unmapped	Unmapped
7 *	Unmapped	Unmapped
8 *	Unmapped	Unmapped

* Premier 88 and 168 only

Premier 640

Expander Zones

Address	Zones Network 1	Zones Network 2	Zones Network 3	Zones Network 4	Zones Network 5	Zones Network 6	Zones Network 7	Zones Network 8
1	1 - 8	65 - 72	129 - 136	193 - 200	257 - 264	321 - 328	385 - 392	449 - 456
2	9 - 16	73 - 80	137 - 144	201 - 208	265 - 272	329 - 336	393 - 400	457 - 464
3	17 - 24	81 - 88	145 - 152	209 - 216	273 - 280	337 - 344	401 - 408	465 - 472
4	25 - 32	89 - 96	153 - 160	217 - 224	281 - 288	345 - 352	409 - 416	473 - 480
5	33 - 40	97 - 104	161 - 168	225 - 232	289 - 296	353 - 360	417 - 424	481 - 488
6	41 - 48	105 - 112	169 - 176	233 - 240	297 - 304	361 - 368	425 - 432	489 - 496
7	49 - 56	113 - 120	177 - 184	241 - 248	305 - 312	369 - 376	433 - 440	497 - 504
8	57 - 64	121 - 128	185 - 192	249 - 256	313 - 320	377 - 384	441 - 448	505 - 512

Keypad Zones

Address	Zones Network 1	Zones Network 2	Zones Network 3	Zones Network 4	Zones Network 5	Zones Network 6	Zones Network 7	Zones Network 8
1	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped
2	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped
3	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped
4	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped
5	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped
6	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped
7	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped
8	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped	Unmapped

Expander/OP16 Outputs

Address	Outputs Network 1	Outputs Network 2	Outputs Network 3	Outputs Network 4	Outputs Network 5	Outputs Network 6	Outputs Network 7	Outputs Network 8
1	Exp. 1, 1-8	Exp. 1, 1-8	Exp. 1, 1-8	Exp. 1, 1-8	Exp. 1, 1-8	Exp. 1, 1-8	Exp. 1, 1-8	Exp. 1, 1-8
2	Exp. 2, 1-8	Exp. 2, 1-8	Exp. 2, 1-8	Exp. 2, 1-8	Exp. 2, 1-8	Exp. 2, 1-8	Exp. 2, 1-8	Exp. 2, 1-8
3	Exp. 3, 1-8	Exp. 3, 1-8	Exp. 3, 1-8	Exp. 3, 1-8	Exp. 3, 1-8	Exp. 3, 1-8	Exp. 3, 1-8	Exp. 3, 1-8
4	Exp. 4, 1-8	Exp. 4, 1-8	Exp. 4, 1-8	Exp. 4, 1-8	Exp. 4, 1-8	Exp. 4, 1-8	Exp. 4, 1-8	Exp. 4, 1-8
5	Exp. 5, 1-8	Exp. 5, 1-8	Exp. 5, 1-8	Exp. 5, 1-8	Exp. 5, 1-8	Exp. 5, 1-8	Exp. 5, 1-8	Exp. 5, 1-8
6	Exp. 6, 1-8	Exp. 6, 1-8	Exp. 6, 1-8	Exp. 6, 1-8	Exp. 6, 1-8	Exp. 6, 1-8	Exp. 6, 1-8	Exp. 6, 1-8
7	Exp. 7, 1-8	Exp. 7, 1-8	Exp. 7, 1-8	Exp. 7, 1-8	Exp. 7, 1-8	Exp. 7, 1-8	Exp. 7, 1-8	Exp. 7, 1-8
8	Exp. 8, 1-8	Exp. 8, 1-8	Exp. 8, 1-8	Exp. 8, 1-8	Exp. 8, 1-8	Exp. 8, 1-8	Exp. 8, 1-8	Exp. 8, 1-8

Zone Connections


Any zones that are not being used must be linked out or programmed as 'Not Used' (see page 35 for details).

When using End Of Line wiring, ensure that no more than 5 detectors are connected to each zone.

A zone short can be programmed for 'Active' or 'Tamper' response (see page 50 for details).

End Of Line Normal

Use this wiring configuration when connecting normally closed or normally open detection devices to the zone using 2-Wires.

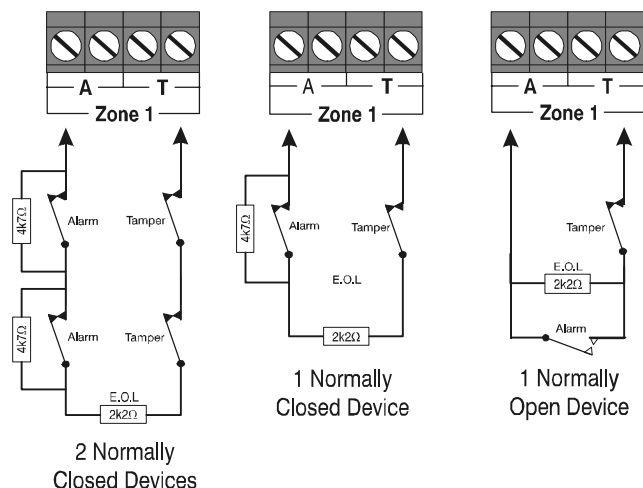

When Configuration Option 21 (see page 50 for details) is programmed as 'Short = Tamper' the system will respond as follows:

Zone Status	System Response
0 - 2k	Zone Tamper
2k1 - 4k6 (EOL)	Zone Secure
4k7 - 20k	Zone Active
21k+	Zone Tamper



When using this configuration, no more than 3 detectors can be connected to each zone.

When Configuration Option 21 (see page 50 for details) is programmed as 'Short = Active' the system will respond as follows:

Zone Status	System Response
0 - 2k	Zone Active
2k1 - 4k6 (EOL)	Zone Secure
4k7 - 30k	Zone Active
31k+	Zone Tamper




When using this configuration, no more than 5 detectors can be connected to each zone.

For details on testing zones, see page 92.

End Of Line with Anti-Masking

Use this wiring configuration when connecting normally closed detection devices to the zone using 2-Wires.

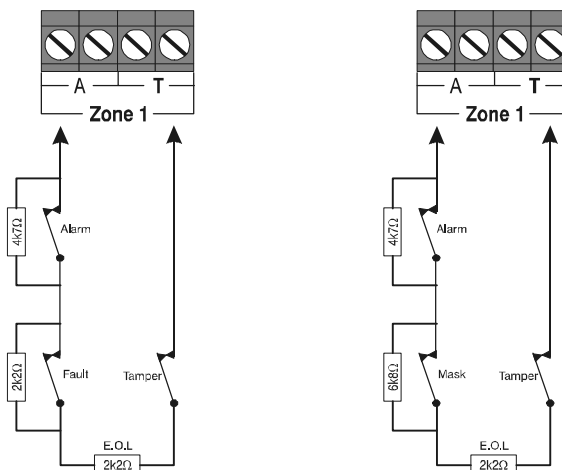

1 Normally Closed Device with Fault and Mask (Mask = Fault + Alarm)

1 Normally Closed Device with Mask Only (Mask = Mask Only)

When Configuration Option 21 (see page 50 for details) is programmed as 'Short = Tamper' the system will respond as follows:

Zone Status	System Response
0 - 1k	S/C Zone Tamper
1k1 - 4k0 (EOL)	Zone Secure
4k1 - 5k6	Zone Fault
5k7 - 8k	Zone Active
8k1 - 20k	Zone Mask
21k+	Zone Tamper

When Configuration Option 21 (see page 50 for details) is programmed as 'Short = Active' the system will respond as follows:

Zone Status	System Response
0 - 1k	S/C Zone Active
1k1 - 4k0 (EOL)	Zone Secure
4k1 - 5k6	Zone Fault
5k7 - 8k	Zone Active
8k1 - 20k	Zone Mask
31k+	Zone Tamper




When using either of these configurations, no more than one detector can be connected to each zone.

This configuration is only applicable if the Mask attribute on the zone is enabled, see page 38 for details on programming zones for anti-masking.

For details on testing zones, see page 92.

Double Pole

Use this wiring configuration when connecting normally closed or normally open detection devices to the zone using 4-Wires.

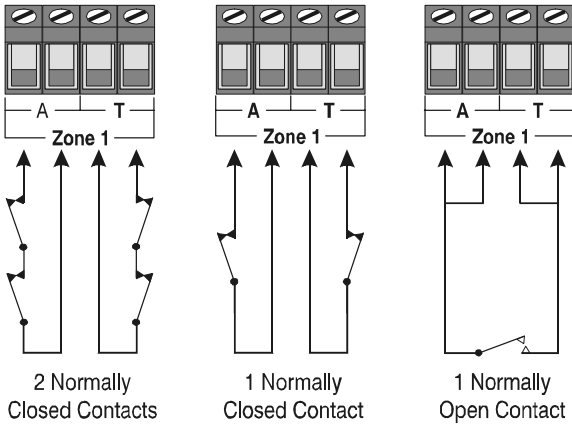

When using Double Pole wiring, the system will respond as follows:

Zone Status	System Response
'A' Closed	Zone Secure
'A' Open	Zone Active
'T' Closed	Tamper Secure
'T' Open	Tamper Active
Short Circuit *	Zone Active or Tamper


* Can be programmed for 'Active' or 'Tamper' response (see page 50 for details).

NOTE When using this configuration, no more than 10 detectors can be connected to each zone.

When wiring device as normally open contacts, ensure that system Config. option 21 is set to 'Zone Short = Active' (see page 50 for details).

Auxiliary Tamper Connections


The Auxiliary Tamper terminals allow the control panel to monitor the tamper loops of external devices such as power supplies etc.

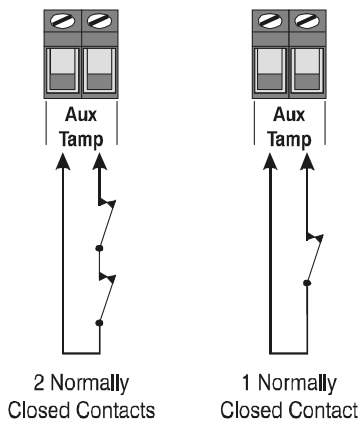

NOTE If the 'Auxiliary Tamper' terminals are not being used they must be linked out.

Speaker Connections

This output can be used for driving up to one 16Ω or two 8Ω loudspeakers as shown below:

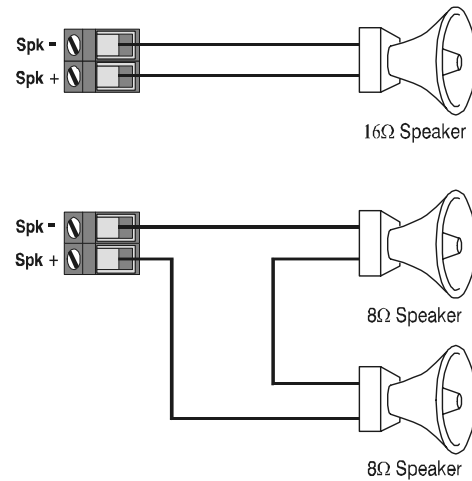

NOTE For details on testing Speaker outputs, see page 92.

External Sounder Connections

The following terminals have been provided for connection to an external sounder:


(A) +12V
12V supply (protected by a 1A fuse F4). Normally connected to '+12V' on the sounder.

(B) Bell -
Sounder output, switches to 0V in alarm (SAB) and is rated at 500mA. Normally connected to Trigger -ve on the sounder. This output can also be programmed for SCB operation (see page 48 for details).

(C) Tamp
Negative tamper return. Normally connected to 'Tamper Out' on the sounder. If this terminal is not being used, it must be connected to '0V'.

(D) 0V
0V supply. Normally connected to '0V' on the sounder.

(S) Strb -
Strobe output, switches to 0V in alarm and is rated at 500mA. Normally connected to strobe -ve on the sounder (where applicable, connect the strobe +ve to +12V).

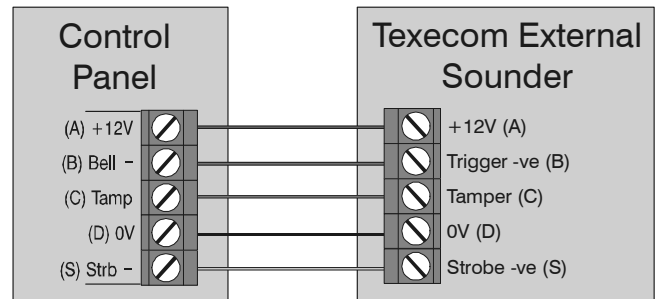

NOTE For details on testing the 'Bell' outputs, see page 92

Panel Outputs 1 - 5

The control panel has five programmable outputs, which can be used to drive auxiliary devices such as LED's, sounders or relays etc. (see page 60 for details). The table below shows the electrical characteristics for each output:




No	Max Current	Type
1	1A	Switched -ve
2	1A	Switched -ve
3 *	1A	Switched +ve
4 *	1A	Switched +ve
5 *	3A	Relay

NOTE * Premier 88, 168 and 640 only




Wiring Outputs

The diagram below shows some typical wiring examples:

-ve Applied Outputs

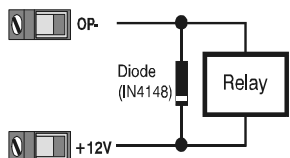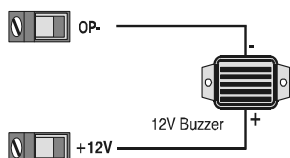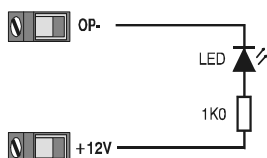

+ve Applied Outputs

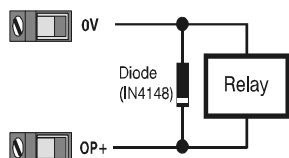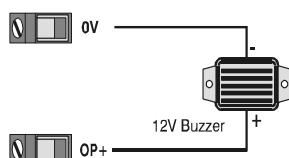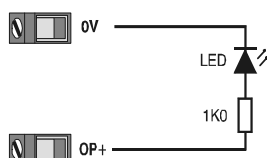

NOTE For details on testing outputs, see page 92

Digicom Outputs 1 - 8

The control panel has eight programmable outputs, which can be used for connecting to a stand-alone communicator (see page 61 for details). The table below shows the electrical characteristics for each output:


Terminal	Max Current	Operation
1	100mA	Switched 0V
2	100mA	Switched 0V
3	100mA	Switched 0V
4	100mA	Switched 0V
5	100mA	Switched 0V
6	100mA	Switched 0V
7	100mA	Switched 0V
8	100mA	Switched 0V
L/M	N/A	12V applied = Line Fault *
R/R	N/A	0V applied to reset
DC+	N/A	+ 12V Power (unfused)
DC-	N/A	0V Power

* Control Panel Line Fault Input (L/M)

In accordance with BSIA form 175, the line fault input on the control can detect a single or a dual line fault for use with the ATS Remote Test output type

Wiring a Stand Alone Communicator


The diagram below shows a typical wiring example:

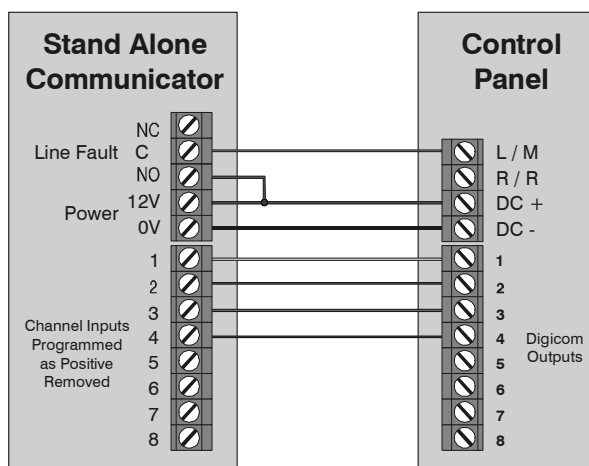

NOTE For details on testing the digicom outputs, see page 92

2-Wire Smoke Detector

Panel Output 1 can be used for connecting up to 10, 12V 2-Wire smoke detectors.

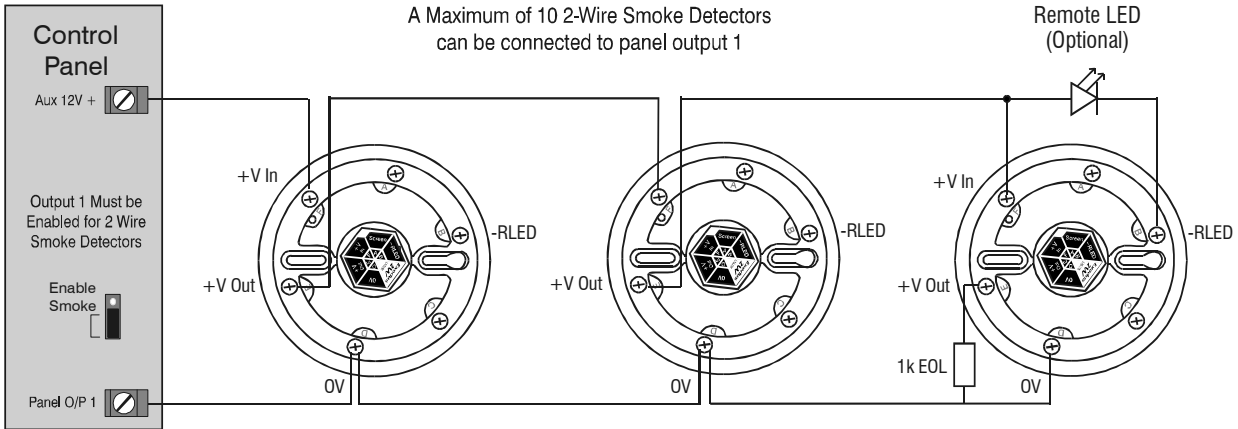


To enable 2-Wire smoke detection on panel output 1, a jumper link must be fitted across the bottom two pins of JP10. The Area Option '2-Wire Smoke' also needs to be enabled (see page 45).

NOTE JP10 is not fitted to UK control panels

2-Wire smoke detectors can only be connected to panel output 1

Expander Auxiliary Input

This input can be used for monitoring a remote power supply that has a voltage free output for the following three conditions: AC Mains Fail, Battery Fail, 12V Fail and Tamper.

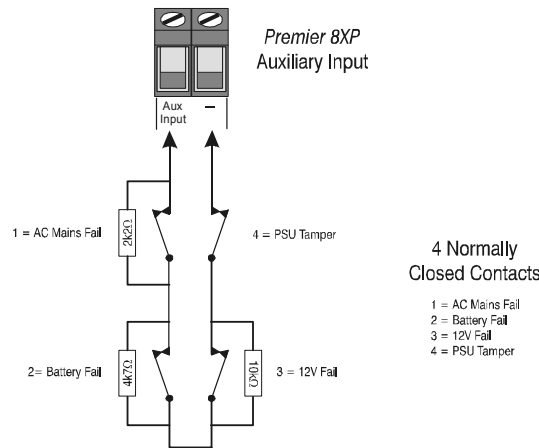

When the Auxiliary Input is programmed as 'PSU Monitor' the system will respond as follows:

Tamper	12V Fail	Battery Fail	A/C Fail	Resistance	Response
Closed	Closed	Closed	Closed	0R	No Faults
Closed	Closed	Closed	Open	2K2	AC Fail
Closed	Closed	Open	Closed	4K7	Battery Fail
Closed	Closed	Open	Open	6K9	Battery Fail + AC Fail
Closed	Open	Closed	Closed	10K	12V Fail
Closed	Open	Closed	Open	12K2	AC Fail + 12V Fail
Closed	Open	Open	Closed	14K7	Battery Fail + 12V Fail
Closed	Open	Open	Open	16K9	AC Fail + Battery Fail + 12V fail
Open	-	-	-	O/C	Lid Tamper

Plug-on Communicators

The *Com300* is a multi format 8-channel digital communicator/300-baud modem for use with a standard analogue telephone line.



The *Com2400* is a multi format 8-channel digital communicator/2400-baud modem for use with a standard analogue telephone line in addition, this modem can also send Short Message Service (SMS) text messages to a mobile phone.

The *ComISDN* is a multi format 8-channel digital communicator/modem for use with an ISDN telephone line.

These Communicators can be used to report system events to an Alarm Receiving Centre using Fast Format, Contact ID or SIA Level II or to upload/download control panel information using the *Wintex UDL* software and a PC.

Plugging on the Communicator


Ensure that the board is the correct way up (see below). Locate the plug into the communicator socket on the control panel and line up the mounting holes with the pillars in the base. Once all the holes line up, press down gently until the pillars snap into the holes.

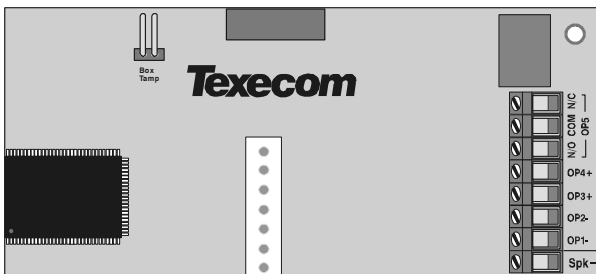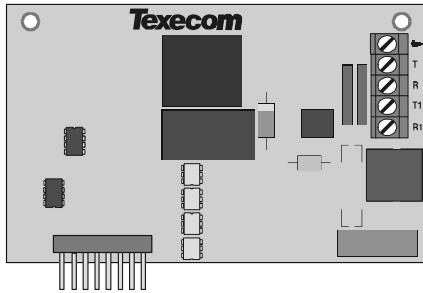

Top Right Hand Corner of Control Panel


Standard Telephone Line Connections

A standard telephone line must be connected to the *Com300* or *Com2400* communicator as shown below:

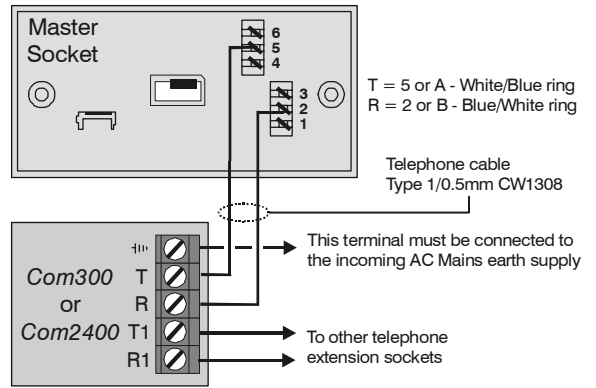

ISDN Telephone Line Connections

An ISDN telephone line must be connected to the *ComISDN* communicator as shown below:

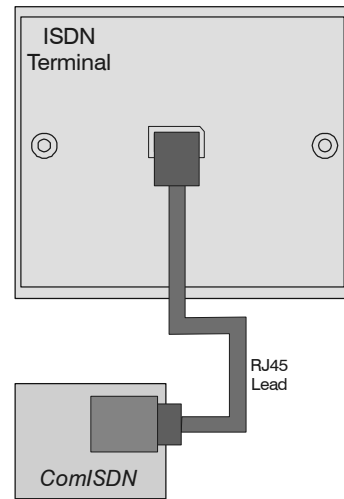

For details on testing the communicators, see page 67.

RP9 Radio-Pad

Before connecting the *Radio-Pad*, isolate ALL power from the control panel (AC mains and battery), do not continue if there is still power present on the control panel.

To install the *Radio-Pad* onto the control panel:

- Connect the Molex connector of the *RPD-Com* lead to Com2 on the control panel
- Connect the 25-Way D-Type connector of the *RPD-Com* to the Radio-Pad
- Locate the power lead connector into the socket at the bottom of the Radio-Pad
- Connect the Black lead to the DC- terminal on the control panel
- Connect the lead with the White stripe to the DC+ terminal on the control panel
- Follow the procedure for **Registering the Radio-Pad**

Registering the Radio-Pad

Whenever a Paknet Radio-Pad is installed or moved, it must be **registered** onto the network. To do this:

- Press and hold the test button on the front of the Paknet Radio-Pad
- With the test button still pressed, connect power to the control panel and wait for the yellow service light on the Radio-Pad to flash
- Release the test button

Within 2 minutes the yellow service light should stop flashing and remain steady. This means that the Paknet Radio-Pad has now selected and locked on to the Base Station with the strongest signal.

The Paknet Radio-Pad should be re-registered on every site visit, this is to ensure that any new Vodafone Packet Radio Service Base Stations in the vicinity are recorded by the Paknet Radio-Pad.

Programming the Radio-Pad

- Program Com 2 for *Radio-Pad* operation (see page 76 for details)
- Refer to the *Radio-Pad* installation guide for full programming details.

GSM Module

Before connecting the *GSM Module*, isolate ALL power from the control panel (AC mains and battery), do not continue if there is still power present on the control panel.

To install the *GSM Module* onto the control panel:

- Connect the Molex connector of the *GSM-Com* lead to Com2 on the control panel
- Connect the RJ45 connector of the *GSM-Com* to the GSM Module
- Locate the power Jack Plug into the socket at the bottom of the *GSM Module*
- Insert a SIM card into the bottom of the *GSM Module*
- Connect power to the control panel

Programming the GSM Module

- Program Com 2 for *GSM Module* operation (see page 76 for details)
- Refer to the *GSM Module* installation guide for full programming details.

AV Module

Before connecting the *AV Module*, isolate ALL power from the control panel (AC mains and battery), do not continue if there is still power present on the control panel.

To install the *AV Module* onto the control panel:

- Connect one end of the patch lead on to the Expansion Port of the *AV Module*
- Connect one other end of the patch lead on to the Expansion Port of the control panel

Programming the AV Module

- Program the Expansion Port for *AV Module* operation (see page 76 for details)
- Refer to the *AV Module* installation guide for full programming details.

ComIP Module

Before connecting the *ComIP Module*, isolate ALL power from the control panel (AC mains and battery), do not continue if there is still power present on the control panel.

To install the *ComIP* onto the control panel:

 
- Connect one end of the patch lead on to JP1 of the *ComIP*
- Connect one other end of the patch lead on to Com1 or 2 of the control panel

Programming the ComIP Module

- Program Com1 or 2 for *ComIP Module* operation (see page 76 for details)
- Refer to the *ComIP Module* installation guide for full programming details.


PC-Com

The *PC-Com* has two connectors. The 9-way D-type connector is for connection to a serial port on a computer and the Molex connector plugs onto Com 1 on the control panel.




UNI-Com

 The *UNI-Com* has two connectors. The 9-way D-type connector connects to any supported serial device, the Molex connector plugs onto Com 1 on the control panel.




PRINT-Com

The *PRINT-Com* has two connectors. The 25-way D-type connector connects to a Serial Printer and the Molex connector plugs onto Com 1 on the control panel.

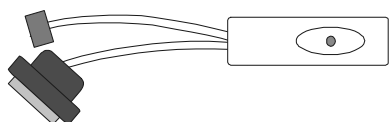


RPD-Com

The *RPD-Com* has two connectors. The 25-way D-type connector connects to a Paknet Radio-Pad and the Molex connector plugs onto Com 2 on the control panel.

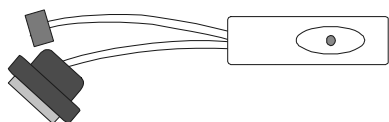

GSM-Com

 The *GSM-Com* has two connectors. The RJ45 connector connects to a GSM Module, the Molex connector plugs onto Com 2 on the control panel.



Connecting a Computer


The *Premier 48, 88, 168* and *640* all support local uploading and downloading between the control panel and a PC running *Wintex UDL* software. Uploading and Downloading can be used to program and interrogate the control panel.

In order for the computer to work correctly, ensure that it is set to the following:

- UDL Password (see page 73 for details)



In order to upload and download to the control panel locally, a *PC-Com* lead is required.

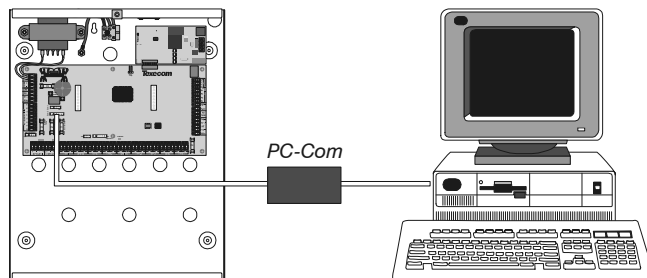

Connecting a Printer


The *Premier 48, 88, 168* and *640* all support printer facilities. The printer is connected to the Com 1 connector located on the control panel and can be used to print the control panel event log.

In order for the printer to work correctly, ensure that it is set to the following:

- Baud Rate = 4800
- Parity = None
- Start Bits = 1
- Stop Bits = 2
- Data Bits = 8
- DTR = Normal
- Columns = 40 or 80 (see page 50)



In order to connect a printer to the control panel, a *PRINT-Com* lead is required.

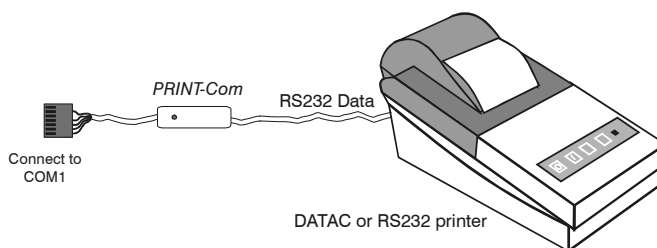

3. Commissioning and Troubleshooting

Commissioning

Once ALL connections have been made to the control panel and power is ready to be applied, you should read this section before continuing.

When applying power for the first time, the factory default settings must be loaded. The default settings ensure that the control panel software is reset and all programming information is loaded into memory. For a complete list of factory default settings, see page 29

The factory default settings are loaded by applying power to the control panel whilst at the same time, holding down the **Factory Default** button.

To default the control panel, proceed as follows:

- Connect the black battery lead to the negative (-) terminal of the standby battery and the red battery lead to the positive (+) terminal of the standby battery
- Press and hold the **Factory Default** button
- Press the battery kick-start button to connect the battery and ensure that the green heartbeat light illuminates
- After the heartbeat light has illuminated, let go of the **Factory Default** button (the heartbeat light will continue to flash whilst the factory default settings are being loaded, this can take up to 30 seconds)
- If the system goes into alarm, **enter the default Engineer code** **1** **2** **3** **4**, and the alarm tone will stop
- To access the Engineer Programming Menu, **enter the default Engineer code** **1** **2** **3** **4**
- Program the system as described in section 6 (Programming the Control Panel)
- Perform a zone test as described on 92. Remember that some powered detectors (e.g. PIR's and combined technology detectors) take several minutes to warm up and become operational
- Test the internal sounder, external sounder and strobe as described on page 93
- Replace the lid and secure with the lid screw supplied
- **Press** **0** **followed by YES** to leave the programming menu, the system will return to normal
- The display will be showing that there is a 'Mains Power Off' condition. Switch on the AC mains supply to the control panel
- The normal banner message (if programmed) will now be displayed

Installation is now complete and the system is ready for use.

Trouble-Shooting

Control Panel

No Power to unit (mains only)

- Check the mains block fuse and replace if blown
- Check for loose wires at the mains block, the transformer and the AC terminals on the PCB
- Check the mains block is connected correctly; live to live (brown), neutral to neutral (blue)

No Power to unit (battery only)

- Don't forget to press the battery kick-start button
- Check the battery fuse F2 and replace if blown
- Check for loose wires at the BATT terminals on the PCB
- Check that the battery wires are connected correctly; red from BATT+ to the battery positive (+), black from BATT- to the battery negative (-)

Heartbeat LED is not flashing

- Remove ALL power (AC Mains and Battery) and then reapply power again

Network Data LED's are not flashing

- Remove ALL power (AC Mains and Battery) and remove ALL wires from the network terminals. Then re-apply power again before referring to the Network Diagnostics table on page 12

Keypads

Keypad does not operate

- Check that the keypad is wired correctly from the control panel (see page 12 for wiring details)
- Check the network fuses F3 and F5 and replace if blown
- Use the network diagnostics (see page 12 for details)

Keypad does not accept codes

- If the system has more than one keypad check that each keypad is addressed differently, see page 14 for details
- If the keypad is on a long cable run, check the voltage between the '+' and '-' terminals at the keypad and ensure that it measures no less than 10.0V
- Check that you are using the correct User codes. The default Engineer code is **1** **2** **3** **4** and the default Master User code is **5** **6** **7** **8**
- Check that the User code you are using is not 'Time Locked', if the User code is time locked then the access code will only be accepted when Control Timer 1 is off (see pages 52 and 88 for details)

Keypad zones do not operate

- Each keypad zone has to be mapped onto the system before it can be used (see page 57 for details)
- The zone is not programmed (see page 35 for details)

Keypad emergency keys do not operate

- Each keypad can be configured so that the emergency keys **PA**, **FIRE** and **MEDICAL** can be enabled or disabled. Check that the keypad has been programmed correctly (see page 57 for details)

Expander

Expander does not operate at all

- Check that the expander is wired correctly from the control panel (see page 12 for wiring details)
- Check the network fuses F3 and F5 and replace if blown

System does not recognise zones

- If the expander is on a long cable run, check the voltage between the + and – terminals at the expander and ensure that it measures no less than 10.0V

The speaker output does not work

- The expander can be configured so that Alarm, Entry, Exit, Chime tones etc. can be enabled or disabled. Check that the expander has been programmed correctly (see page 59 for details)
- The speaker volume on the expander is electronically adjustable. Check the volume is set to the desired level (see page 59 for details)

Zones

One or more zones show an alarm

- Check that the zone is wired correctly (see page 19 for wiring details)

Communicator

The Communicator will not dial

- By default the communicator is disabled, check that the communicator is enabled (see page 71 for details)
- Check that the telephone line has been correctly wired to the communicator (see page 23 for wiring details)
- Check that the telephone numbers are programmed correctly (see page 70 for details)
- Check that the account numbers are programmed correctly (see page 70 for details)
- Check that the dial attempts are not programmed as zero (see page 70 for details)
- Check that the reporting areas have been programmed correctly (see page 70 for details)
- Check that the reporting options have been programmed correctly (see page 70 for details)

Communicator dials but does not communicate

- Check that the telephone numbers are programmed correctly (see page 70 for details)
- Check that the correct protocol is programmed (see page 70 for details)

Operation

The system will not allow me to arm

- Check that there are no outstanding problems (see page 28 for details)
- Check that there are no outstanding alarms that require resetting
- Check that the User code has been programmed to allow arming (see page 87 for details)
- Check that the User code has been assigned to the correct areas (see page 85 for details)
- If a 'Local' User code is being used (see page 87 for details) ensure that the keypad being used is assigned to the correct area (see page 56 for details)

The system will not allow me to disarm

- Check that the User code has been programmed to allow disarming (see page 87 for details)
- Check that the User code has been assigned to the correct area(s) (see page 85 for details)
- If a 'Local' User code is being used (see page 87 for details) ensure that the keypad being used is assigned to the correct area (see page 56 for details)

Reset and Service Messages

When the system requires attention because of a potential problem, the display will show one of three service messages. These messages can also be accessed at any time, allowing the user to view installer information.



These messages would normally be programmed with the telephone numbers of the installer or the Alarm Receiving Centre (see page 53 for details).

To display the service messages, proceed as follows:

The display will normally show the time and date:

Tue 06 Mar 2001

Press **(Menu)** followed by **(1)** for the **Service** message:

Call Alarm Co.
For Service

Press **(Menu)** followed by **(2)** for the **Reset** message:

Call Engineer to
Reset System

Press **(Menu)** followed by **(3)** for the **Anti-code** message:

Call ARC to
Reset System

Press **(Reset)** to exit from the message, the display will then return to normal.

When alarm information is being displayed, pressing the SCROLL key will slow down the display and also allow manual scrolling through the events.

Fault Warning Tones

When a fault condition occurs i.e. mains fail, line fault etc. the internal sounders will chime every 30 seconds for 3 minutes. The chiming will automatically stop when a valid User code is entered, when **(Reset)** is pressed or after 3 minutes (whichever occurs first). The fault indication will only be cleared from the display when the fault has been rectified i.e. power, telephone line has been restored.

Fault Messages

SYSTEM ALERTS!
Tue 06 Mar 2005

There are system faults waiting to be viewed, enter a valid user code to view the faults. After entering a code faults will be displayed for 30 seconds. If the fault is not reset within 30 seconds, this message will be displayed again.

Confirm Devices
Tue 06 Mar 2001

The number of devices connected to the networks has changed from the last time a 'Confirm Devices' was done.

You need a user
to enable access

Engineer access is programmed for Engineer code + User code (see page 49 for details).

You need a user
to unarm system

The Engineers code was entered when the system was fully armed (access to the programming menu can only be gained when the system is not fully armed).

Alarm Engineer
Working On Site

The alarm engineer has logged into the programming menu and is working on site (this message will clear when the engineer logs off or the system is armed).

Mains Power Off
Tue 06 Mar 2001

There has been an AC Mains failure.

ATS Path Fault
Tue 06 Mar 2001

There is a fault with the ATS (Alarm Transmission System).

No Path Available
Tue 06 Mar 2001

There are no ATS (Alarm Transmission System) paths available.

* NO BATTERY *
Tue 06 Mar 2001

The Standby Battery has not been connected,

Battery Fault
Tue 06 Mar 2001

There is a fault with the control panel standby battery or it is not connected.

Area Failed Test
Tue 06 Mar 2001

Zones that have been placed on test have failed the test.

Panel Lid Tamper
Tue 06 Mar 2001

There is a fault with the control panel lid tamper.

Bell Tamper
Tue 06 Mar 2001

There is a fault with the bell tamper on the control panel.

Auxiliary Tamper
Tue 06 Mar 2001

There is a fault with the auxiliary tamper on the control panel.

Bell Fuse Blown
Tue 06 Mar 2001

The bell fuse on the control panel has blown.

Aux. Fuse Blown
Tue 06 Mar 2001

The Auxiliary fuse on the control panel has blown.

RKP X,X Tamper
Tue 06 Mar 2001

There is a fault with the lid tamper of Keypad X,X.

RKP X,X Lost
Tue 06 Mar 2001

Keypad X,X has been lost off of the system.

EXP X,X Tamper
Tue 06 Mar 2001

There is a fault with the lid tamper of Expander X,X

EXP X,X Lost
Tue 06 Mar 2001

Expander X,X has been lost off of the system.

EXP X,X Lo Volts
Tue 06 Mar 2001

The voltage at expander X,X is very low.

EXP Bell Tamp XX
Tue 06 Mar 2001

The expander's Auxiliary input (that is programmed as bell tamper) is in fault.

EXP Aux Tamp XX
Tue 06 Mar 2001

The expander's Auxiliary input (that is programmed as aux tamper) is in fault.

Service Required
Tue 06 Mar 2001

The service timer has expired indicating that the system requires a service (the system can normally still be used).

Sorry, Code not
allowed use TAG

The user code is locked out (normally during entry). The system must be disarmed using a Prox TAG.

Remote Keypad is
now LOCKED out

To many invalid code attempts have caused the keypad to lock out. The keypad will remain like this for 5 minutes.

* Area Secured *
Tue 06 Mar 2001

The keypad has been disabled to prevent unauthorised access. The display will automatically clear when it is re-enabled.

* Area Secured *
Tue 06 Mar 2001

Time Arming >
A.....

Areas are being armed using one of the control timers (enter a valid User code to defer the arming for 30 minutes).

4. Factory Defaults

Menu	Option	Default
User Codes		
Setup Users	User 00 (Engineer)	1234
	User 01 (Master)	5678
	All Other Users	Not Defined
1. Zone Setup		
Zones Types	1	Entry/Exit 1
	2	Guard Access
	3 - 8	Guard
	All Other Zones	Not Used
Zone Areas	All Zones	Area A
Zone Text	All Zones	Not Defined
Zone Chime	All Zones	Silent
Zone Mask	All Zones	On
2. Area Programming		
Timers (All Areas)	Exit Delay	030 Seconds
	Entry Delay 1	045 Seconds
	Entry Delay 2	045 Seconds
	2 nd Entry Dly	000 Seconds
	Bell Delay	000 Minutes
	Bell Duration	015 Minutes
	Coms Delay	000 Seconds
	Part Bell Dly	000 Seconds
Arming Modes	All Areas	Entry/Exit
Area Arm Suites	All Suites	No Areas
Area Suite Text	All Suites	Not Defined
Suite Arm Modes	All Suites	Timed
Area Options	1: Auto Part Arm	No Areas
	2: Part Arm Instant	No Areas
	3: Part Arm Silent	No Areas
	4: Remote Arm	All Areas
	5: Remote Disarm	All Areas
	6: Panel Tamper	Area A
	7: Bell Tamper	Area A
	8: Auxiliary Tamper	Area A
	9: Panel Speaker	All Areas
	10: Bell & Strobe op	All Areas
	11: Alarm Eng Reset	No Areas
	12: Confirmation Reset	All Areas
	13: Tamper Eng Reset	All Areas **
	14: Anti-code Reset	All Areas
	15: ATS Path Faults	Area A
	16: Arm With No ATS	No Areas **
	17: AC Mains Fail	Area A
	18: Arm With AC Fail	Area A
	19: Full Arm Coms	All Areas
	20: Part Arm Coms	No Areas
	21: Unarm Fire Coms	No Areas
	22: Unarm Tamp Coms	All Areas **
	23: Auto Arm Areas	No Areas
	24: Area A Foyer	No Areas
	25: Log Part Omits	No Areas
	26: Multi Knock Area	No Areas
	27: UDL Keypad	All Areas
	28: Auto Chime (C2A)	No Areas
	29: Confirm In Entry	No Areas
	30: Conf. After Entry	All Areas
	31: Part Arm Enabled	ALL Areas
	32: Bell Squawk	No Areas
	33: Fob After Entry	All Areas
	34: Armed = Coms	No Areas
	35: 2 Wire Smoke	No Areas
	36: Faults Eng Reset	All Areas **
	37: No ATS Eng Reset	All Areas **
	38: AC Fail Eng Rst	All Areas **
	39: Mask When Armed	All Areas
Area Text	All Areas	Not Defined

Menu	Option	Default
3. Global Options		
System Timers	1: Exit Settle Time	008 Seconds
	2: Global Bell Dly.	000 Minutes
	3: Global Bell Dur.	015 Minutes
	4: Double Knock Dly	007 Seconds
	5: Beam Pair Time	060 Seconds
	6: Activity Delay	024 Hours
	7: Abort Delay	180 Seconds
	8: Courtesy Time	060 Seconds
	9: Defer Arming By	030 Minutes
	10: Auto Arm Delay	030 Minutes
	11: Menu Time Out	180 Seconds
	12: Pulse Period 1	010 Seconds
	13: Pulse Period 2	020 Seconds
	14: Pulse Period 3	030 Minutes
	15: ATS Fault Delay	000 Minutes
	16: AC Off Delay	005 Minutes
	17: Batt Test Period	024 Hours
	18: Batt Test Time	010 Seconds
	19: Soak Test Time	014 Days
	20: Service Interval	000 Weeks
	21: Test Call Every	024 Hours **
	22: Min Random Time	000 Seconds
	23: Max Random Time	060 Seconds
	24: Door Strike Time	005 Seconds
	25: Zone Response	008 x 8mSec.
	26: Keypad PA Delay	060 Seconds
	27: Confirmation Dly	060 Minutes
	28: Warning Delay	000 Minutes
	29: Keypad Lock time	090 Seconds
	30: Eng. Log Off Dly	060 Minutes
	31: Fire Bell Delay	000 Minutes
	32: Forced Entry Dly	005 Seconds
	33: Supervision Time	030 Minutes
	34: Poll IP Every	000 Minutes
System Config.	00: Bell on Arm Fail	No Bell
	01: Bell is an SCB	SAB
	02: Clock is 12Hr	24Hr
	03: Manual BST/GMT	Auto
	04: Hide Armed Areas	View
	05: Area Bell Time	Global
	06: 24Hr Omit Local	Global
	07: Leave Omits	Remove
	08: Enforce Com Delay	Override
	09: NVM is Locked	Unlocked
	10: Engineer Only	User + Engineer
	11: Chime Visible	Audible
	12: Omit Tamper NO	YES **
	13: Offline Printing	Online
	14: View Act. Fault	Hide
	15: Hide Exit Errors	Hide
	16: No Code Tamp	Enable
	17: Code Tamp Alarms	Locks **
	18: Areas 1-8 & I-P	A-H & I-P
	19: Man. Area Select	Auto
	20: Normal Text	Predictive
	21: Zone Short = Active	Tamper
	22: R/R=Silence/RST	Reset Only
	23: User Code Latch	Pulse
	24: Test Call = CT4	Timed
	25: Batt Test = Disarm	Timed
	26: Bell = 2nd Alarm	1st Alarm
	27: SNDR = 2nd Alarm	1st Alarm
	28: Conf. = Delayed	Instant
	29: Abort = User Reset	Eng.
30: Manual AV Output	Auto	

Menu	Option	Default
3. Global Options Continued		
Config. Options Continued	31: Clock = Crystal	50Hz
	32: 40 Column Print	80
	33: Enable Text	Disable
	34: EN50131 Disabled	Enabled
	35: 1st Zone=Confirm	2nd
	36: Keypads Local	Global
	37: Panel Grade 2	3 *
	38: Enable RF FOB PA	Disable
	39: Armed Mask=Alarm	Fault
System Options	1: Advisory Volume	5
	2: Chime Volume	3
	3: No. of Re-Arms	03
	4: Anti-code Resets	03
	5: Multi Knocks	05
	6: Clock Adjustment	50 (no adjustment)
	7: Quick Count	4
	8: Modem Level	0
Monitor Hardware	1: ATS Path Faults	Enabled
	2: Power Failure	Enabled
	3: Aux Fuse Blown	Enabled
	4: Bell Tamper	Enabled
	5: Aux Tamper	Enabled
	6: Panel Lid Tamper	Enabled
	7: Battery Faults	Enabled
Control Timers	1 - 8	Not Defined
System Text	Reset Message	Call Engineer to Reset System
	Anti-code Message	Call ARC Centre to Reset System
	Service Message	Call Alarm Co. For Service
	Location Text	No Location Text Has Been Setup
	Banner Message	Not Defined
	Part Armed Banner Printer Header	Not Defined
Part Arm Text	Part Arm 1	Evening Arm
	Part Arm 2	Bedtime Arm 1
	Part Arm 3	Bedtime Arm 2
Holiday Dates	1 - 8	Not Defined
Speaker Tones	All Tones	Enabled
PC Output Text	All Tones	Not Defined
Custom O/P Text	All Tones	Not Defined
4. Keypad Setup		
Areas	All Keypads	Area A
Zone Mapping	All Keypad zones	Not Mapped
Options	1: PA Enabled	Disabled
	2: Fire Enable	Disabled
	3: Medical Enabled	Disabled
	4: Tamper Disabled	Enabled
	5: PA Silent	Audible
	6: PA Delayed	Instant
	7: Quick Arm Keys	Off
	8: Info.LED> Output	Armed
Volume	All Keypads	4
Sounder Options	All Tones	Enabled
5. Expander Setup		
Areas	All Expanders	Area A
Text	All Expanders	Not Defined
Auxiliary Input	All Expanders	Not Used
Volume	All Expanders	4
Sounder Options	All Tones	Enabled

Menu	Option	Default
6. Output Setup		
Panel Outputs	1 - 5	Not Used
Digi Outputs	1	Tamper ***
	2	AC Mains Fail ***
	3	ATS Test ***
	4	Not Used ***
	5	Not Used ***
	6	LED Control ***
	7	Armed ***
	8	Detector Test ***
Com Channels	1	Fire
	2	PA
	3	Alarm
	4	Armed
	5	Zones Locked Out
	6	Fault Present
	7	Confirmed Alarm
	8	Abort
RedCARE Pins	1	Fire
	2	PA
	3	Intruder Alarm
	4	Armed
	5	Zones Locked Out
	6	Fault Present
	7	Confirmed Alarm
	8	Abort
Keypads 1-8 Outputs	LED Control	LED Control
Expanders 1-8 Outputs	1	LED Control
	2	Armed
	3	Detector Test
	4 - 8	Not Used
	5	Entry
	6	Not Used
	7 - 8	Always ON
Custom O/P 1	1	Control Timer 1
	2	Not Used
	3 - 4	Always ON
	5 - 8	Not Used
Custom O/P 2	1	Control Timer 3
	2	Not Used
	3 - 4	Always ON
	5	Entry
	6	Not Used
	7 - 8	Always ON
	Custom O/P 3	1 - 8
Custom O/P 4	1 - 8	Not Used
X-10 Outputs	1 - 8	Not Used
7. UDL/Digi Options		
Reset Digi	N/A	N/A
Test Com?	N/A	N/A
Set Call Waiting	Number	Not Defined
Program Digi	ARC 1	Not Defined
	ARC 2	Not Defined
	ARC 3	Not Defined
Digi Options	Digi is Enabled	Disabled
	Pulse Dialling	Tone
	Pulse After 3	Always Tone
	Blind Dialling	Wait Dial Tone
	Call Waiting On	Off
	Dial All Numbers	Dial Any

Menu	Option	Default
7. UDL/Digi Options Continued		
UDL Options	Call Back Number 1 Call Back Number 2 Call Back Number 3 UDL Password DL Attended Auto Call-Back Call Defeat Off DL Arm Limited Any Area Armed DL Keypad not OK Rings Required UDL Dial Attempts	Not Defined Not Defined Not Defined Not Defined Unattended Manual On At Anytime Fully Armed OK 005 003
Area Accounts	All Areas	Not Defined
Setup Modules Setup Radio-Pad	ARC 1 Pri. No. ARC 1 Sec. No. ARC 1 Prefix ARC 2 Pri. No. ARC 2 Sec. No. ARC 2 Prefix ARC 3 Pri. No. ARC 3 Sec. No. ARC 3 Prefix Radio Pad Attempt	Not Defined Not Defined Not Defined Not Defined Not Defined Not Defined Not Defined Not Defined Not Defined 03
Setup AV Module?	AV No.1> AV No. 2> AV No. 2> AV Dial Attempts AV Re-Dial Delay	Not Defined Not Defined Not Defined 03 271 Minutes
Setup IP Data?	ComIP Address ComIP Port ComIP Gateway ComIP Mask Polling Address ComIP Name	Not Defined Not Defined Not Defined 03 271 Minutes 271 Minutes
	SMS Centre Pri. SMS Centre Sec. Modem Setup Stg. Modem Speed	07860980480 Not Defined Not Defined 2400
Com Port Setup	Onboard Digi Com 1 Com 2 Expansion Port	Com300 No Module Fitted No Module Fitted No Module Fitted
8. User Codes		
Setup Users	User 00 (Engineer) User 01 (Master) All other Users	1234 5678 **** Not Defined ****

* This options can alter the Programming as defined below.

** These options are enabled/disabled when Config. Option 33 is programmed as 'Grade 2'.

*** These outputs are the same as the Com Channels when Config. Option 33 is programmed as 'Grade 2'.

**** All users except the engineer are defaulted to lock out during entry.



To quickly change the programming for the 'Digi Outputs' between Grade 2 and Grade 3 without having to manually program each output, go to 'System Config.' Which is in the 'System Options' menu and select the required Grade (option 33), then go to 'Default NVM' which is in the 'Engineer Utils' menu, select 'Digi Outputs' and then press 'YES' to default them.

This will only default the Digi Outputs on the control panel, no other programming will change.

5. Programming the Control Panel

Introduction

All engineers should read this section carefully so as to familiarise themselves with the programming of the control panel.


To access the Programming menu, **enter the factory default Engineer code** (1) (2.abc) (3.def) (4.ghi).

If a mistake is made whilst entering the Engineer code, simply re-enter the correct code.

WARNING

When an Engineers code is entered to gain access to the Programming menu, by default ALL zones and tampers are disabled.

On all panels prior to Version 3.0 Premier 48 and Version 6.0 Premier 88/168, the Strobe output also pulse 3 times, invoking Engineers Hold Off mode if a Texecom bell box is connected.

A menu option can then be selected by pressing one of the keys shown or by using the  key to search. Once selected, **press YES** to access that option.


To leave the selected menu option and return to the main programming menu, **press** (Reset).

To exit from the Main Programming menu but still remain 'Logged' onto the system (zones and tampers still disabled), **press** (Reset) and the display will show 'Alarm Engineer Working On Site'.

To log the Engineer off the system, **press** (0) followed by **YES** and the system will revert to its normal condition.

The table below shows the menu options available:

Key	Menu Option	Page
(1)	Zone Setup	35
(2.abc)	Area Programming	39
(3.def)	Global Options	47
(4.ghi)	Keypad Setup	56
(5.jkl)	Expander Setup	58
(6.mno)	System Outputs	60
(7.pqrs)	UDL/Digi Options	67
(8.tuvw)	Setup Users	84
(9.wxyz)	Engineer Utils	89
(Part)	Alter Part Arms	98
(Menu)	The Arming Menu	-
(Menu)	The User Menu	-
(0)	Log Off Engineer	34
(Reset)	Exit programming mode	34

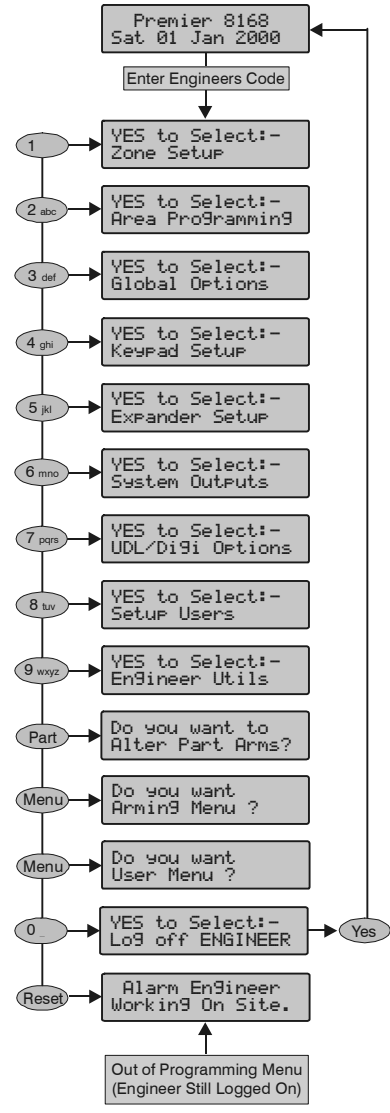


Programming Menu Guide


 






 

 





Key	Main Menu	Key	Sub Menu
1	Zone Setup	Yes Yes Yes Yes Yes Yes Yes	Zone Types Zone Attributes 1 Zone Attributes 2 Zone Areas Zone Text Zone Chime Zone Masking
2 _{abc}	Area Programming	0 _{...} 1 2 _{abc} 3 _{def} 4 _{ghi} 5 _{kl} 6 _{mno} 7 _{pqrs}	Timers Arming Modes Area Arm Suites Area Suite Text Suite Arm Modes Area Options Time Arm Areas Area Text
3 _{def}	Global Options	0 _{...} 1 2 _{abc} 3 _{def} 4 _{ghi} 5 _{kl} 6 _{mno} 7 _{pqrs} 8 _{tuv} 9 _{wxyz} ↕	System Timers System Config. System Options Monitor Hardware Control Timers System Text Part Arm Text Holiday Dates Speaker Tones PC Output Text Custom O/P Text
4 _{ghi}	Keypad Setup	Yes Yes Yes Yes Yes	Areas Zone Mapping Options Speaker Volume Sounder Options
5 _{kl}	Expander Setup	Yes Yes Yes Yes Yes	Areas Location Text Auxiliary Input Speaker Volume Sounder Options
6 _{mno}	System Outputs	0 _{...} 1 2 _{abc} 3 _{def} 4 _{ghi} 5 _{kl} 6 _{mno} 6 _{mno}	Panel Outputs Digi Outputs Com? Channels RedCARE Pins Keypad Outputs Expander Outputs Custom Outputs X-10 Outputs
7 _{pqrs}	UDL/Digi Options	0 _{...} 1 2 _{abc} 3 _{def} 4 _{ghi} 5 _{kl} 6 _{mno} 7 _{pqrs} 8 _{tuv}	Reset Digi Test Com? Set Call Waiting Program Digi Digi Options UDL Options Area Accounts Radio/SMS Options Com Port Setup
8 _{tuv}	Setup Users (not always available) (not always available) (not always available)	Yes Yes Yes Yes Yes Yes Yes Yes	User Code User Areas User Type User Options User Config. User Time Lock User Text Door Control Add TAG

Key	Main Menu	Key	Sub Menu
9 _{wxyz}	Engineer Utils	0 _{...} 1 2 _{abc} 3 _{def} 4 _{ghi} 5 _{kl} 6 _{mno} 7 _{pqrs} 8 _{tuv} 9 _{wxyz} ↕ ↕ ↕ ↕ ↕ ↕ ↕ ↕ ↕ ↕	View Event Log Do Bell Test Do Walk Test View Zone Status System Tests Confirm Devices View RKP Status View Exp. Status Set System Time Set System Date Location Text Print Log Data Soak Test Areas Change Eng. Code Adjust Volumes Default NVM Data View iD Data Configure Radio
Part	Part Arms	Omit Chime Part	Part Arm 1 Part Arm 2 Part Arm 3
Menu	Arming Menu	0 _{...} 1 2 _{abc} 3 _{def} 4 _{ghi} 5 _{kl} 6 _{mno} 7 _{pqrs} 8 _{tuv} 9 _{wxyz} ↕ ↕ ↕ ↕ ↕ ↕ ↕ ↕	Exit Menu Arm System Part Arm System Silent Arming Omit Zones Cancel Exit Disarm Areas Use Anti-code View Zone Status Omit 24Hr Zones Set Chime Areas View Act. Faults View Act. Counts Send SMS Text Defer Arming
Menu	User Menu	0 _{...} 1 2 _{abc} 3 _{def} 4 _{ghi} 5 _{kl} 6 _{mno} 7 _{pqrs} 8 _{tuv} 9 _{wxyz} ↕ ↕ ↕ ↕ ↕ ↕ ↕ ↕ ↕ ↕	Exit Menu View Event Log Change Code Edit Chime Zones System Tests Walk Test Enable Engineer Set System Time Set System Date Override Timers Alter Timers Setup Users Alter Part Arms Call Remote PC Alter Hol. Dates Adjust Volumes Print Event Log Edit Phone No's
Reset	Exit programming menu (engineer still logged on)		
0 _{...}	Log Off Engineer		



Programming Text

   Text is programmed in a similar way to mobile phones. Characters are selected by pressing the corresponding key the appropriate number of times (to select a character on the same key, press  to move the cursor along).

The table below shows the keys to use and the characters that are assigned to them:


Key	Character															
	_	0														
	.	,	?	!	1	@	"	-	&	%	/	+	=	\$:	;
	A	B	C	2	a	b	c									
	D	E	F	3	d	e	f									
	G	H	I	4	g	h	i									
	J	K	L	5	j	k	l									
	M	N	O	6	m	n	o									
	P	Q	R	S	7	p	q	r	s							
	T	U	V	8	t	u	v									
	W	X	Y	Z	9	w	x	y	z							
	Move Cursor															
	Backspace (delete)															
	Copy Text															
	Paste Text															
	Predictive Text															
	Upper/Lowercase, Predictive text and Clear Screen															

The control panel also features Predictive text. This can be used to make inserting words easier, i.e. when spelling the word PIR, instead of typing 7444777, all that you need to do is type 747 and the word is automatically selected.

 **NOTE** This feature can be turned on and off as required by pressing the  key and can also be automatically selected every time text mode is entered (see page 50 for details).


Copying and Pasting

When programming any items i.e. Zones, Timers, Options etc. pressing **CHIME** at any point will 'Copy' the information that has just been programmed into memory. To program another item using the information in memory, select the item and press **PART** to 'Paste' the information.

 **NOTE** Copying and Pasting can only be performed whilst in the same option i.e. if a zone has just been programmed as Guard 1/Omit/Access/Areas-ABC, **ALL** of that information can be copied into memory so that when another zone is selected, the same information can then be quickly pasted to the other zone.

The information held in memory after programming an item can only be pasted into an item of the same type and cannot be used once another option is selected i.e. Zone programming information cannot be pasted into Timers etc.

 



Log Off Engineer

Whenever the Engineer Programming menu is exited by pressing  twice, the display will look like this:






This message will remain on the display until the Engineer logs out of the Programming menu.


► To log out of Engineer Programming menu, proceed as follows:

Enter an Engineer code    , the display should look like this:



 Press  or , the display should look like this:







Press  to return to normal, the display will look something like this:



 The Engineer is now logged out of the Programming menu.


Resetting the Engineers Code (User 00)

If the Engineer code (User 00) has been lost or forgotten, it can normally be reset back to the factory default of    . However, this can only be done if the NVM has not been locked (see page 49 for details).

To Reset the Engineer code (User 00):

ENSURE THAT THE LID TAMPER IS CLOSED

Hold down the 'Factory Default' button for 6 seconds (with the control panel still powered), after 6 seconds, the sounders/keypads will bleep to indicate that the Engineer code has been reset.


 **NOTE** NO other codes/programming will be affected, it is just the User 00 Engineer code that will be reset.

The Engineer (User 00) code can only be reset, if the NVM has not been locked (see page 49 for details).

Other Things to Know

- After entering a zone number (step 3), pressing **AREA** will jump straight to the 'Zone Areas'
- When programming text, pressing **OMIT** will jump straight to the 'predictive Text'

5.1 Zone Setup

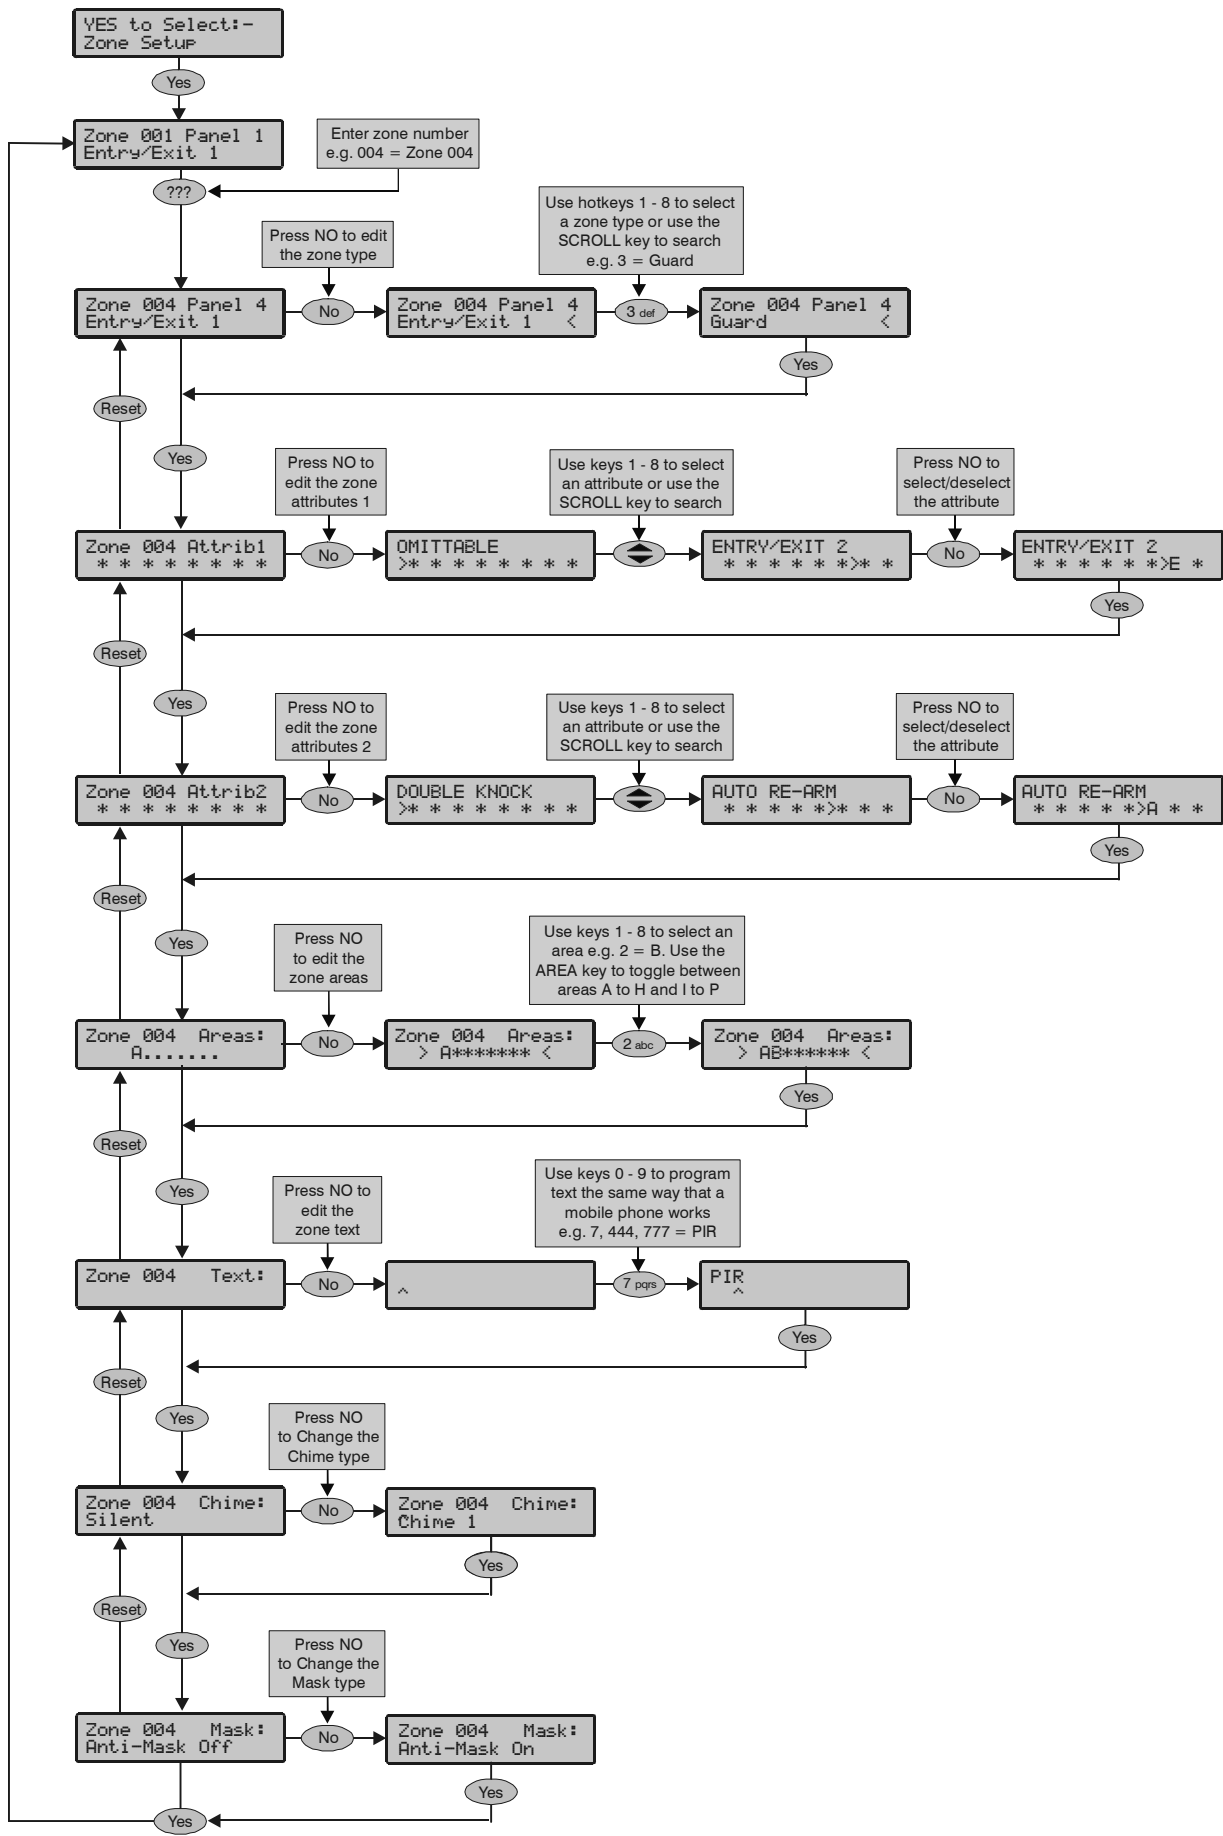

Zone Types

Each zone must be programmed before it is recognised by the system.

Zone numbers are entered as a three digit number i.e. Zone 1 would be entered as 001. Each zone consists of a zone type, attributes, areas and zone text.

When programming zones, first select a zone type then select any required attributes, assign the zone to an area and then program any required zone text.

Zone Type + Zone Attributes + Zone Areas + Zone Text = Zone Programmed.

The following zone types are available:

0 - Not used

A zone that is not monitored by the system, unused zones should be programmed as 'Not Used' or linked out.

1 - Entry/Exit 1

Normally used for the main entry/exit door i.e. Front Door. The zone can be activated during the exit mode without causing a 'Fault'. Once the system/area is armed, activation of the zone will start the 'Entry 1 Delay' timer for the selected area.



If an Entry/Exit zone type is omitted, 'Guard Access' zones in the same area as the omitted Entry/Exit zone will automatically become 'Entry/Exit 1' zones to allow access into the premises without causing an alarm.

If an 'Entry/Exit 1 or 2' zone type is assigned the 'Entry/Exit 2' attribute (see page 37), when a zone with the 'Guard' attribute activates and causes an alarm (when the area is fully armed), the zone will become a 'Guard' zone for the duration of the 'Abort' timer.

2 - Entry/Exit 2

Normally used for another entry/exit door that requires a different entry delay i.e. Back Door, Garage Door etc. The zone can be activated during the exit mode without causing a 'Fault'. Once the system/area is armed, activation of the zone will start the 'Entry 2 Delay' timer for the selected area.

3 - Guard

Normally used for detection devices such as PIR's, Door Contacts etc. This zone type will cause an Intruder alarm if it is activated when the system/area is armed. This zone type will also activate any output programmed as 'Guard Alarm'.

4 - Guard Access

Normally used for detection devices along the entry/exit route. This zone type will allow the user to walk past the detector without causing a 'Fault' during the exit mode or an Intruder alarm during the entry mode, however, the zone will cause an immediate Intruder alarm if activated at any other time. This zone type will also start the entry mode when the system/area is part armed and activate any output programmed as 'Guard Access Alarm'.

5 - 24Hr Audible

This zone type will cause an internal alarm if it is activated when the system/area is disarmed and will cause an Intruder alarm when the system/area is armed. The panel will also report a '24-Hour' alarm to the Alarm Receiving Centre when using 'Contact ID' reporting.

6 - 24Hr Silent

This zone type will cause a silent alarm if it is activated when the system/area is disarmed and will cause an Intruder alarm when the system/area is armed. The panel will also report a '24-Hour' Alarm to the Alarm Receiving Centre when using 'Contact ID' reporting.

7 - PA Audible

Normally used for monitoring Panic or hold-up alarms. This zone type will cause a Panic alarm if it is activated when the system/area is armed or disarmed.

8 - PA Silent

Normally used for monitoring Panic or hold-up alarms. This zone type will cause a silent Panic alarm if it is activated when the system/area is armed or disarmed.

9 - Fire

Normally used for monitoring smoke detectors. This zone type will cause a Fire alarm with distinctive fire tone if it is activated when the system/area is armed or disarmed. In addition, the bell output will pulse.

10 - Medical

This zone type will cause a Silent alarm if it is activated when the system/area is armed or disarmed. The panel will also report a Medical alarm to the Alarm Receiving Centre when using 'Contact ID' reporting.

11 - 24Hr Gas

This zone type will cause an Audible alarm if it is activated when the system/area is armed or disarmed. The panel will also report a 24-Hour Gas alarm to the Alarm Receiving Centre when using 'Contact ID' reporting.

12 - Auxiliary

This zone type will cause a Silent alarm if it is activated when the system/area is armed or disarmed. The panel will also report an Auxiliary alarm to the Alarm Receiving Centre when using 'Contact ID' reporting.

13 - Tamper

This zone type will cause an Internal alarm if it is activated when the system/area is disarmed and will cause an Intruder alarm when the system/area is armed.

14 - Exit Terminator

This zone type is used to finalise the arming procedure when arming the system/area (see page 40 for details).

15 - Moment Key

This zone type can be used to arm and disarm one or more areas. When the zone is activated and then secured the areas assigned to the zone will arm. When the zone is subsequently activated and then secured the system will disarm the areas assigned to the zone. Tamper faults will not arm or disarm anything, but will cause a Tamper alarm.

16 - Latch Key

This zone type can be used to arm and disarm one or more areas. When the zone is activated, the areas assigned to the zone will arm. When the zone is secured, areas assigned to the zone will disarm. Tamper faults will not arm or disarm anything, but will cause a Tamper alarm.

17 - Security

This zone type can be used to Lockout keypads. When the zone is activated, keypads assigned to the same area will not accept any key presses. When the zone is secured, all keypads respond as normal.

18 - Omit Key

This zone type will isolate any zone assigned to the same area as long as it has the 'Omit' attribute.

19 - Custom

This zone type can be programmed to operate as required using its own set of attributes (see page 38 for details).

Zone Attributes 1

Attributes can be assigned to a zone to alter its operation i.e. a Guard zone with the 'Access' attribute will allow the user to walk past the detector without causing a 'Fault' during the exit mode or an Intruder alarm during the entry mode.

Select attributes by pressing keys 1 to 8 (a letter on the display means the attribute is selected, a Dot on the display means the attribute is not selected).

The following attributes are available:

O - OMITTABLE

Zones with this attribute can be manually omitted.

Zones without this attribute cannot be manually omitted.

F - FORCE OMIT

Zones with this attribute will be omitted if they are not secure at the end of the exit mode.

Zones without this attribute will cause an 'Arm Fail' if they are not secure at the end of the exit mode.

1 - PART 1 OMIT

Zones with this attribute will be omitted when 'Part Arm 1' is selected.

Zones without this attribute will respond as normal.

2 - PART 2 OMIT

Zones with this attribute will be omitted when 'Part Arm 2' is selected.

Zones without this attribute will respond as normal.

3 - PART 3 OMIT

Zones with this attribute will be omitted when 'Part Arm 3' is selected.

Zones without this attribute will respond as normal.

A - ACCESS

Zones with this attribute will not cause a 'Fault' during the exit mode or an Intruder alarm during the entry mode. However, if the zone is activated at any other time an Intruder alarm will occur.

Zones without this attribute will respond as normal.

E - ENTRY/EXIT 2

Zones with this attribute will start the 'Entry Delay 2' timer for the selected area when the area is part armed.



'Entry/Exit 1 or 2' zones with this attribute will become a 'Guard' zone for the duration of the 'Abort' timer if a zone with the 'Guard' attribute activates and cause an alarm (when the area is fully armed).

Zones without this attribute will respond as normal.

G - GUARD

Zones with this attribute will cause an Intruder alarm when the area is part armed (this would normally be used on 'Entry/Exit 1 or 2' zone types).



When the area is fully armed, activation of a zone with this attribute will cause any 'Entry/Exit 1 or 2' zone with the Entry/Exit 2 attribute to become a 'Guard' zone for the duration of the 'Abort' timer.

Zones without this attribute will respond as normal.

Zone Attributes 2

Select attributes by pressing keys 1 to 8 (a letter on the display means the attribute is selected, a Dot on the display means the attribute is not selected).

The following attributes are available:

D - DOUBLE KNOCK

Zones with this attribute will only cause an alarm if it is activated twice within the 'Double Knock' time window or for the duration of the time window.

Zones without this attribute will respond as normal.

B - BEAM PAIR

Zones with this attribute will only cause an alarm if two zones (assigned to the same area) with this attribute are activated within the 'Beam Pair' time window.

Zones without this attribute will respond as normal.

T - ON TEST

Zones with this attribute will not cause an alarm if activated during the 'Soak Test Time' (see page 47 for details). However, the system will record the event in the log and indicate to the user that the zone has failed the test. A test failure will NOT prevent the user from arming and will clear when an Engineer code is entered.

Zones without this attribute will respond as normal.

A - ACTIVITY

Zones with this attribute will cause an activity fault to be displayed at the time of arming if they have not been activated during the 'Activity Delay' period. If 'Config. option 14' (see page 49 for details) has been set to 'Activity Fault Bar' the system/area cannot be armed until the zone has been activated (forced walk test).

Zones without this attribute will respond as normal.

R - RESET

Zones with this attribute will not be monitored during the 'Detector Reset' period i.e. when the exit mode is started and power is removed from certain detectors (to reset them) the 'Fault' on the zone is ignored.

Zones without this attribute will be monitored as normal.

A - AUTO RE-ARM

Zones with this attribute will always re-arm at the end of the bell duration providing that the 'Re-arm' limit has not been reached (see page 51 for details). Once this limit has been reached, the zone will lock out and not cause any further Intruder alarms.

Zones without this attribute will not re-arm at the end of the bell duration.

Q - QUICK RESPONSE

The response time of the zones with this attribute is governed by the 'Zone Loop' response Timer (see page 47 for details).

The response time of a zone without this attribute is fixed at 250mS.

E - ENGINEER ALARM

Zones with this attribute will cause an Intruder alarm when activated if the engineer arms the system/area.

Zones without this attribute will not cause an Intruder alarm when activated if the engineer arms the system/area.

Attributes for Moment or Latch Keys

Select attributes by pressing keys 1 to 8 (a letter on the display means the attribute is selected, a Dot on the display means the attribute is not selected).

The following attributes are only available for 'Moment Key' or 'Latch Key' zone types.

I - INSTANT ARM

When using a key switch, the area will arm instantly.

P - PART ARMING

When using a key switch, the area will 'Part' arm.

F - FULL ARM DISABLE

When using a key switch to 'Full' arm an area, the key switch is disabled once the area is armed.

D - DISARM ONLY

The key switch cannot be used for 'Arming' (it can only be used for 'Disarming').

F - SILENTARMING

When arming using a key switch, the selected areas will arm silently.

T - TIME ARM DISABLE

Activation of the key switch will override the 'Time Arming' feature on the control panel and prevent it from operating until the zone is reinstated.

K - KEY TUBE

A key switch zone type with this attribute will log when the zone is activated and also when the zone is restored.

Attributes for Custom Zones

Select attributes by pressing keys 1 to 8 (a letter on the display means the attribute is selected, a Dot on the display means the attribute is not selected).

The following attributes are only available for 'Custom' zone types.

I - INTERNAL

Activation of this zone (when armed) will cause the internal sounders to activate.

B - BELL/STROBE

Activation of this zone (when armed) will cause the external sounder/strobe to activate.

M - MONITOR 24Hr

The zone is armed at all times.


C - ENABLE COMS

Activation of this zone (when armed) will cause the area 'Alarm' output to activate.



NOTE Any Custom zone with this attribute will activate both the internal and external sounders even if they are not enabled above.

W - WARNING REQ.

If the zone remains Active for the duration of the 'Warning Delay' timer (see page 48), a warning tone will occur every 30 seconds for 3 minutes (or until a code is entered or  is pressed).



NOTE If MONITOR 24Hr is enabled, an internal alarm will occur after the Warning Delay.


Zone Areas

The *Premier 48* can be divided into four separate areas of protection, the *Premier 88* can be divided into eight separate areas of protection and the *Premier 168* and *640* can be divided into sixteen separate areas of protection. This allows different parts of a building to be armed and disarmed independently from each other. By default all zones are assigned to area A, but if required, a zone can be assigned to any number of areas.



NOTE If a zone is assigned to more than one area, it will only be recognised by the system when all areas it is assigned to, are armed.


Zone Text

Each zone can have up to 32 characters of descriptive text assigned to it. Text is programmed in a similar way to mobile phones. Select characters by pressing the corresponding key the appropriate number of times (to select a character on the same key, press  to move the cursor along).

For a more information, see page 34.

The control panel also features Predictive text. This can be used to make inserting words easier, i.e. when spelling the word PIR, instead of typing 7444777, all that you need to do is type 747 and the word is automatically selected.



NOTE This feature can be turned off if required by pressing the  key and can also be automatically selected every time text mode is entered.

Zone Chime

Each zone can be programmed to chime the internal sounders using one of the available chime tones when activated.

Zone Masking

When an Anti-masking detector is connected to a zone the mask functionality needs to be enabled for that particular zone. When this option is enabled, only one detector can be connected to the zone and the zone will be monitored for: Healthy (2k2), Active (6k9), Short (0k0), Tamper (20k+), Fault (4k4) and Mask (9K1) conditions, see page 19 for wiring details.



NOTE If a detector is connected to a zone with this attribute and the remote test input is not connected, performing a remote detector test in Wintex will cause a fault on the zone that will require resetting.

DD 243


To comply with DD 243, during the normal entry delay, the control panel must prevent a Confirmed Intruder Alarm from being reported to the Alarm Receiving Centre.

WARNING

Owing to the ability to disable ALL of the confirmation facilities, the customer should be advised in writing by the alarm company that ALL means of alarm confirmation are disabled when the initial entry door is opened. The alarm company should then obtain written acceptance from the customer of the disabling of the means of alarm confirmation.

5.2 Area Programming

Timers

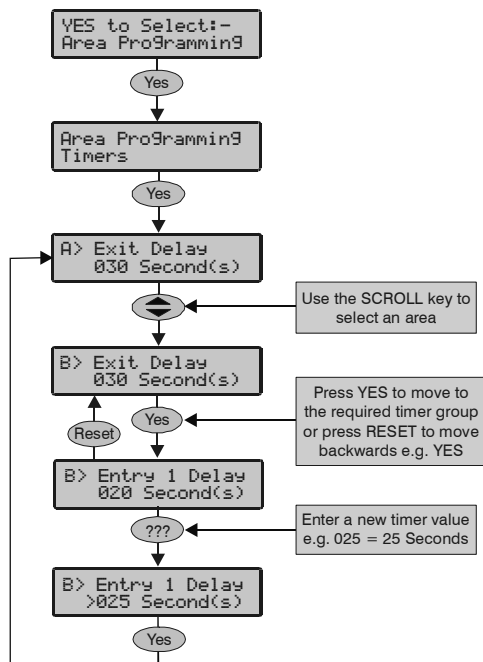

These groups of 'Area' timers control timing and delay functions for areas A - D (*Premier 48*), A - H (*Premier 88*) and A - P (*Premier 168* and *640*). Each timer can be programmed for any value between 000 and 999.

1 - Exit Delay- for Areas A to D (A to H) (A to P)

When the area exit mode is programmed as 'Timed' this timer controls the delay between the user initiating the exit mode for the selected area and the area actually.

2 - Entry 1 Delay - for Areas A to D (A to H) (A to P)

If the area is armed and an 'Entry/Exit 1' zone is activated, this timer will start and the entry tone will be heard. If the area is not disarmed before this timer expires, the '2nd Entry Delay' timer will start.

3 - Entry 2 Delay - for Areas A to D (A to H) (A to P)

If the area is armed and an 'Entry/Exit 2' zone is activated, this timer will start and the entry tone will be heard. If the area is not disarmed before this timer expires, the '2nd Entry Delay' timer will start.

4 - 2nd Entry Dly - for Areas A to D (A to H) (A to P)

When the area 'Entry Delay 1 or 2' timer expires, this timer will start and an Internal alarm will occur. If the area is still not disarmed before this timer expires, an Intruder alarm will then occur.

5 - Bell Delay - for Areas A to D (A to H) (A to P)

This timer controls the delay between an Intruder alarm occurring in the selected area and the 'Bell/Strobe' output activating.

6 - Bell Duration - for Areas A to D (A to H) (A to P)

This timer controls the duration of the 'Bell' output after an Intruder alarm has occurred in the selected area and any programmed 'Bell Delay' has expired.


7 - Coms Delay. for Areas A to D (A to H) (A to P)

This timer controls the delay between an Intruder alarm occurring in the selected area and the communicator reporting to the Alarm Receiving Centre.

8 - Part Bell Dly. for Areas A to D (A to H) (A to P)

When the selected area is 'Part Armed' this timer controls the delay between an Intruder alarm occurring in the selected area and the 'Bell/Strobe' output activating, the internal sounders will also sound during this time as a warning.

Arming Modes

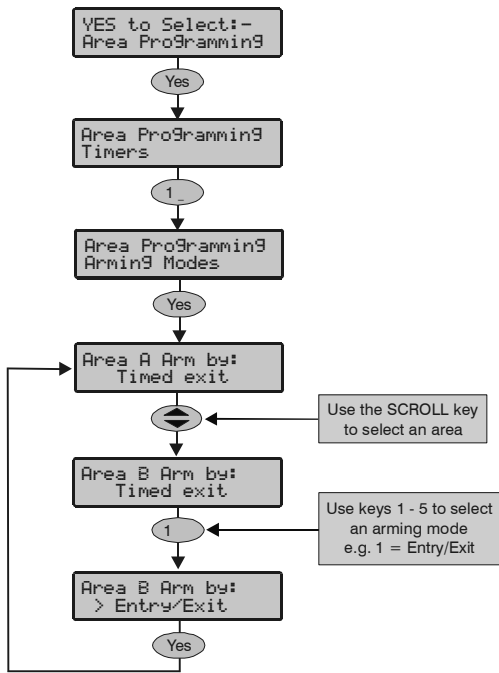

The way that an area arms can be configured for any of the following options:

1 - Entry/Exit

The area will arm after the 'Entry/Exit' door has been closed and the 'Exit Settle' timer has expired.

2 - Exit Term.

The area will arm after the 'Entry/Exit' door has been closed, the 'Exit Terminator' button has been pressed and the 'Exit Settle' timer has expired.

3 - Timed Exit

The area will arm after the programmed 'Exit Time' has expired.

NOTE If an 'Exit Terminator' zone is activated at any point during the exit mode, any remaining exit time is cancelled and the area will arm immediately.


4 - Instant

The area will arm instantly.

5 - Deferred

The area will arm after the programmed 'Exit Time' has expired. However, if any zones not on the exit route are activated during the exit mode, the 'Exit Time' is restarted.

Area Arm Suites

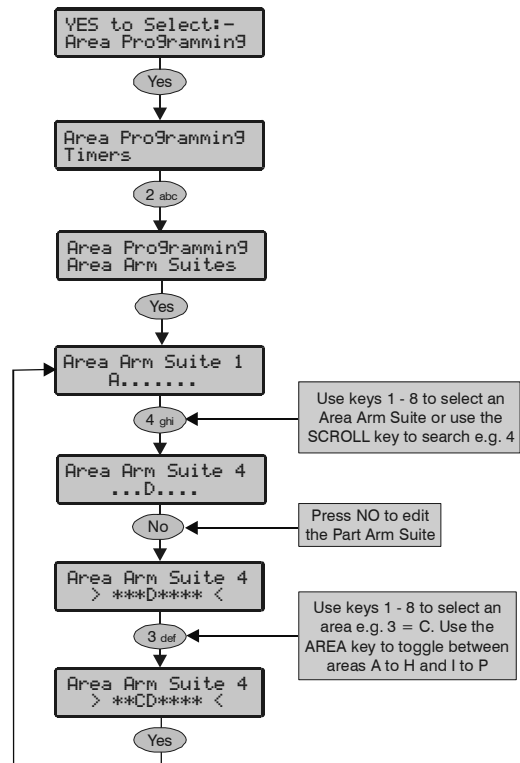

The *Premier 48* has 4 Area Arm Suites the *Premier 88* has 8 Area Arm Suites and the *Premier 168* and *640* both have 16 Area Arm Suites. Any number of areas can be assigned to each suite. Areas assigned to an Area Arm Suite will be armed when the suite is selected, making it easier for the user to select multiple areas if required.

Example

Area Arm Suites could be useful in a domestic situation where the user wants to arm areas A and B at night but does not want to select each area individually.

- Areas 'A and B' would be assigned to 'Area Arm Suite 1'
- When the user wants to arm the system at night, 'Area Arm Suite 1' would be selected
- Areas A and B are automatically selected for arming


NOTE Descriptive text may also be assigned to the Area Arm Suite (see page 41 for details).

Area Arm Suite Controller

The suites can be assigned to keypads so that different combinations of areas can be armed or disarmed depending on which keypad is used (see page 57 for details) and operates as follows:

- Keypad 1 = Area Arm Suite 1, Keypad 2 = Area Arm Suite 2, Keypad 3 = Area Arm Suite 3 etc.
- When a User code is entered at a keypad, one of the 'Area Arm Suites' is selected (depending on which keypad was used) and the areas contained within that suite arm using the arming mode for that suite, the keypad sounder will also follow the areas defined by the suite.

Area Suite Text

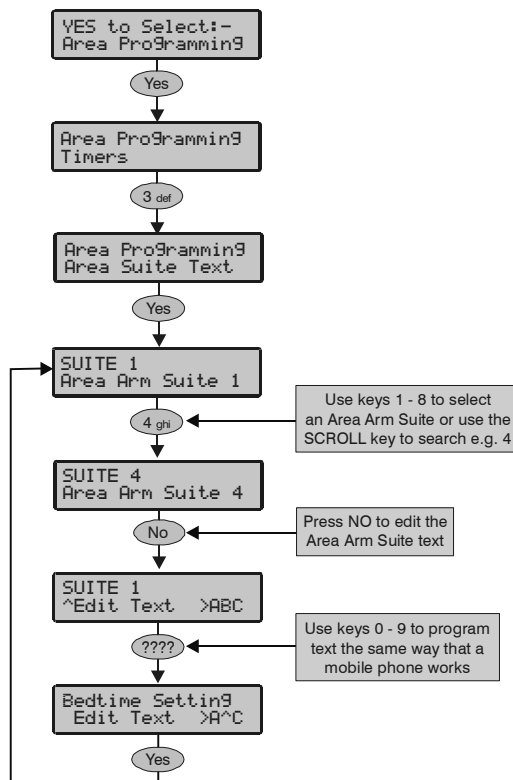


Text may be assigned to the Area Arm Suites to allow the user to select the suites by description instead of number. Up to 16 characters of text can be programmed for each suite.


Example

Text descriptions for the Area Arm Suites could be useful where more than one suite has been defined. The user wishes to arm areas A and B at night but is not too sure which suite to select.

- Areas 'A and B' would be assigned to 'Area Arm Suite 1' (see page 40 for details)
- When the user wants to arm the system at night, 'Area Arm Suite 1' would be selected
- Text will be displayed to confirm that the selected suite is correct i.e. 'Bedtime Setting'
- Areas A and B are automatically selected for armed

Text is programmed in a similar way to mobile phones. Select characters by pressing the corresponding key the appropriate number of times (to select a character on the same key, press  to move the cursor along).

Suite Arm Modes

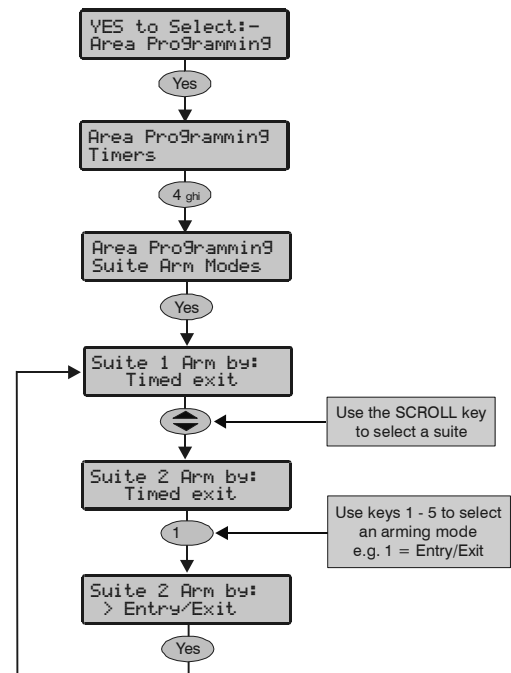

The way that an Area Arm Suite arms when selected, can be configured for any of the following options:

1 - Entry/Exit

The suite will arm after the 'Entry/Exit' door has been closed and the 'Exit Settle' timer has expired.

2 - Exit Term.

The suite will arm after the 'Entry/Exit' door has been closed, the 'Exit Terminator' button has been pressed and the 'Exit Settle' timer has expired.

3 - Timed Exit (Default for All Areas)

The suite will arm after the programmed 'Exit Time' has expired.



NOTE If an 'Exit Terminator' zone is activated at any point during the exit mode, any remaining exit time is cancelled and the area will arm immediately.


4 - Instant

The suite will arm instantly.

5 - Deferred

The suite will arm after the programmed 'Exit Time' has expired. However, if any zones not on the exit route are activated during the exit mode, the 'Exit Time' is restarted.

Area Options

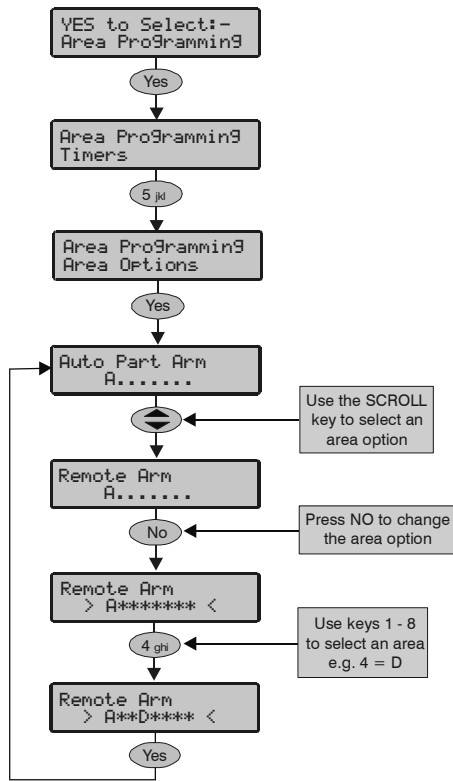

These options control how various features affect each area. Any number of areas can be assigned to each option.

1 - Auto Part Arm

Areas assigned to 'Auto Part Arm' will fully arm if an 'Entry/Exit' zone is activated during the exit mode and will 'Part Arm 1' if an 'Entry/Exit' zone is not activated during the exit mode.

Areas not assigned to 'Auto Part' will always fully arm.

2 - Part Arm Instant

Areas assigned to 'Part Arm Instant' will arm instantly when part arming.

Areas not assigned to 'Part Arm Instant' will use the area exit timer when part arming.

3 - Part Arm Silent

Areas assigned to 'Part Arm Silent' will never generate Exit tones when part arming.

Areas not assigned to 'Part Arm Silent' will always generate Exit tones when part arming.

4 - Remote Arm

Areas assigned to 'Remote Arm' can be armed remotely using the *Wintex UDL* software and a PC.

Areas not assigned cannot be armed remotely.

5 - Remote Disarm

Areas assigned to 'Remote Disarm' can be disarmed remotely using the *Wintex UDL* software and a PC.

Areas not assigned to 'Remote Arming' cannot be disarmed remotely.

6 - Panel Tamper

Areas assigned to 'Panel Tamper' will cause a Tamper alarm when the control panel cover is removed.

Areas not assigned to 'Panel Tamper' will never cause a Tamper alarm when the control panel cover is removed.

7 - Bell Tamper

Areas assigned to 'Bell Tamper' will cause a Tamper alarm when the Bell tamper loop is broken.

Areas not assigned to 'Bell Tamper' will never cause a Tamper alarm when the bell tamper loop is broken.

8 - Auxiliary Tamper

Areas assigned to 'Auxiliary Tamper' will cause a Tamper alarm when the Auxiliary tamper loop is broken.

Areas not assigned to 'Auxiliary Tamper' will never cause a Tamper alarm when the auxiliary tamper loop is broken.

9 - Panel Speaker

Areas assigned to 'Panel Speaker' will cause the control panel speaker to activate when those areas are in alarm, entry and exit etc.

Areas not assigned to 'Panel Speaker' will never cause the control panel speaker to activate when those areas are in alarm, entry and exit etc.

10 - Bell & Strobe op

Areas assigned to 'Bell & Strobe op' will cause the 'Bell/Strobe' output on the control panel to activate when an alarm occurs in those areas.

Areas not assigned to 'Bell & Strobe op' will never cause the 'Bell/Strobe' output on the control panel to activate when an alarm occurs in those areas.

11 - Alarms Eng Reset

Each area can be programmed for Engineer or User reset following an Intruder alarm. Areas Assigned to 'Alarms Eng Reset' will respond as follows:

- The assigned areas can only be reset using an Engineer code
- If 'Anti-code Reset' is enabled (option 14) the assigned areas can also be reset using the Anti-code

Areas not assigned to 'Alarms Eng Reset' can be reset with any User code that is valid for those areas.

12 - Confirmed Reset

Each area can be programmed for Engineer or User reset following a Confirmed alarm. Areas Assigned to 'Confirmed Reset' will respond as follows:

- The assigned areas can only be reset using an Engineer code
- If 'Anti-code Reset' is enabled (option 14) the assigned areas can also be reset using the Anti-code

Areas not assigned to 'Confirmed Reset' can only be reset with any User code that is valid for those areas providing that 'Alarms Eng Reset' (option 14) is also programmed for user reset.

13 - Tamper Eng Reset

Each area can be programmed for Engineer or User reset following a Tamper alarm (when the area is unarmed). Areas assigned to 'Tamper Eng Reset' will respond as follows:

- The assigned areas can only be reset using an Engineer code
- If 'Anti-code Reset' is enabled (option 14) the assigned areas can also be reset using the Anti-code

Areas not assigned to 'Tamper Eng Reset' can be reset with any User code that is valid for those areas.

14 - Anti-code Reset

Each area can be programmed for Anti-code Reset following an Intruder or Tamper alarm. Areas assigned to 'Anti-code Reset' will respond as follows:

- The assigned areas can be reset using the Anti-code as well as an Engineer code

Areas not assigned to 'Anti-code Reset' can only be reset using an Engineer code or User code.



NOTE Areas can only be assigned to 'Anti-code Reset' if they are also assigned to 'Alarms Eng Reset'.

15 - ATS Path Faults

Areas assigned to 'ATS Path Faults' (ATS = Alarm Transmission System) will respond as follows when an ATS fault occurs.

- All keypads will display 'ATS Path Fault'
- All keypads and speakers assigned to the same area as the 'ATS Path Fault' will generate a Service tone every 30 Seconds until the fault is acknowledged by the User entering a valid code for that area
- An assigned area can be armed, as long as 'Arm With No ATS' is also assigned to that area (see option 16). However, a warning will be given to indicate the problem

Areas not assigned to 'ATS Path Faults' will never be affected by an ATS fault.

16 - Arm With No ATS

Areas assigned to 'Arm With No ATS' (ATS = Alarm Transmission System) can be armed when an ATS fault occurs in those areas (see option 15).

Areas not assigned to 'Arm With No ATS' can never be armed when an ATS fault occurs in those areas (see option 15).

17 - AC Mains Fail

Areas assigned to 'AC Mains Fail' will respond as follows when an AC mains failure occurs.

- All keypads will display 'AC Mains Fail'
- All keypads and speakers assigned to the same area as the 'AC Mains Fail' will generate a Service tone every minute until the fault is acknowledged by the User entering a valid code for that area
- An assigned area can be armed, as long as 'Arm With AC Fail' is also assigned to that area (see option 18). However, a warning will be given to indicate the problem

Areas not assigned to 'AC Mains Fail' will never be affected by an AC mains failure.

18 - Arm with AC Fail

Areas assigned to 'Arm With AC Fail' can be armed when an AC Mains fail occurs in those areas (see option 17).

Areas not assigned to 'Arm With AC Fail' can never be armed when an AC Mains fail occurs in those areas (see option 17).

19 - Full Arm Coms

Areas assigned to 'Full Arm Coms' will respond as follows:

- If the selected area is fully armed and an Intruder alarm occurs in that area, Intruder alarm events (for that area) are reported to the Alarm Receiving Centre after any programmed 'Digi delay' has expired

Areas not assigned to 'Full Arm Coms' will never report Intruder alarm events to the Alarm Receiving Centre when they are fully armed.

20 - Part Arm Coms

Areas assigned to 'Part Arm Coms' will respond as follows:

- If an assigned area is part armed and an Intruder alarm occurs in that area, Intruder alarm events (for that area) are reported to the Alarm Receiving Centre after any programmed 'Digi delay' has expired

Areas not assigned to 'Part Arm Coms' will never report Intruder alarm events to the Alarm Receiving Centre when the area is Part armed.

21 - Unarm Fire Coms

Areas assigned to 'Unarm Fire Coms' will respond as follows:

- If an assigned area is unarmed and a Fire alarm occurs in that area, Fire alarm events (for that area) will be reported to the Alarm Receiving Centre

Areas not assigned to 'Unarm Fire Coms' will never report Fire alarm events to the Alarm Receiving Centre when the area is unarmed.



NOTE Fire alarm events are always reported to the Alarm Receiving Centre when the area is armed regardless of whether the area is assigned to this option or not.

22 - Unarm Tamp. Coms

Areas assigned to 'Unarm Tamp. Coms' will respond as follows:

- If an assigned area is unarmed and a 24Hr or Tamper alarm occurs in that area, 24Hr and Tamper alarm events (for that area) will be reported to the Alarm Receiving Centre

Areas not assigned to 'Unarm Tamp. Coms' will never report 24Hr or Tamper alarm events to the Alarm Receiving Centre when the area is unarmed.



NOTE 24Hr and Tamper alarm events are always reported to the Alarm Receiving Centre when the area is armed regardless of whether the area is assigned to this option or not.

23 - Auto Arm Areas

Areas assigned to 'Auto Arm Areas' will respond as follows:

- When an assigned area is disarmed, the 'Auto Arm Delay' timer will start (see page 47 for details)
- Every time a detector in that area is activated, the timer is restarted
- If the timer is allowed to expire i.e. no detectors in the assigned area are activated, the area will arm itself

Areas not assigned to 'Auto Arm Areas' will never try to arm themselves.

24 - Area A Foyer

Area A can be used as a common area (automatically arms last and disarms first). Areas assigned to 'Area A Foyer' will cause the panel to respond as follows:

- When all assigned areas are armed, Area A will automatically arm itself
- When any one assigned area is disarmed, Area A will automatically disarm itself

Areas not assigned to 'Area A Foyer' will not affect the automatic arming of area A.

25 - Log Part Omits

Areas assigned to 'Log Part Omits' respond as follows:

- When an assigned area is part armed, all the zones that are omitted for that area are logged in the event log

Areas not assigned to 'Log Part Omit' will never log the zones that are omitted in the event log when the area is part armed.

26 - Multi Knock Area

Areas assigned to 'Multi Knock Area' will respond as follows:

- Zones with the 'Double Knock' attribute will use the multiple knock value set up in system options for zone activations (see page 51 for details)

Areas not assigned to 'Multi Knock Area' will use the standard 2 knocks for zone activations.

For the 'Multi Knock Area' feature to work, the zone must be programmed with the 'Double Knock' attribute (see page 37 for details).

27 - UDL Keypad

Areas assigned to 'UDL Keypad' can be controlled i.e. armed, disarmed, reset etc. from the 'On Line Keypad' when using the *Wintex* software and a PC.

Areas not assigned to 'UDL Keypad' cannot be controlled i.e. armed, disarmed, reset etc. from the 'On Line Keypad' when using the *Wintex* software and a PC.

28 - Auto Chime (C2A)

Areas assigned to 'Auto Chime' will respond as follows:

- Zones assigned to the selected areas that have been programmed for 'Chime' will only chime when 'Custom Output 1, Stage A' is on

Areas not assigned to 'Auto Chime' will only chime when chime for that area is manually enabled by the user.

DD 243 Options

To comply with DD 243, during the normal entry delay, the control panel must prevent a Confirmed Intruder Alarm from being reported to the Alarm Receiving Centre.

If a Portable ACE i.e. Electronic Keyswitch, Key Fob, Tag, Swipe Card etc is being used for disarming, it is permissible for the Confirmed Intruder Alarm signal to be re-enabled after the entry delay has expired.

The following two options have been provided to ensure that the control panel can be programmed to comply with this standard if required.

WARNING

Owing to the ability to disable ALL of the confirmation facilities, the customer should be advised in writing by the alarm company that ALL means of alarm confirmation are disabled when the initial entry door is opened. The alarm company should then obtain written acceptance from the customer of the disabling of the means of alarm confirmation.

29 - Confirm in Entry

Areas assigned to 'Confirm in Entry' will respond as follows:

- If the entry mode is started for the selected area and a Confirmed Intruder alarm occurs in that area, Confirmed Intruder alarm events (for that area) are reported to the Alarm Receiving Centre

Areas not assigned to 'Confirm in Entry' will never report Confirmed Intruder alarm events to the Alarm Receiving Centre during the entry mode.



To comply with DD 243, areas must NOT be assigned to this option, thus preventing Confirmed Intruder Alarms from being reported to the Alarm Receiving Centre during the entry mode.

30 - Conf. after Entry

Areas assigned to 'Conf. After Entry' will respond as follows:

- Alarm confirmation is ONLY disabled for the duration of the Entry Time and is RE-ENABLED once the Entry Time has expired, after which activation of a further two zones that are not on the entry route must occur before the Alarm Confirmation output will activate

Areas not assigned to 'Conf. After Entry' will never report Confirmed Intruder alarm events to the Alarm Receiving Centre after the entry delay has expired.



To comply with DD 243, areas must NOT be assigned to this option, thus preventing Confirmed Intruder Alarms from being reported to the Alarm Receiving Centre after the entry delay has expired.

If a Portable ACE i.e. Electronic Keyswitch, Key fob, Tag, Swipe Card etc. is used to disarm the system, it is permissible for the Confirmed Intruder Alarm signal to be re-enabled after the entry delay has expired. In this case, areas CAN be assigned to 'Conf. After Entry'.

31 - Part Arm Enabled

Areas assigned to 'Part Arm Enabled' can be Part Armed.

Areas not assigned to 'Part Arm Enabled' cannot be Part Armed.

32 - Bell Squawk

Areas assigned to 'Bell Squawk' will respond as follows:

- When all of the assigned areas are fully armed, the bell will activate once for 2 seconds, when any one of the assigned areas are disarmed, the bell will activate twice for 2 seconds and when any one of the assigned areas are disarmed following an alarm, the bell will activate five times for 2 seconds.

Areas not assigned to 'Bell Squawk' will not activate the Bell output when arming or disarming.

33 - FOB After Entry

Areas assigned to 'FOB After Entry' can only be disarmed with a Radio FOB once the Entry procedure has been started.

Areas not assigned to 'FOB After Entry' can be disarmed with a Radio FOB at any time.

34 - Armed = Coms

When Areas are assigned to 'Armed = Coms' the system will respond as follows:

- Communications and outputs (Alarm, Confirmed etc.) for ALL areas will only operate when all of the assigned areas are armed.

When No Areas are assigned to 'Armed = Coms' the system will respond as follows:

- Communications and outputs (Alarm, Confirmed etc.) for ALL areas will operate as normal.

35 - 2-Wire Smoke

Areas assigned to '2-Wire Smoke' will register a Fire Alarm when any 2-Wire Smoke detector activates.

Areas not assigned to '2-Wire Smoke' will not register a Fire Alarm when a 2-Wire Smoke detector activates.

36 - Faults Eng Reset

Each area can be programmed for Engineer or User reset following any Fault. Areas Assigned to 'Faults Eng Reset' will respond as follows:

- The assigned areas can only be reset using an Engineer code
If 'Anti-code Reset' is enabled (option 11) the assigned areas can also be reset using the Anti-code

Areas not assigned to 'Faults Eng Reset' can be reset with any User code that is valid for those areas.

37 - No ATS Eng Reset

Each area can be programmed for Engineer or User reset following a "No ATS Available" fault (ATS = Alarm Transmission System). Areas Assigned to 'No ATS Eng Reset' will respond as follows:

- The assigned areas can only be reset using an Engineer code
If 'Anti-code Reset' is enabled (option 11) the assigned areas can also be reset using the Anti-code

Areas not assigned to 'No ATS Eng Rst' can be reset with any User code that is valid for those areas.

38 - AC Fail Eng Reset

Each area can be programmed for Engineer or User reset following an AC Mains Fail. Areas assigned to 'AC Fail Eng Reset' will respond as follows:


- The assigned areas can only be reset using an Engineer code
If 'Anti-code Reset' is enabled (option 11) the assigned areas can also be reset using the Anti-code

Areas not assigned to 'AC Fail Eng Reset' can be reset with any User code that is valid for those areas.

39 - Mask When Armed

Areas assigned to 'Mask When Armed' will register a Masking fault when the selected areas are armed and a Masking Fault occurs.


Areas not assigned 'Mask When Armed' will never register a Masking fault when the selected areas are armed and a Masking Fault occurs

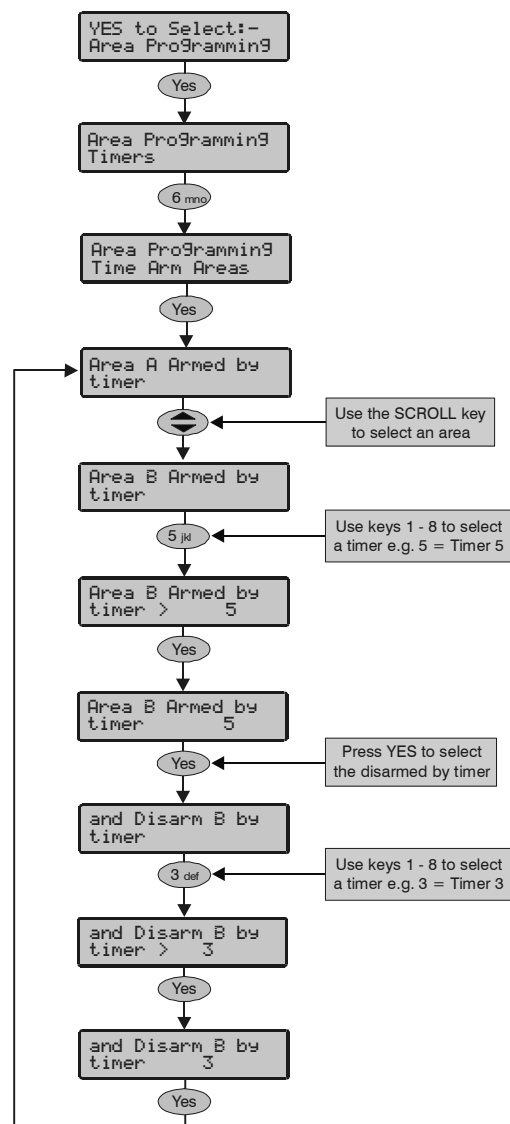Time Arm Area


The alarm system as a whole or any number of individual areas can be automatically armed or disarmed using the built in control timers.

The *Premier 48* has 4 independent control timers and the *Premier 88, 168* and *640* all have 8 independent control timers that may be configured to switch on and off at different points of the day and operate on different days of the week (see page 52 for programming details).

Area Text

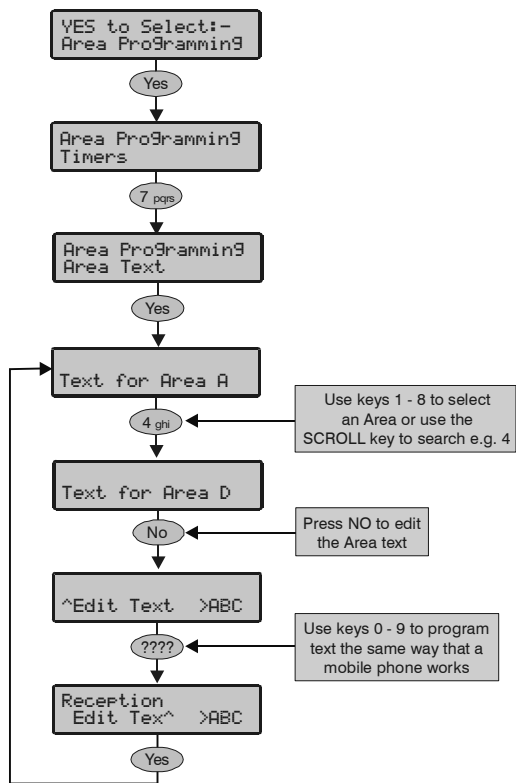


Text may be assigned to each of the areas on the system. This allows the user to select the areas by description instead of a letter. A maximum of 16 characters can be programmed for each of the areas.

Text is programmed in a similar way to mobile phones. Select characters by pressing the corresponding key the appropriate number of times (to select a character on the same key, press  to move the cursor along).

5.3 Global Options

System Timers

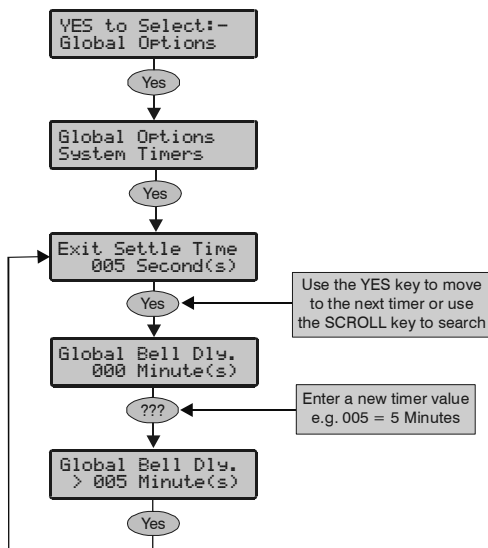

These timers control various timing and delay functions. Each timer can be programmed for any value between 000 and 999.

1 - Exit Settle Time

When using the 'Entry/Exit' or 'Exit Terminator' arming mode, some detectors along the exit route can remain active for a number of seconds following activation. This timer ensures that the detectors are given time to deactivate before the system/area arms.

2 - Global Bell Dly.

This timer controls the delay between an Intruder alarm occurring and the 'Bell/Strobe' output activating.

3 - Global Bell Dur.

This timer controls the duration of the 'Bell' output after an alarm has occurred and any programmed 'Global Bell Delay' time has expired.

4 - Double Knock Dly

If a zone has the 'Double Knock' attribute an alarm will only occur if the zone activates twice within this time window or once for the duration of this time window.



If multi knocks has been set up (see page 51 for details) the zone may have to be activated more than twice.

5 - Beam Pair Time

If a zone has the 'Beam Pair' attribute, an alarm will only occur if another zone with the 'Beam Pair' attribute (assigned to the same area) is activated within this time window.

6 - Activity Delay

If a zone has the 'Activity' attribute and it is not activated during this timer and 'Config. option 14' has been set to 'View Act. Fault' (see page 49 for details), it will be indicated to the user when they try to arm the system/area.

7 - Abort Delay

When an Intruder alarm occurs this timer is started, if the area is disarmed within this time window an 'Abort' event will be reported to the Alarm Receiving Centre. If the system is disarmed after this period the 'Abort' event is not reported.

8 - Courtesy Time

This timer controls the duration of the 'Courtesy' output type. The courtesy output activates whenever a keypad is being used and during the entry mode.

9 - Defer Arming By

If an area tries to 'Time Arm' and a valid User code is entered, this timer is started and the 'Time Arming' procedure is postponed. When this timer expires, the system/area will try to arm itself again.

10 - Auto Arm Delay

When an area assigned to 'Auto Arm Areas' is disarmed (see page 43 for details) this timer is started. Every time a detector in that area is activated, the timer is restarted. If the timer is allowed to expire i.e. no detectors in the assigned area are activated, the area will arm itself.

11 - Menu Time Out

This timer controls the length of time that a user can remain in a menu before the system automatically returns to the normal day mode.

12 - Pulse Period 1

This timer controls how long any output with the 'Pulse Period 1' attribute assigned to it will activate for.

13 - Pulse Period 2

This timer controls how long any output with the 'Pulse Period 2' attribute assigned to it will activate for.

14 - Pulse Period 3

This timer controls how long any output with the 'Pulse Period 3' attribute assigned to it will activate for.

15 - ATS Fault Delay

This timer controls the delay between a line fault occurring and an audible indication being generated by the system.

16 - AC Off Delay

This timer controls the delay between an AC Mains failure occurring and an audible indication being generated by the

17 - Batt Test Period

This timer controls the frequency of the dynamic battery test.

18 - Batt Test Time

This timer controls how long the dynamic battery test is carried out for.

19 - Soak Test Time

This timer controls the number of days a zone with the 'Test' attribute will remain on test for.

20 - Service Interval

This timer controls the frequency of the 'Service Required' condition occurring.

21 - Test Call Every

This timer controls how often a test call is made to the monitoring station. 024 = daily etc.

22 - Min. Random Time

This timer controls the minimum length of time that the 'Random' output attribute will activate for.

23 - Max. Random Time

This timer controls the maximum length of time that the 'Random' output attribute will activate for.

24 - Door Strike Time

This timer controls the length of time that the 'Door Strike' output will activate for whenever a code with the 'Door Strike' attribute is entered.

25 - Zone Response

This timer controls the length of time that a zone with the 'Quick Resp.' attribute, has to be activated for, in order to be recognised by the control panel.

26 - Keypad PA Delay

When keypad 'option 6' is programmed as 'PA Delayed' (see page 57 for details), and a keypad PA alarm (1 & 3) is activated, this timer starts. If a User code is entered before this timer expires, no PA alarm will occur. However, if a User code is not entered before this timer expires, a PA alarm will occur.

27 - Confirmation Dly

When an Intruder alarm occurs, this timer starts. If a second (different) zone is activated within this time window, the 'Confirmed' output will activate. When this timer expires, the 'Confirmed' output will no longer activate.

28 - Warning Delay

When a Custom zone with the 'Warning Req' attribute (see page 38 for details) activates, this timer is started. If the zone is still active when this timer expires a warning tone or alarm will occur and the Warning Output (see page 64 for details) will activate.

29 - Keypad Lock Time

When code tamper are programmed to lockout the keypad (see page 49 for details), the keypad will lock out for the duration of this timer.

30 - Eng. log off Dly

This timer starts when an Engineers code is entered. When the timer expires the engineer is automatically logged out of engineer's mode. This timer is suspended if there are tamper faults on the system allowing the engineer to remain in engineer's mode indefinitely whilst on site.

31 - Fire Bell Delay

This timer starts when a fire alarm is generated in a particular area. When the timer expires sounders are activated in ALL areas.

32 - Forced Entry Dly

When a zone with the 'Guard' attribute (see page 37 for details) activates, this timer is started. For the duration of this timer, any 'Entry/Exit 1 or 2' zone with the 'Entry/Exit 2' attribute (see page 37 for details) will become a 'Guard' zone. When this timer expires, the 'Entry/Exit 1 or 2' zone will revert back to its normal mode of operation.


33 - Supervision Time

This timer controls the frequency at which the RadioPLUS detectors are required to report in to the control panel.

34 - Poll IP Every

This timer controls the frequency that the ComIP Polls the ARC.

System Config.

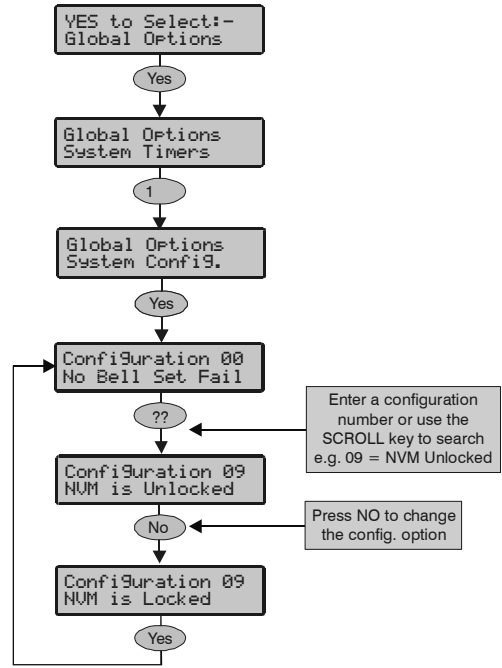

These options control how various system functions work.

00 - No Bell Arm Fail

If an area fails to arm, an Internal alarm will occur and the 'Strobe' output will activate.

Bell on Arm Fail

If an area fails to arm, an Internal alarm will occur and the 'Bell' output will activate for 10 seconds.

NOTE The 'Strobe' output will also activate for 5 seconds to indicate that the system has armed/disarmed.

01 - Bell is an SAB

The 'Bell' output on the control panel applies 0V when active.

Bell is an SCB

The 'Bell' output on the control panel removes 0V when active.

02 - Clock is 24Hr

The system time is displayed in the 24-Hour format.

Clock is 12Hr (Default)

The system time is displayed in the 12-Hour format.

03 - Auto BST/GMT

The system clock will adjust itself at the beginning and the end of the summer (the clock will automatically gain 1Hr on the last Sunday in March and lose 1Hr on the last Sunday in October).

Manual BST/GMT

The system clock will not adjust itself at the beginning and the end of the summer (the clock will have to be adjusted manually).

04 - View Armed Areas

When the system is part armed, the areas that are armed are displayed and alarm information is displayed before a valid User code is entered.

Hide Armed Areas

When the system is part armed, the areas that are armed are not displayed and alarm information is only displayed after a valid User code has been entered.

05 Global Bell Time

When all areas are armed, the system uses the 'Global Bell Delay' and 'Global Bell Duration' timers (see page 47 for details).

Area Bell Time

When all areas are armed, the system uses the 'Area Bell Delay' and 'Area Bell Duration' timers (see page 39 for details).

06 - 24Hr Omit Global

'24-Hour' type zones can be omitted from any keypad.

24Hr Omit Local

Only keypads assigned to the same area as the '24-Hour' type zones can be used to omit the zone.

07 - Remove Omits

When zones have been 'Omitted' by a user, the zones will be automatically reinstated by the system when the area they are assigned to is next disarmed.

Leave Omits

When zones have been 'Omitted' by a user, the zones will remain omitted until the user reinstates them.

08 - Override Com Dly

If an area is 'Fully' armed and an Intruder alarm occurs in that area, Intruder alarm events (for that area) are reported to the Alarm Receiving Centre immediately.

Enforce Com Dly

If an area is 'Fully' armed and an Intruder alarm occurs in that area, Intruder alarm events (for that area) are reported to the Alarm Receiving Centre after any programmed 'Coms delay' has expired (see page 39 for details).

09 - NVM is Unlocked

The factory default settings can be reloaded by pressing the Factory Restart button during power up.

NVM is Locked

The factory default settings cannot be reloaded by pressing the factory default button during power up.



If the NVM is locked and the Engineer User code has been lost or forgotten, the control panel will have to be returned to Texecom to be unlocked.

10 - Engineer Only

Access to the Engineers Programming menus can be obtained by just entering the Engineer User code.

User + Engineer

Access to the Engineers Programming mode can only be obtained, if a User (with the 'Engineer Access' attribute) has authorised engineer access (see page 88 for details).

11 - Chime Audible

Zones programmed with the 'Chime 2 or 3' attribute will only generate a Chime tone.

Chime Visible (Default)

Zones programmed with the 'Chime 2 or 3' attribute will generate a Chime tone. The keypad will also display the number of the zone that was activated.

12 - Omit Tamper No

A user cannot omit Tamper faults on a zone.

Omit Tamper Yes

A user can omit Tamper faults on a zone.

13 - Offline Printing

If a printer is plugged onto the control panel, nothing will be printed unless a printout is requested (see page 96 for details).

Online Printing

If a printer is plugged onto the control panel, anything that is logged in the event log is also printed at the same time.

14 - Hide Act. Fault

If a zone with the 'Activity' attribute is not activated during the 'Activity Delay' time window, the area that the zone is assigned to can still be armed. However, this fault will be indicated to the user when they try to arm the area.

View Act. Fault

If a zone with the 'Activity' attribute is not activated during the 'Activity Delay' time window, the area that the zone is assigned to cannot be armed. This situation can only be overcome by activating the zone.

15 - Hide Exit Errors

If a user tries to arm an area and there are zones activated, the exit mode will continue (giving a visual and audible indication that there is a problem).

View Exit Error

If a user tries to arm an area and there are zones activated, the exit mode is suspended until all of the zones are secure.

16 - Enable Code Tamper

24 invalid key presses on a keypad will cause a Code Tamper condition (see option 17).

No Code Tamper

A Code Tamper condition will never occur when the keys on a keypad are pressed more than 24 times.

17 - Code Tamper Alarm

A Code Tamper condition will cause a Tamper alarm in the areas that the keypad is assigned to.

Code Tamper Lockout

A Code Tamper condition will cause the keypad to lockout for 5 minutes.

18 - Areas A-H & I-P

The first 8 areas will be displayed as letters A through to H and the last 8 areas will be displayed as letters I through to P.

Areas 1-8 & I-P

The first 8 areas will be displayed as numbers 1 through to 8 and the last 8 areas will be displayed as letters I through to P.

19 - Auto Area Select

When an Engineers code is entered to gain access to the programming mode, ALL Zones and Tamper are disabled i.e. if any Tamper, PA, Fire or Medical Alarms are activated - NOTHING WILL HAPPEN.

Man. Area Select

When an Engineers code is entered to gain access to the programming mode, the Engineer will have to select which areas are going to be worked on.



Zones and Tamper are only disabled for the selected areas all other areas will respond to zone activations and tamper as normal.

20 - Predictive Text

When in text editing mode, the control panel will automatically select predictive text.

Manual Text Edit

When in text editing mode, the control panel will automatically select normal text.

21 - Short = Tamper

The control panel will see a zone that is in the short circuit condition as a 'Tamper'.

Short = Active

The control panel will see a zone that is in the short circuit condition as 'Active'.

22 - R/R=Reset Only

When 0V is applied to the control panel R/R input, any areas programmed for anti-code reset (see page 43 for details) that are in alarm, will be reset.

R/R=Silence/RST

When 0V is applied to the control panel R/R input any areas programmed for anti-code reset (see page 43 for details) that are in alarm, will be silenced. When 0V is applied to the R/R input a second time, the areas will be reset (this would normally be used when Audio Verification is required).

23 - User Code Pulse

The control panel will see a zone that is in the short circuit condition as 'Active'.

User Code Latch

The control panel will see a zone that is in the short circuit condition as a 'Tamper'.

24 - Timed Test Call

A test call to the Alarm Receiving Centre will occur every time the 'Test Call Every' timer expires.

Test Call = CT7

A test call to the Alarm Receiving Centre will occur every time 'Control Timer 7' activates.

25 - Batt Test Timed

A battery test will occur every time the 'Batt Test Period' timer expires.

Batt Test = Disarm

A battery test will occur every time the system is disarmed or after the 'Batt Test Period' timer has expired (whichever occurs first).

26 - Bell = 1st Alarm

The 'Bell' and 'Strobe' outputs will activate after an Intruder alarm (1st Alarm) occurs.

Bell = 2nd Alarm

The 'Bell' and 'Strobe' outputs will activate after a Confirmed alarm (2nd Alarm) occurs.

27 - SNDR = 1st Alarm

The internal sounders will sound after an Intruder alarm (1st Alarm) occurs.

SNDR = 2nd Alarm

The internal sounders will sound after a Confirmed alarm (2nd Alarm) occurs.

28 - Conf. = Instant

Following the arming of the system/area, if two zones activate (causing a Confirmed alarm), the signal will be reported to the Alarm Receiving Centre immediately.

Conf. = Delayed

Following the arming of the system/area, if two zones activate (causing a Confirmed alarm), the signal will only be reported to the Alarm Receiving Centre after the 'Abort' time has expired.

29 - Abort=Eng.Reset

An Intruder alarm that is aborted can only be reset by an Engineer/Anti-code.

Abort=User Reset

An Intruder alarm that is aborted can be reset by any User.

30 - Auto AV Output

When using the AV Module, if a microphone is remotely selected, the corresponding output automatically activates.

Manual AV Output

When using the AV Module, if a microphone is remotely selected, the corresponding output must be activated manually.

31 - Clock = 50Hz

The internal clock on the control panel runs from the 50Hz main frequency.

Clock = Crystal

The internal clock on the control panel runs from the built-in crystal.

32 - 80 Column Print

Select this option when connecting an 80 Column printer to the control panel.

40 Column Print

Select this option when connecting an 40 Column printer to the control panel.

33 - Disable Text

Areas that are armed are displayed as letters on the bottom line of the display i.e. 'Armed: AB.D...'

Enable Text

Areas that are armed are displayed using their assigned text on the bottom line of the display i.e. 'Armed: Garage', 'Office' etc. (a different area is displayed every second).

34 - EN50131 Disabled

The Control Panels EN50131 options are disabled.

EN50131 Enabled

Keypad display 'blinking' is enabled i.e. the keypad will only display the time, date and the banner message. If information is available to be viewed i.e. AC Mains Fail, Line Fault, System Faults etc. the keypad will bleep every 30 seconds and display 'System Alerts', this information can only be viewed after a valid user code has been entered. The keypad display will then 'blank' again 30 seconds after.

The bell output will not activate, if an alarm occurs during the entry mode.

Duress Codes can only be programmed by an engineer

35 - 2nd Zone = Confirm

After the entry timer has expired, activation of 2 more zones is required to generate a Confirmed alarm

1st Zone = Confirm

After the entry timer has expired, activation of 1 more zone is required to generate a Confirmed alarm

36 - Keypads Global

Keypads show information for all areas.

Keypads Local

Keypads only show information that is relative to the area that the keypad is assigned to.

37 - Panel Grade 3

All options relating to PD6662: 2004/EN 50131-1 Grade 3 are enabled automatically. Also, the Premier Anti-code reset becomes a 6-digit number and all user codes can only be programmed as 5 or 6 digits, see page 29 for details.

Panel Grade 2

All options relating to PD6662: 2004/EN 50131-1 Grade 3 that are not required for Grade 2 are disabled automatically. Also, the Premier Anti-code reset becomes the standard 4 digit number and all user and engineer codes can be 4, 5 or 6 digits.

38 - Disable FOB PA

When a 'RadioPlus' Transmitter FOB is being used with the alarm system, the Panic Alarm (PA) function i.e. Pressing buttons 1 and 2 together, is disabled.

Enable RF FOB PA

When a 'RadioPlus' Transmitter FOB is being used with the alarm system, the Panic Alarm (PA) function i.e. Pressing buttons 1 and 2 together, is enabled.


39 - Armed Mask=Fault

If an Anti-masking signal is detected when the system is armed, the control panel will generate a Fault response.

Armed Mask=Alarm

If an Anti-masking signal is detected when the system is armed, the control panel will generate an Alarm response.

System Options

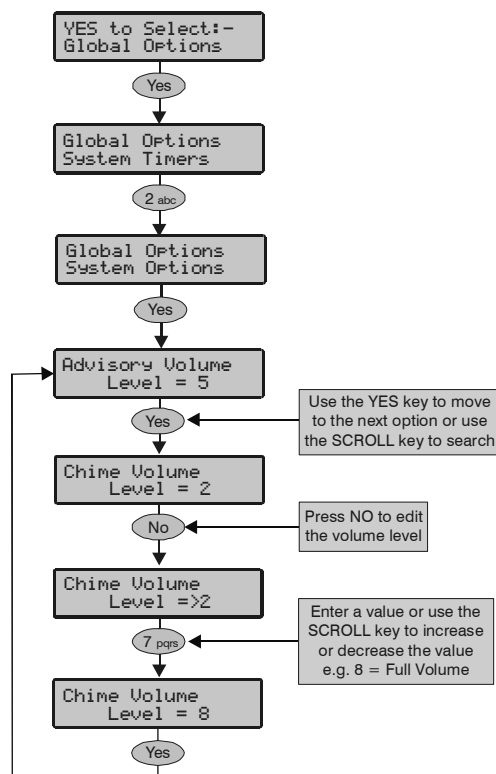

These options control various system functions.

1 - Advisory Volume

Controls the volume of advisory tones (entry/exit etc.) from loudspeakers connected to the control panel (Alarm tones are always full volume). 1 = min, 8 = max.

2 - Chime Volume

Controls the volume level of Chime tones from ALL loudspeakers. 1 = min, 8 = max.

3 - No. Of Re-Arms

Controls the number of times that a zone will re-arm. Once the re-arm limit has been reached, the zone is 'Locked Out' and will not cause any further Intruder alarms.

4 - Anti-code Resets

Limits how many times a user can perform an Anti-code reset. Once this limit is been reached, the system can only be reset using an Engineer code. This counter is reset every month or whenever an Engineers code is entered.

5 - Multiple Knocks

Controls how many times, a zone with the 'Double Knock' attribute, must be activated, before an alarm occurs. The multiple knock count can be applied to zones on an area basis, see page 44 for details.

6 - Clock Adjustment

Adjusts the accuracy of the clock by subtracting or adding time in seconds at midnight every night. 0 = -50, 50 = 0 (no correction), 100 = +50.

7 - Quick Count


Set the number of 10milli Second pulses that are required within 30 Seconds in order for a zone with the 'Quick Response' attribute to activate.

8 - Modem Level

When using a Com2400 this option allows adjustment to the attenuation of the modem.

Modem Level	2	1	0	7	6	5	4	3
Attenuation (dB)	+4	+2	0	-2	-4	-6	-8	-10

Monitor Hardware

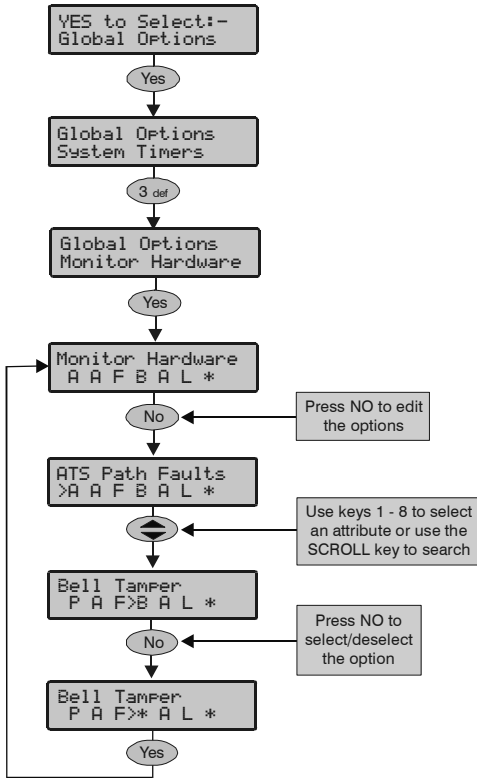

The control panel monitors many inputs for fault conditions i.e. the panel lid tamper, bell tamper, aux fuse etc.

Each one of these options can be disabled to overcome problems related to the devices being monitored.

P - ATS Path Faults

The Alarm Transmission System is monitored for faults.

A - AC Power Failure

The AC Mains is monitored for faults.

F - Aux Fuse Blown

The Auxiliary Fuse/PTC is monitored for faults.

B - Bell Tamper

The external sounder tamper loop is monitored for faults.

A - Aux Tamper

The auxiliary tamper loop is monitored for faults.


L - Panel Lid Tamper

The control panel lid tamper is monitored for faults.

B - Battery Faults

The battery is monitored for faults.

Control Timers

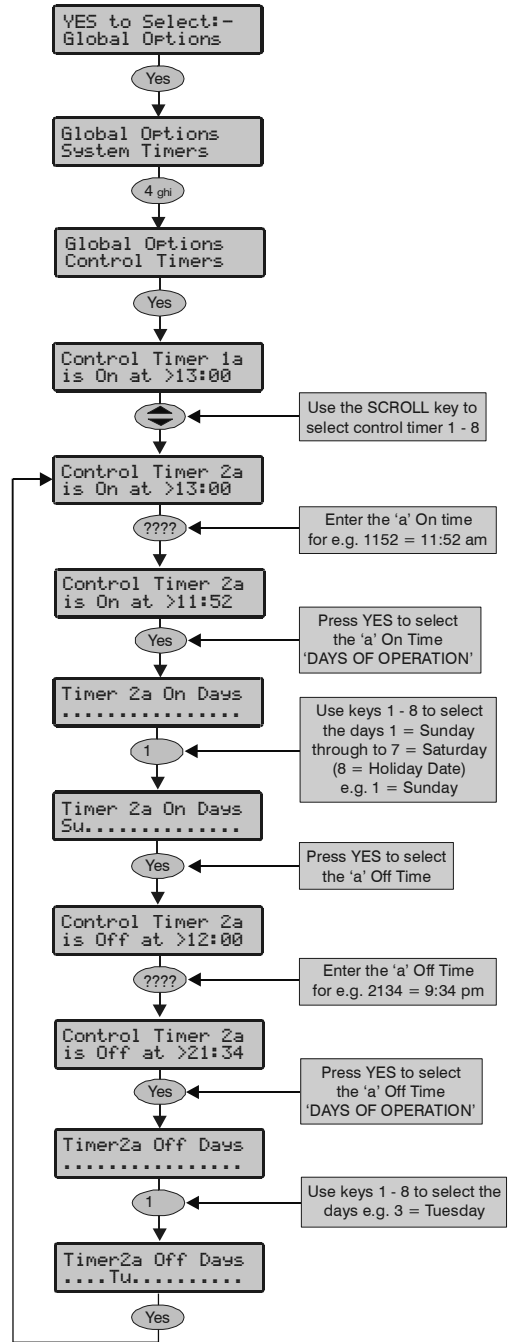


The Premier 48 has 4 control timers and the Premier 88, 168 and 640 all have 8 control timers. Each timer has two ON and OFF times (a & b), and can be programmed to operate on any day of the week. Once configured, the timers can be used to arm or disarm areas, lockout users and control outputs.



When programming the Control Timers ON time, pressing (Chime) will bring a '*' up on the display. This '*' indicates that the internal sounders will chime every time the Control Timers ON time is reached.

When programming the Control Timers DAYS of operation, pressing (8_{HO}) will bring 'HO' up on the display. This 'HO' indicates that the control timer will operate on any programmed Holiday date.

System Text

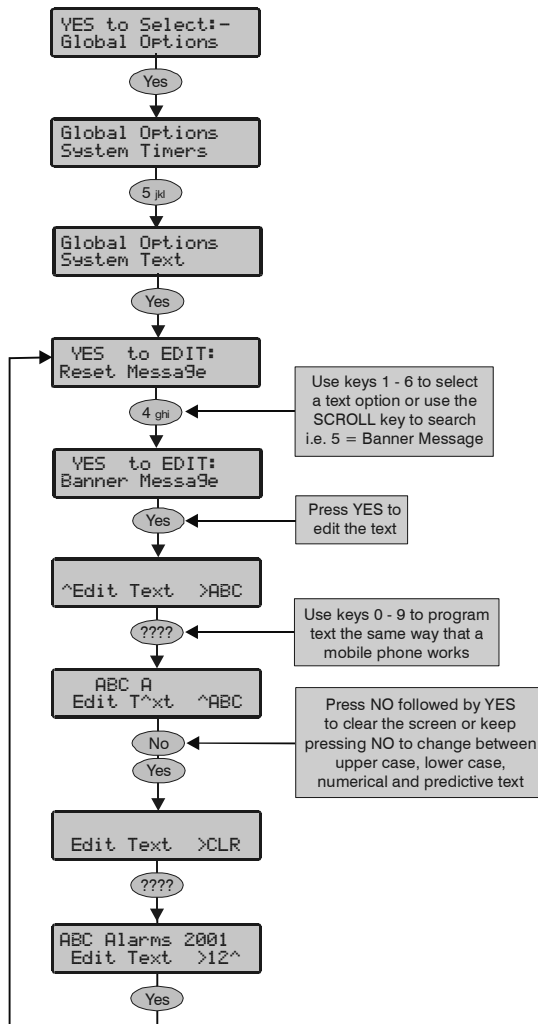

The system has 7 programmable messages.

1 - Reset Message

This 32-character message is displayed whenever the control panel requires an Engineer reset.

2 - Anti-code Msg.

This 32-character message is displayed whenever the control panel requires a Anti-code Reset.

3 - Service Message

This 32-character message is displayed whenever the control panel requires Daytime reset.

4 - Location Text

This 32-character message is displayed whenever the engineer views the location text in 'Engineer Utils'.

5 - Banner Message

This 16-character message is displayed above the time and date whenever the control panel is unarmed or fully armed.


6 - Part Arm Banner

This 16-character message is displayed above the time and date whenever the control panel is part armed.

7 - Printer Header

This 32-character header will be printed whenever a log printout is taken from the control panel or a Short Message Service (SMS) text message is sent to a mobile phone.

Part Arm Text

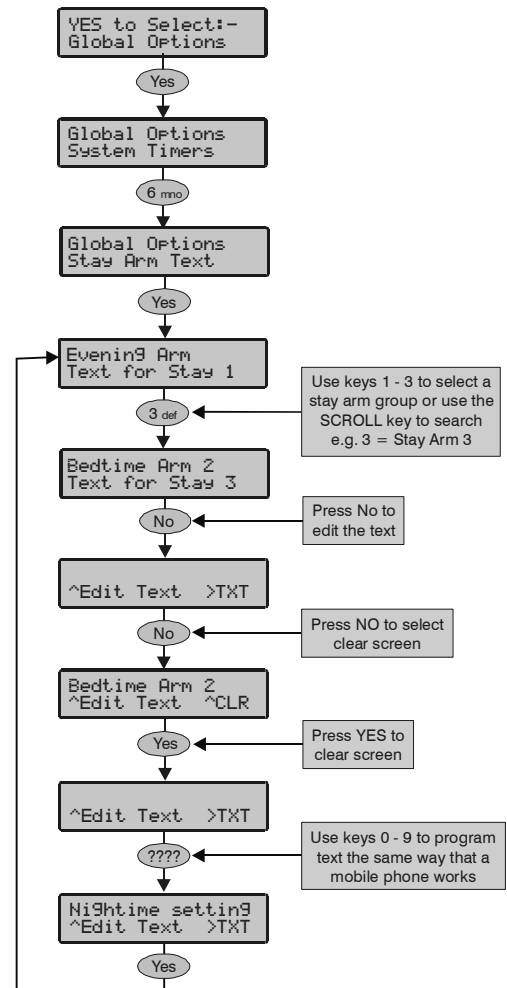


Text may be assigned to Part Arm 1, 2 or 3 to allow the user to select the correct Part Arm by description instead of number. A maximum of 16 characters can be programmed for each of the Part Arms.



The 3 Part Arm messages are global messages and will appear whenever one of the part arms are selected regardless of which area is being part armed.

Text is programmed in a similar way to mobile phones. Select characters by pressing the corresponding key the appropriate number of times (to select a character on the same key, press to move the cursor along).

Holiday Dates

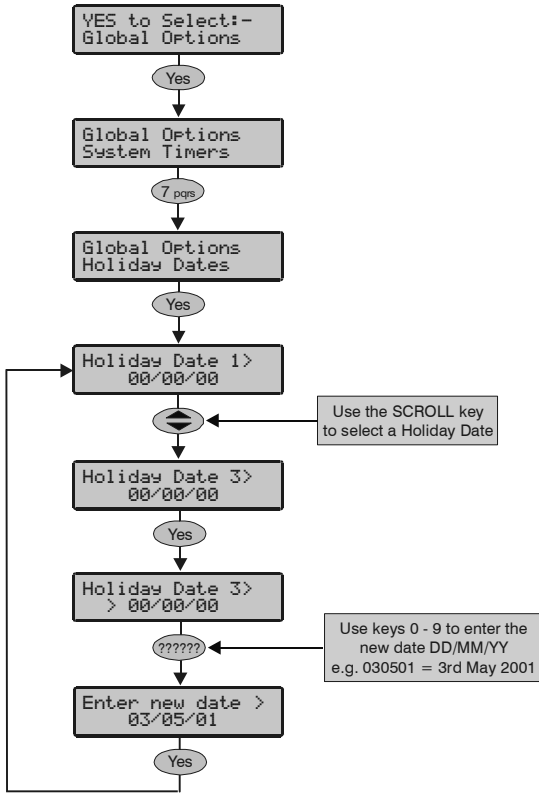

The system has 8 programmable holiday dates.

The holiday dates are pre-defined dates on which the Control Timers will not operate.


Example

Control Timer 1 is programmed to operate between the hours of 8pm and 8am on Monday through to Friday (for the purpose of arming the control panel).

Because Bank Holidays normally fall on Mondays the panel would disarm itself leaving the premises unprotected.

- Christmas day 2001 falls on a Tuesday
- Under normal conditions the Control Timer will operate on a Tuesday
- The 25/12/01 is programmed as a Holiday Date
- The Control Timer does not operate on Tuesday 25th December 2001 and the premises remains protected at all times

Speaker Tones

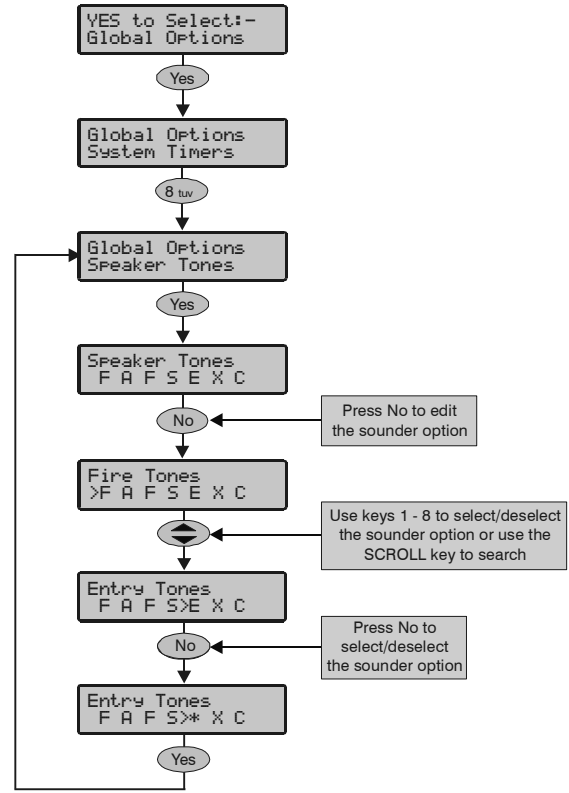

The speaker output on the control panel can be programmed so that certain types of tones are not generated. When deselected, Fire, Alarms, Fault, Service, Entry, Exit and Chime tones will not be heard.

Select tones by pressing keys 1 to 8 (a letter on the display means the tone is selected, a Dot on the display means the tone is not selected).

F - Fire Tones On

Fire alarm tones will be generated by the control panel sounder/speaker.

A - Alarm Tones On

Intruder alarm, Tamper alarm and PA alarm tones will be generated by the control panel sounder/speaker.

F - Fault Tones On

Fault tones will be generated by the control panel sounder/speaker.

S - Service Tone On

Service and Warning tones will be generated by the control panel sounder/speaker.

E - Entry Tones On

Entry tones will be generated by the control panel sounder/speaker.


X - Exit Tones On

Exit tones will be generated by the control panel sounder/speaker.


C - Chime Tones On

Chime 1, 2 and 3 tones will be generated by the control panel sounder/speaker.


PC Output Text

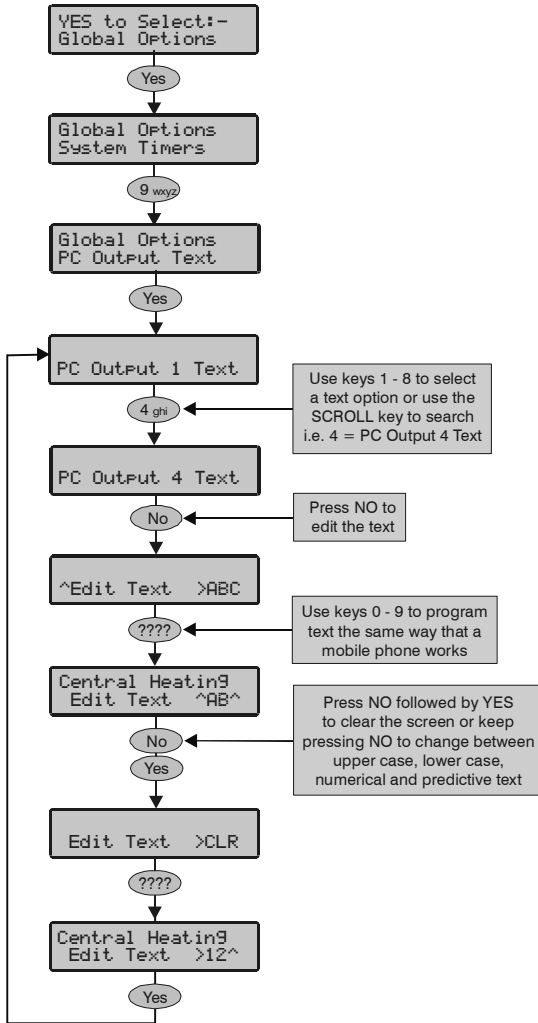

Text may be assigned to PC Control Outputs 1 to 8 to allow the user to select the correct Output by description instead of number. A maximum of 16 characters can be programmed for each of the PC Outputs.

Text is programmed in a similar way to mobile phones. Select characters by pressing the corresponding key the appropriate number of times (to select a character on the same key, press  to move the cursor along).


Custom O/P Text

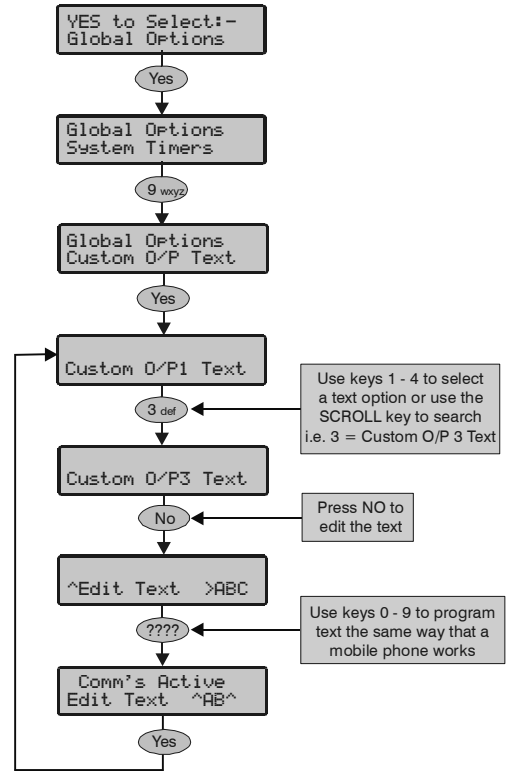


Text may be assigned to Custom Outputs 1 to 4 to allow indication on the keypads display when the output is active (see page 66 for details).



Outputs 1 & 2 are silent and outputs 3 & 4 give an audible warning every 30 seconds for 3 minutes or until a code is entered or RESET is pressed.

Text is programmed in a similar way to mobile phones. Select characters by pressing the corresponding key the appropriate number of times (to select a character on the same key, press  to move the cursor along).

5.4 Keypad Setup

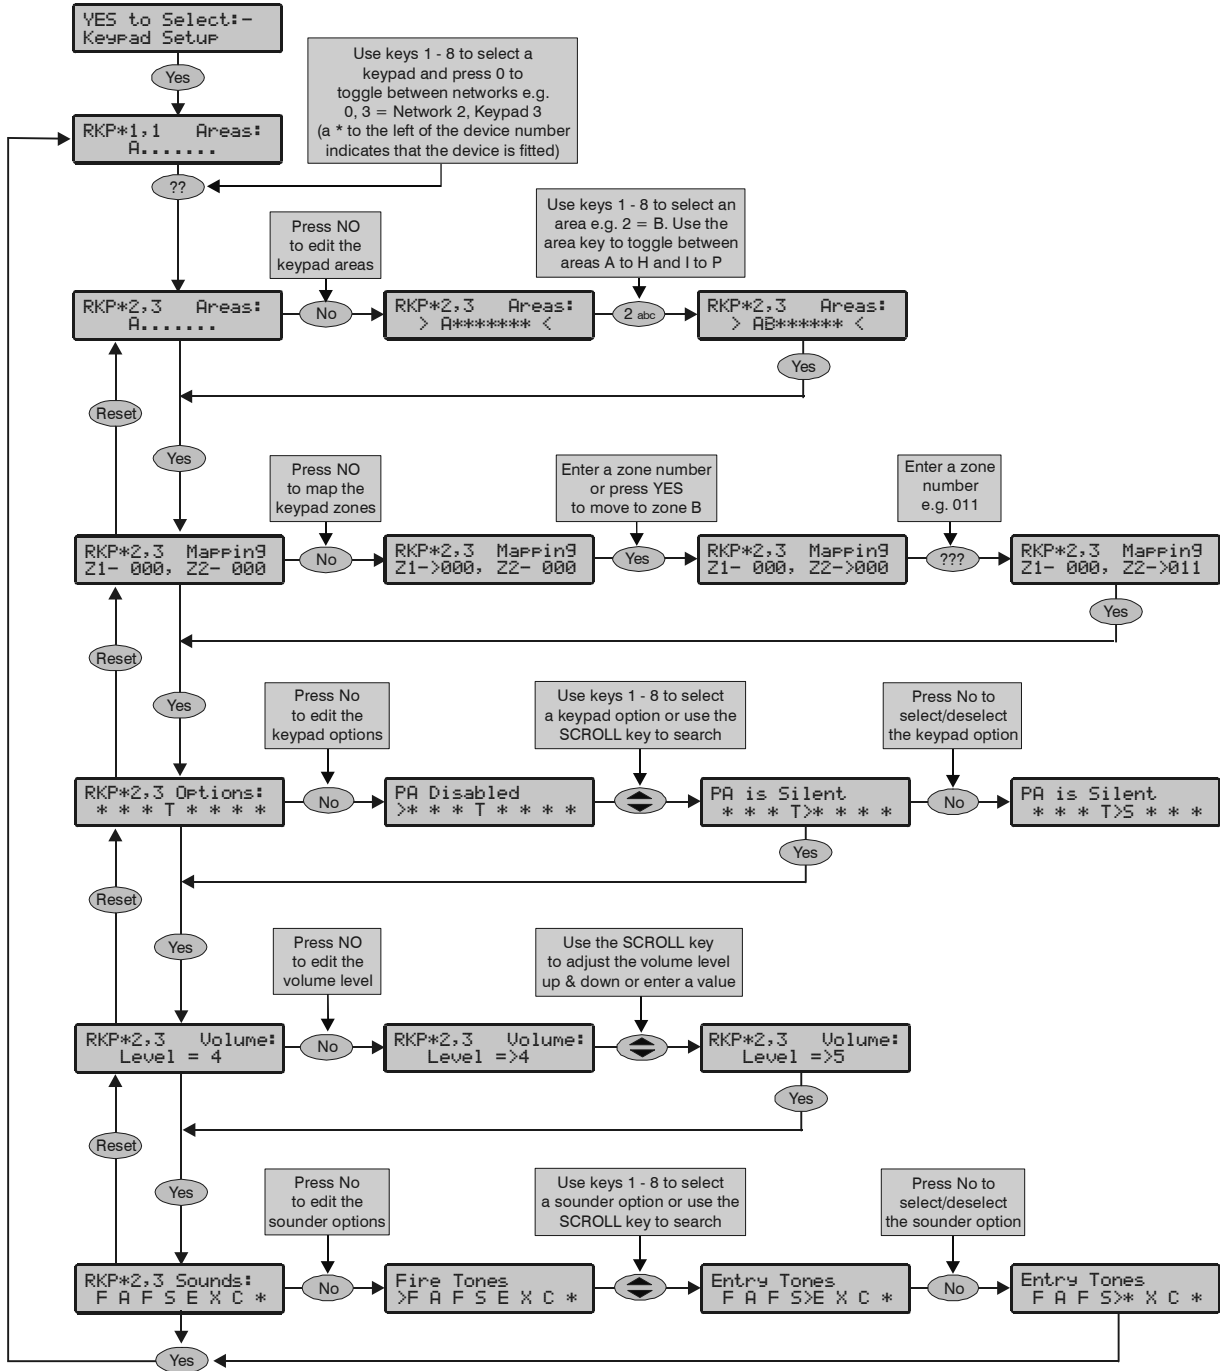

Keypad Areas

Keypads can be assigned to any number of areas, assigning a keypad to an area determines:

- Which areas the sounder and speaker output in the keypad will generate tones for i.e. if the keypad is assigned to areas A and C, the sounder/speaker will only operate when areas A or C are in alarm, entry, exit etc.
- Which areas can be armed or disarmed from that keypad when using codes that have the 'Local Arming' or 'Local Disarming' attributes (see page 87 for details)
- Which areas will cause a Tamper alarm when the keypad cover is removed

Keypad Zone Mapping

The zones in the keypad need to be mapped to a valid zone number (1 to 48 *Premier 48*, 1 to 88 *Premier 88*, 1 to 168 *Premier 168* or 1 to 640 *Premier 640*) before they can be used as part of the system i.e. Keypad 1 Zone 1 could be mapped to Zone 5 (panel) and Zone 2 could be mapped to Zone 25 (expander 3) etc.



Until mapped, the zones in the keypads will not work.

A keypad zone can be mapped to any zone number on the system, however, when mapped to a zone number that already exists i.e. Zone 5 (panel), that zone can no longer be used.

If a zone is mapped to a zone number not already on the system i.e. Zone 25 (expander 3) and expander 3 is then added, that zone on the expander (Zone 25) cannot be used. If you wish to use the zone on the expander, the keypad zone must be remapped to a different number.

If a zone is remapped to a different number, the new zone number must be treated as a new zone on the system and therefore needs to be programmed accordingly (the zone programming will NOT automatically follow the mapping).

Keypad Options

These 8 options control various keypad functions:

Select options by pressing keys 1 to 8 (a letter on the display means the option is selected, a Dot on the display means the option is not selected).

P - PA Enabled

Pressing keys 1 & 3 together will cause a PA alarm.

F - Fire Enabled

Pressing keys 4 & 6 together will cause a Fire alarm.

M - Medical Enabled

Pressing keys 7 & 9 together will cause a Medical alarm.

T - Tamper Enabled

Removing the keypad cover will cause a Tamper alarm.

A - PA is Audible

A keypad PA (1 & 3) will cause an audible PA alarm.

D - PA is Delayed

When the keypad PA buttons (1 & 3) are pressed, the 'Keypad PA Delay' timer starts, if a User code is entered before the timer expires, no PA alarm will occur. If a User code is not entered before the timer expires, a PA alarm will occur (see page 48 for details).

Q - Quick Arm is Enabled

Pressing the Area or Part keys will Arm or Part Arm the areas that the keypad is assigned to without the need to enter a User code first.

O - Info.LED> Output

The 'Info.' LED on the keypad comes on when the keypad output activates and goes off when the keypad output deactivates.

Keypad Speaker Volume

This option controls the volume level of advisory tones from loudspeakers connected to the keypads. Advisory tones consist of 'Entry/Exit' and 'Warning' type tones. 1 = minimum; 8 = maximum.



Alarm tones are always full volume.

Keypad Sounder Options

The sounder and speaker output in the keypad can be programmed so that certain types of tones are not generated. When deselected, Fire, Alarms, Fault, Service, Entry, Exit and Chime tones will not be heard.

Select tones by pressing keys 1 to 8 (a letter on the display means the tone is selected, a Dot on the display means the tone is not selected).

F - Fire Tones On

Fire alarm tones will be generated by the keypad sounder/speaker.

A - Alarm Tones On

Intruder alarm, Tamper alarm and PA alarm tones will be generated by the keypad sounder/speaker.

F - Fault Tones On

Fault tones will be generated by the keypad sounder/speaker.

S - Service Tone On

Service and Warning tones will be generated by the keypad sounder/speaker.

E - Entry Tones On

Entry tones will be generated by the keypad sounder/speaker.

X - Exit Tones On

Exit tones will be generated by the keypad sounder/speaker.

C - Chime Tones On

Chime 1, 2 and 3 tones will be generated by the keypad sounder/speaker.


K - Use Keypad Areas

When selected, the keypad sounder and arming control is determined by the area that the keypad is assigned to.

When deselected, the keypad becomes an 'Area Arm Suite' controller (see page 40 for details). This allows different combinations of areas to be armed or disarmed depending on which keypad is used and operates as follows:

- Keypad 1 = Area Arm Suite 1, Keypad 2 = Area Arm Suite 2, Keypad 3 = Area Arm Suite 3 etc.
- When a User code is entered at a keypad, one of the 'Area Arm Suites' is selected (depending on which keypad was used) and the areas contained within that suite arm using the arming mode for that suite, the keypad sounder will also follow the areas defined by the suite.

5.5 Expander Setup

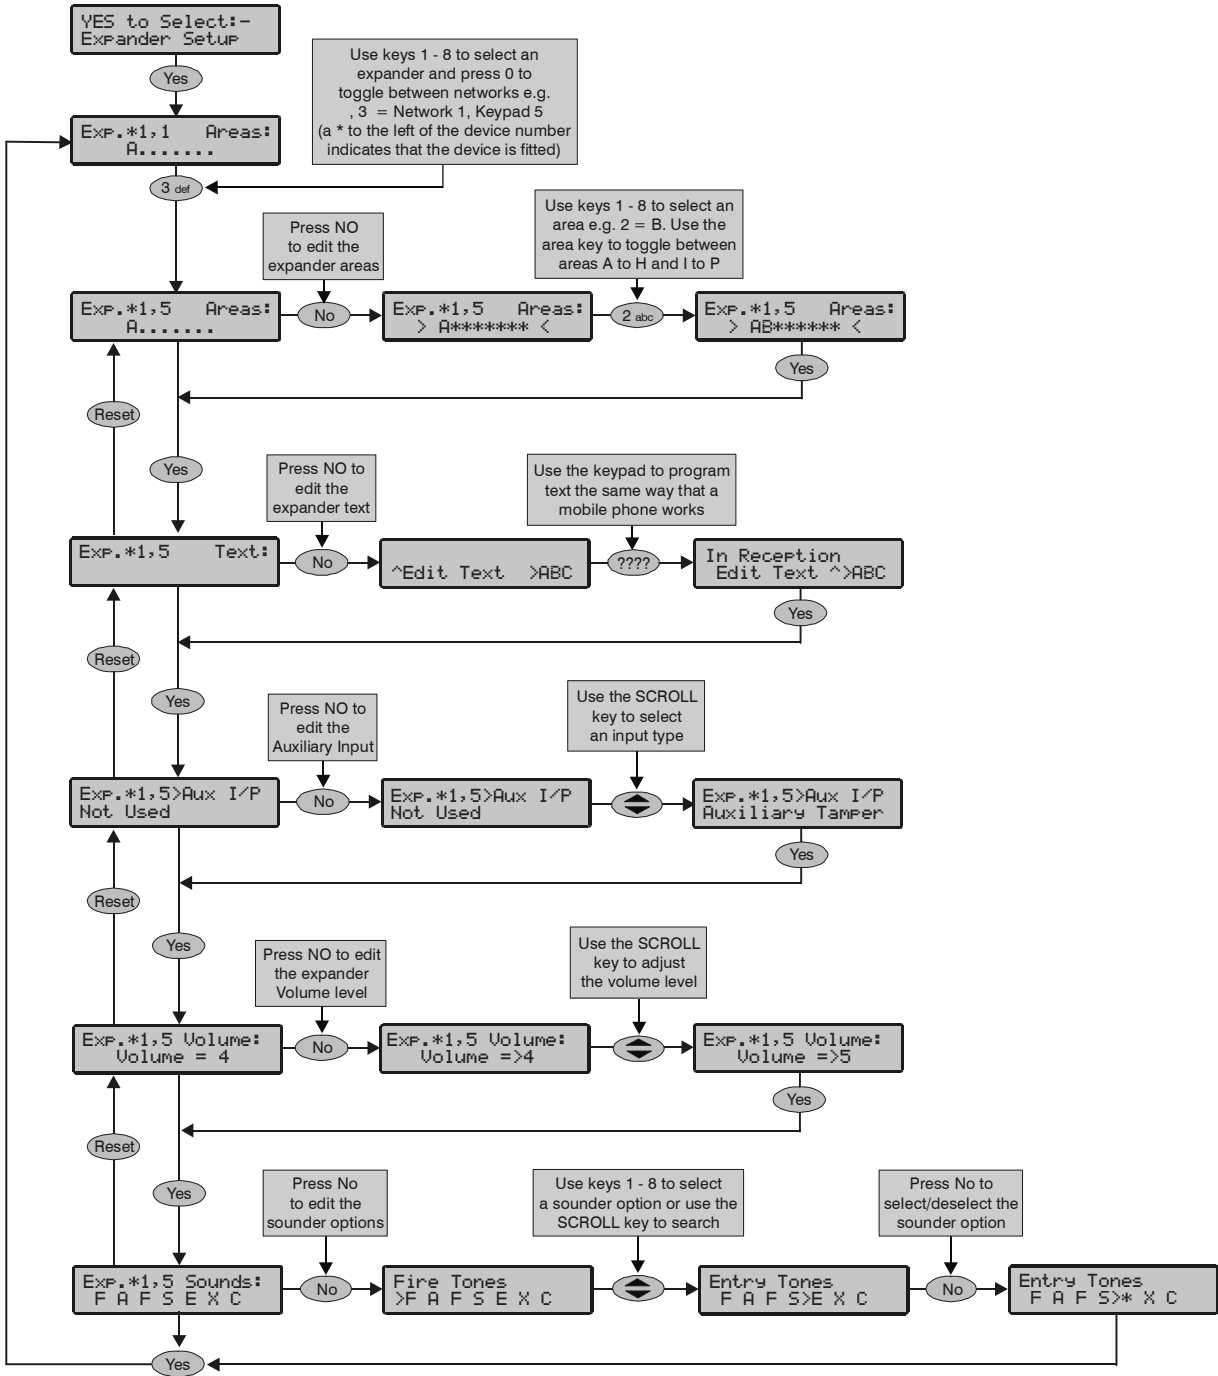


Expander Areas

Expanders can be assigned to any number of areas, assigning an expander to an area determines:

- Which areas the speaker output on the expander will generate tones for i.e. if the expander is assigned to areas A and C, the speaker will only operate when areas A or C are in alarm, entry, exit etc.
- Which areas will cause a Tamper alarm when the expander cover is removed

Expander Location Text

Each expander can be assigned up to 16 characters of text. This text can be used to describe where the expander is located within the building.

Text is programmed in a similar way to mobile phones. Select characters by pressing the corresponding key the appropriate number of times (to select a character on the same key, press the  key to move the cursor along).

Expander Auxiliary Input

Each expander has an input that can be programmed for one of the following options. If not being used, the input must be programmed as 'Not Used' (Default = Not Used).

Not Used

Never monitored by the system.

Auxiliary Tamper

Normally used for monitoring the box tamper of auxiliary devices such as power supplies etc (remove 0V for Tamper alarm).

Bell Tamper

Normally used for monitoring Bell Tamper returns (remove 0V for Tamper alarm).

Remote Reset

Normally used to reset the system/area following an Intruder alarm (the area must also be programmed for Anti-code reset) see page 43 for details (apply 0V to reset).

Line Fault +ve

Normally used to indicate a telephone line fault (remove 0V for Line Fault).

Line Fault -ve

Normally used to indicate a telephone line fault (apply 0V for Line Fault).

Silence Sounders

Normally used to silence the Internal sounders following an Intruder alarm and would be used in conjunction with Audio Verification units (apply 0V to silence).

Global Omit Key

Normally wired to a key switch. When the key switch is activated, all zones (with the 'Omit' attribute) assigned to the same area as the expander, will be omitted (apply 0V for omit).

Local Omit Key

Normally wired to a key switch. When the key switch is activated, all zones (with the 'Omit' attribute) wired to the expander, will be omitted (apply 0V for omit).

PSU Monitor

Normally used to monitor a Power Supply for faults, see page 22 for wiring details.

Defer Auto Arming

Normally used to defer the automatic arming of an area (apply 0V to defer).

Expander Speaker Volume

This option controls the volume level of advisory tones from loudspeakers connected to the expanders. Advisory tones consist of 'Entry/Exit' and 'Warning' type tones. 1 = minimum; 8 = maximum.



Alarm tones are always full volume.

Expander Sounder Options

The speaker output on the expander can be programmed so that certain types of tones are not generated. When deselected, Fire, Alarms, Fault, Service, Entry, Exit and Chime tones will not be heard.

Select tones by pressing keys 1 to 8 (a letter on the display means the tone is selected, a Dot on the display means the tone is not selected).

F - Fire Tones On

Fire alarm tones will be generated by the expander sounder/speaker.

A - Alarm Tones On

Intruder alarm, Tamper alarm and PA alarm tones will be generated by the expander speaker.

F - Fault Tones On

Fault tones will be generated by the expander speaker.

S - Service Tone On

Service and Warning tones will be generated by the expander speaker.

E - Entry Tones On

Entry tones will be generated by the expander speaker.


X - Exit Tones On

Exit tones will be generated by the expander speaker.

C - Chime Tones On

Chime 1, 2 and 3 tones will be generated by the expander speaker.

5.6 System Outputs

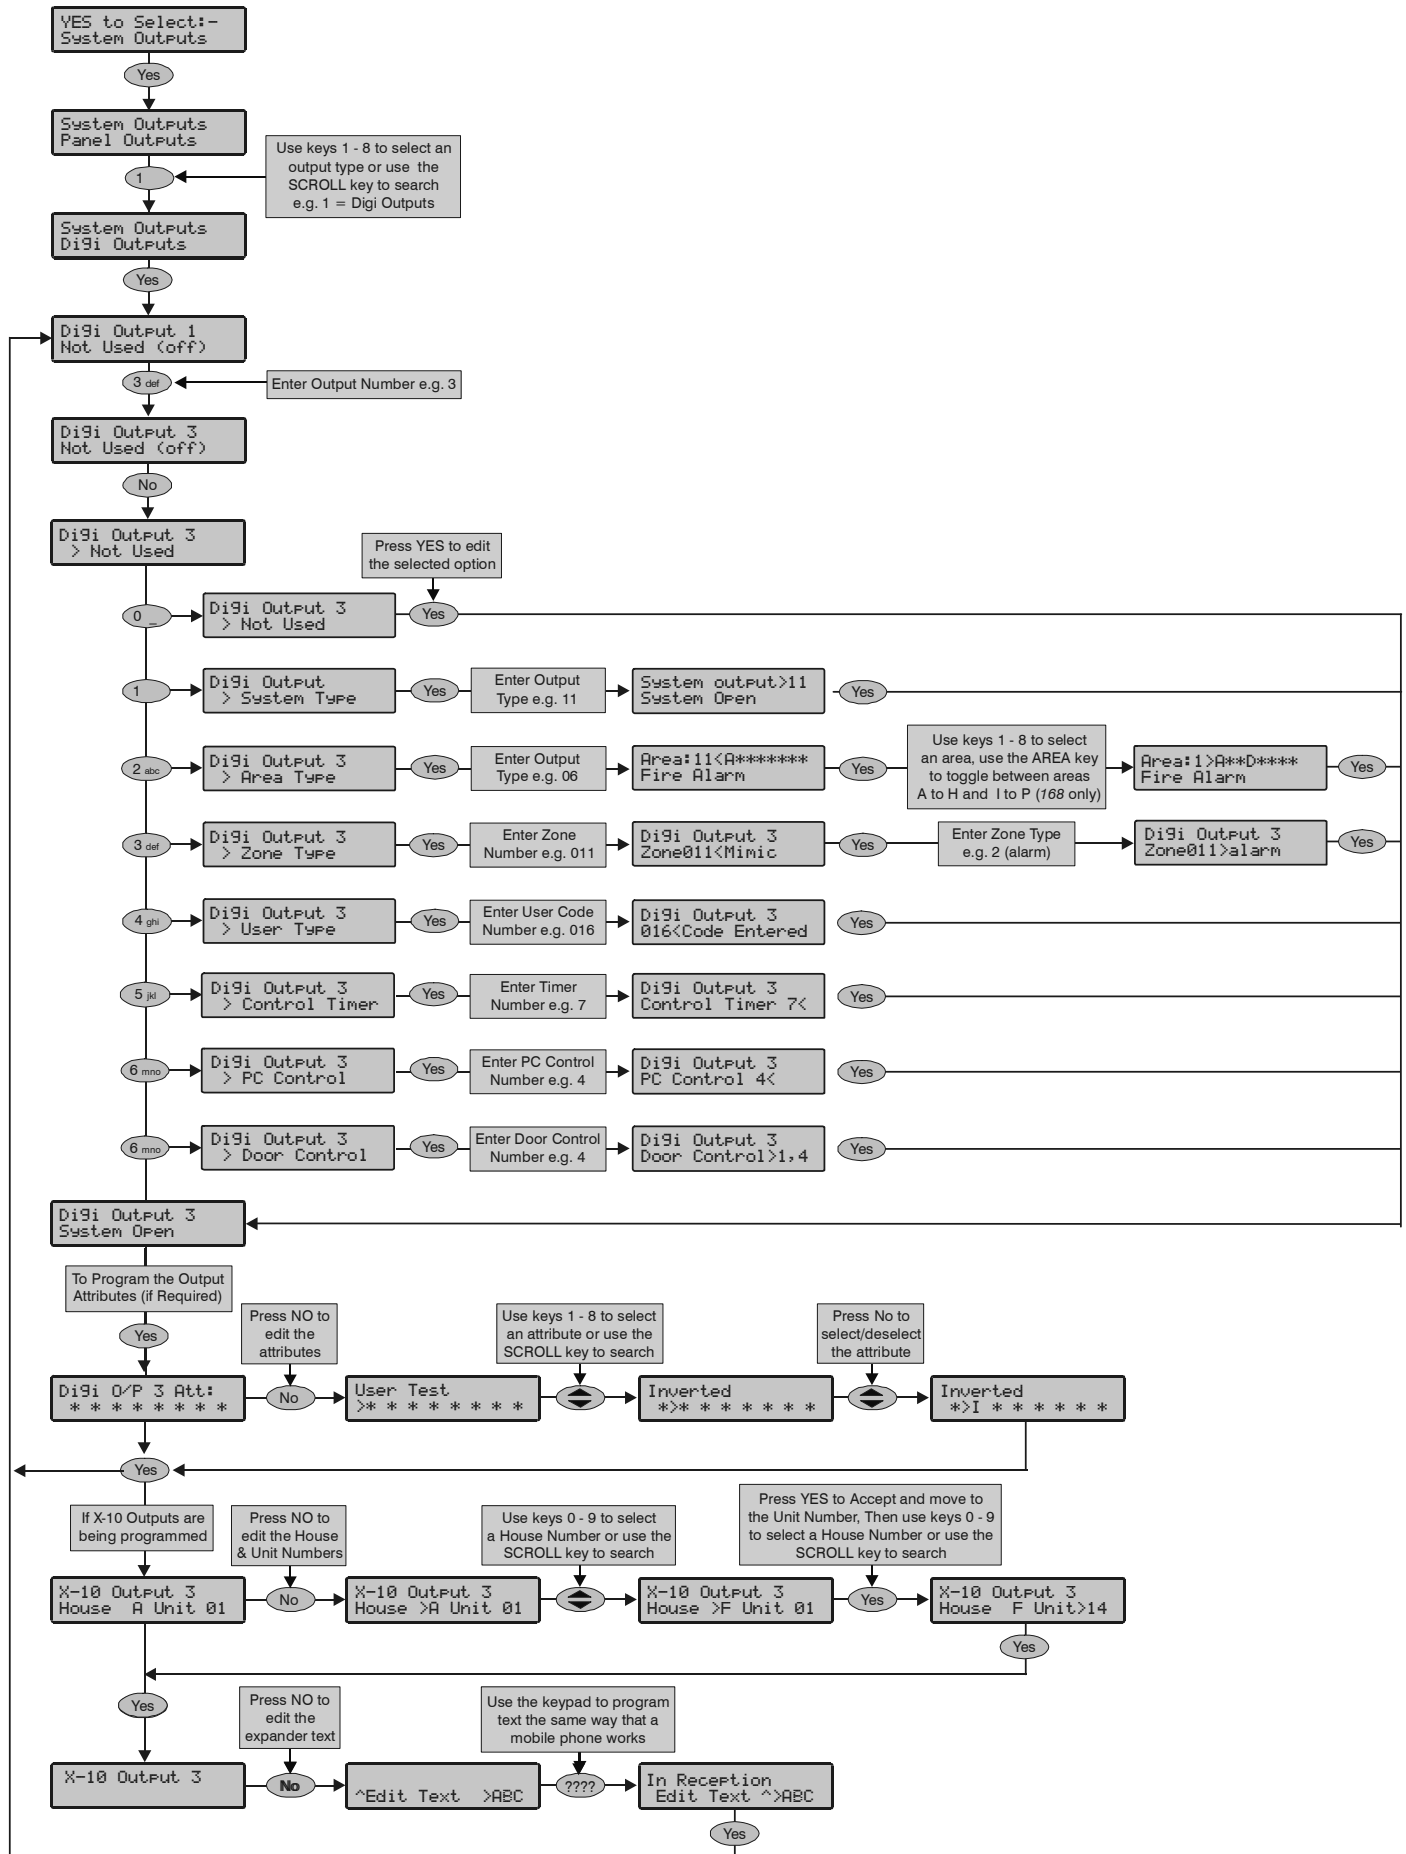

Available Outputs

Various sets of programmable outputs can be found on the control panel, keypads, expanders and output modules.

Panel Outputs

Panel outputs 1 - 5 are located on the top right hand corner of the control panel and can be programmed to any of the output types listed (see page 21 for wiring details).

Digi Outputs

Digi outputs 1 - 8 are located on the left hand side of the control panel and can be programmed to any of the output types listed (see page 21 for wiring details).

Digi Channels

Digi channels 1 - 8 are for the *Com300*, *Com2400* and *Com/SDN* plug-on communicators and can be programmed to any of the output types listed.

RedCARE/Relay Pins

RedCARE or Relay Pins 1 - 8 are for a plug on RedCARE or *RM8* Relay module and can be programmed to any of the output types listed.

Keypad Outputs

Keypad outputs are for the outputs on the remote keypads (see page 14 for details) and can be programmed to any of the output types listed. Wire as per Panel Outputs shown on page 21.

Expander Outputs

Expander outputs are for the outputs on the zone/output expanders (see page 15 for details) and can be programmed to any of the output types listed. Wire as per Panel Outputs shown on page 21.

Custom Outputs

Custom outputs are NOT physical outputs they are 'Software' outputs that can be configured to operate under certain conditions (see page 66 for details). Once configured these outputs can then be assigned to a physical output (see system outputs 22-27).

X-10 Outputs

X-10 outputs are NOT physical outputs they are 'Software' outputs that can be configured to operate devices that are connected to an X-10 controller. These outputs can also be assigned a house and unit number along with descriptive text. (see page 66 for details).

Programming Outputs

When programming outputs, select an output group and an output type from that group's list (each output group has its own output types) then select attributes (if required).



Output Group + Output Type + Output Attributes
= Output Programmed.

Output Group - Not Used

Only the following output type is available:

Not Used (off)

This output type never activates.

Output Group - System

Select an output type from the following options:

00 - ATS Path Fault

This output type activates when a fault is detected with the Alarm Transmission System and deactivates when the fault is cleared.

01 - Mains Power Off

This output type activates when no AC Mains is detected on the control panel and deactivates when mains is detected.

02 - Aux Fuse Blown

This output type activates when the Auxiliary fuse (F1) fails and deactivates when the system is reset.

03 - Bell Tamper

This output type activates when the control panel Bell tamper or an expander input (programmed as Bell tamper) is activated, causing a Tamper alarm on the system, and deactivates when the Tamper alarm is reset.

04 - Auxiliary Tamper

This output type activates when the control panel Aux tamper or an expander input (programmed as Auxiliary tamper) is activated, causing a Tamper alarm on the system, and deactivates when the Tamper alarm is reset.

05 - Panel Lid Tamper

This output type activates whenever the panel cover is removed, causing a Tamper alarm on the system, and deactivates when the Tamper alarm is reset.

06 - Engineer Working

This output type activates whenever an Engineer code is entered to access the programming menu and deactivates when the engineer logs off.

07 - Confirm Devices

This output type activates when the control panel requires devices to be confirmed and deactivates when the devices are confirmed (see page 94 for details).

08 - Service Required

This output type activates when the 'Service Interval' timer expires and deactivates when an Engineer code is entered (see page 47 for details).

09 - Bell Fuse Blown

This output type activates when the control panel bell fuse (F4) fails and deactivates when the system is reset.

10 - Battery Fault

This output type activates when the system detects a fault with the stand-by battery, and deactivates when the fault clears.

11 - Battery Test On

This output type activates when the 'Battery Test' starts, and deactivates when the test expires (see page 47 for details).

12 - Courtesy Light

This output type activates when the 'Courtesy' timer starts, and deactivates when the timer expires (see page 47 for details).

13 - System Open

This output type activates when all areas are unarmed, and deactivates when any area is armed.

14 - Fully Arm

This output type activates when the system is fully armed and deactivates when the system is disarmed.

15 - Digi Failed

This output type activates when the plug-on communicator fails to report to the Alarm Receiving Centre (after 3 dialling attempts), and deactivates the next time the communicator successfully reports to the Alarm Receiving Centre.

16 - Digi Successful

This output type activates when the plug-on communicator successfully reports to the Alarm Receiving Centre and deactivates the next time the communicator is triggered.

17 - Digi Active

This output type activates when the plug-on communicator is triggered and deactivates when the communicator shuts down.

18 - UDL Lockout

This output type activates when an attempt is made to upload/download with incorrect site details more than three times and deactivates after 4 hours or after a valid User code is entered.

19 - UDL Call Active

This output type activates when an upload/download is started and deactivates when the upload/download finishes.

20 - UDL Enabled

This output type activates when 'Enable UDL/Engineer' is enabled and deactivates when 'Enable UDL/Engineer' is disabled (see page 88 for details).

21 - Confirmed Alarm

If the system is already in alarm, this output type activates when a different zone (not on the entry route) is activated and deactivates at the end of the 'Confirmation' time, when a code is entered within the 'Abort' time or when the alarm is reset.

22 - Custom1 Stage A

This output type operates when 'Custom Output 1' Stage A activates and deactivates when 'Custom Output 1' Stage A deactivates.

23 - Custom1 Stage B

This output type operates when 'Custom Output 1' Stage B activates and deactivates when 'Custom Output 1' Stage B deactivates.

24 - Custom1 Stage AB

This output type operates when 'Custom Output 1' Stage A or B activates and deactivates when 'Custom Output 1' Stage A deactivates.

25 - Custom2 Stage A

This output type operates when 'Custom Output 2' Stage A activates and deactivates when 'Custom Output 2' Stage A deactivates.

26 - Custom2 Stage B

This output type operates when 'Custom Output 2' Stage B activates and deactivates when 'Custom Output 2' Stage B deactivates.

27 - Custom2 Stage AB

This output type operates when 'Custom Output 2' Stage A or B activates and deactivates when 'Custom Output 2' Stage A deactivates.

28 - Radio-Pad Failed

This output type activates when the radio pad fails to communicate with the Alarm Receiving Centre and deactivates when the radio pad successfully communicates.

29 - Radio Successful

This output type activates when the radio pad successfully communicates with the Alarm Receiving Centre and deactivates when the radio pad fails to successfully communicate.

30 - No Radio Signal

This output type activates when the Radio-Pads forward signal is lost and deactivates when the signal is regained.

31 - Radio-Pad Lost

This output type activates when the Radio-Pad stops communicating with its base station or the control panel and deactivates when communication starts again.

32 - Custom3 Stage A

This output type operates when 'Custom Output 3' Stage A activates and deactivates when 'Custom Output 3' Stage A deactivates.

33 - Custom3 Stage B

This output type operates when 'Custom Output 3' Stage B activates and deactivates when 'Custom Output 3' Stage B deactivates.

34 - Custom3 Stage AB

This output type operates when 'Custom Output 3' Stage A or B activates and deactivates when 'Custom Output 3' Stage A deactivates.

35 - Custom4 Stage A

This output type operates when 'Custom Output 4' Stage A activates and deactivates when 'Custom Output 4' Stage A deactivates.

36 - Custom4 Stage B

This output type operates when 'Custom Output 4' Stage B activates and deactivates when 'Custom Output 4' Stage B deactivates.

37 - Custom4 Stage AB

This output type operates when 'Custom Output 4' Stage A or B activates and deactivates when 'Custom Output 4' Stage A deactivates.

38 - Com 1 Fault

This output type activates when whatever is connected to Com Port 1 stops communicating with the control panel and deactivates when communication starts again.

39 - Com 2 Fault

This output type activates when whatever is connected to Com Port 2 stops communicating with the control panel and deactivates when communication starts again.

40 - Com 3 Fault

This output type activates when whatever is connected to Com Port 3 stops communicating with the control panel and deactivates when communication starts again.

41 - Com 1 No Signal

This output type activates when whatever is connected to Com Port 1 loses its signal and deactivates when its signal is regained.

42 - Com 2 No Signal

This output type activates when whatever is connected to Com Port 2 loses its signal and deactivates when its signal is regained.

43 - Com 3 No Signal

This output type activates when whatever is connected to Com Port 3 loses its signal and deactivates when its signal is regained.

44 - Coms Fault

This output type activates whenever any type of communication fault occurs i.e. No Signal, Com Port Fault, line fault etc. and deactivates when communication starts again.

45 - Radio Jamming

This output type activates whenever the wireless radio receiver detects a jamming signal and deactivates when the jamming signal is removed.

46 - Radio RX Tamper

This output type activates when the wireless radio receiver lid is removed, causing a Tamper alarm on the system, and deactivates when the Tamper alarm is reset.

47 - Detector Test

This output type is activated via Wintex to initiate a diagnostics check on an PD6662: 2004/EN 50131-1 Grade 3 detector and deactivates after 10 seconds.

48 - ATS Remote Test

This output type conforms to the BSIA Form 175 Specification. When a Line Fault is not present it can be activated remotely by Wintex, or by using the 'Test Call Timer' or 'Start Test Call' option on the control panel to initiate a test on ATE equipment that have an ATS test input. NOTE: Only the RedCare Line Fault and Control panel Line Fault inputs can be used with the output type.

49 - No ATS Available

This output type activates when no Alarm Transmission paths are available and deactivates when the fault is cleared.

50 - CIE Fault

This output type activates when a fault occurs on the CIE and deactivates when the fault is cleared.

51 - PSU Fuse Blown

This output type activates when the Auxiliary input type 'PSU Monitor' detects a 12V failure and deactivates when the fault is reset.

52 - PSU Battery Fit

This output type activates when the Auxiliary input type 'PSU Monitor' detects a battery fault and deactivates when the fault is reset.

Output Group - Area

Any number of areas can be assigned to each output type. Select an output type from the following options:

00 - Alarm

This output type activates when any type of Intruder alarm occurs in the selected area, and deactivates when the Intruder alarm is reset.

01 - Guard Alarm

This output type activates when a zone programmed as 'Guard' causes an Intruder alarm in the selected area and deactivates when the alarm is reset.

02 - Guard Access Alarm

This output type activates when a zone programmed as 'Guard Access' causes an Intruder alarm in the selected area and deactivates when the alarm is reset.

03 - Entry Alarm

This output type activates when a zone programmed as 'Entry/Exit 1 or 2' causes an Intruder alarm in the selected area and deactivates when the alarm is reset.

04 - Confirmed Alarm

If an area is already in alarm, this output type activates when a different zone (not on the entry route) is activated in the selected area and deactivates at the end of the 'Confirmation' time, when a code is entered within the 'Abort' time or when the alarm is reset.

05 - 24Hr Audible

This output type activates when a zone programmed as '24Hr Audible' causes an Internal alarm or Intruder alarm in the selected area and deactivates when the alarm is reset.

06 - 24Hr Silent

This output type activates when a zone programmed as '24Hr Silent' causes a silent alarm or Intruder alarm in the selected area and deactivates when the alarm is reset.

07 - 24Hr Gas

This output type activates when a zone programmed as '24Hr Gas' causes a Silent alarm or Intruder alarm in the selected area and deactivates when the alarm is reset.

08 - PA Alarm

This output type activates when any type of 'PA alarm' i.e. PA audible, PA silent or Duress causes a PA alarm in the selected area and deactivates when the alarm is reset.

09 - PA Silent

This output type activates when a zone programmed as 'PA Silent' or a keypad PA (1 & 3) causes a silent PA alarm in the selected area and deactivates when the alarm is reset.

10 - Duress

This output type activates when a User code with the 'Duress' attribute causes a silent PA alarm in the selected area and deactivates when the alarm is reset.

11 - Fire Alarm

This output type activates when a zone programmed as 'Fire' or a keypad Fire (4 & 6) causes a Fire alarm in the selected area and deactivates when the alarm is reset.

12 - Medical

This output type activates when a zone programmed as 'Medical' or a keypad Medical (7 & 9) causes a Medical alarm in the selected area and deactivates when the alarm is reset.

13 - Auxiliary Alarm

This output type activates when a zone programmed as 'Auxiliary' causes a Silent alarm in the selected area and deactivates when the alarm is reset.

14 - Tamper Alarm

This output type activates when any type of Tamper alarm occurs in the selected area and deactivates when the alarm is reset.

15 - Alarm Abort

If the selected area is in alarm, this output type activates when a User code is entered to cancel the alarm in the selected area and deactivates after 10 seconds.

16 - Ready

This output type activates when all zones in the selected area are secure and deactivates when any zone in the selected area is activated.

17 - Entry Mode

This output type activates when the selected area is in the entry mode and deactivates when the area is not in the entry mode.

18 - 2nd Entry Mode

This output type activates when the 2nd entry timer for the selected area starts and deactivates when the 2nd entry timer expires.

19 - Exit Mode

This output type activates when the selected area is in the exit mode and deactivates when the area is not in the exit mode.

20 - Entry/Exit Mode

This output type activates when the selected area is in the entry or exit mode and deactivates when the area is no longer in the entry or exit mode.

21 - Armed

This output type activates when the selected area is armed and deactivates when the selected area is disarmed.

22 - Full Armed

This output type activates when the selected area is fully armed and deactivates when the selected area is disarmed.

23 - Part Armed

This output type activates when the selected area is part armed and deactivates when the selected area is disarmed.

24 - Part Arming

This output type activates when the selected area is part arming and deactivates when the selected area arms.

25 - Force Arm

This output type activates when the selected area has at least one zone with the 'Force Omit' attribute assigned to it, and deactivates when the area has no zones with the 'Auto Omit' attribute assigned to it.

26 - Force Arming

This output type activates when the selected area is forced to arm with zones active, and deactivates when the zone is reinstated.

27 - Arm Failed

This output type activates when the selected area fails to arm because a zone is in fault, and deactivates when a valid User code is entered.

28 - Bell SAB

This output type activates when an External alarm occurs in the selected area, and deactivates when area is disarmed or the 'Bell Duration' timer expires.

29 - Bell SCB

This output type deactivates when an External alarm occurs in the selected area, and activates when area is disarmed or the 'Bell Duration' timer expires.

30 - Strobe

This output type activates when an External alarm (or Arm Fail) occurs in the selected area, and deactivates when area is disarmed (or a valid User code is entered).

31 - Detector Latch

This output type activates for 5 seconds when the selected area is in the exit mode then activates again when the area arms and deactivates when an Intruder alarm occurs or the selected area is disarmed.

32 - Detector Reset

This output type is normally active, and deactivates for 5 seconds when the selected area is in the exit mode.

33 - Walk Test Active

This output type activates when the 'Walk Test' procedure is selected, and deactivates when the 'Walk Test' procedure is cancelled.

34 - Zones Omitted

This output type activates when a zone in the selected area with the 'Omit' attribute, is omitted by the user, and deactivates when the zone is reinstated.

35 - 24Hr Zones Omit

This output type activates when a zone programmed as '24Hr Audible' or '24Hr Silent' (with the 'Omit' attribute) is omitted by the user, and deactivates when the zone is reinstated.

36 - Reset Required

This output type activates when the selected area requires a reset following an alarm, and deactivates when the alarm is reset.

37 - Door Strike

This output type activates for the 4 seconds when a User code with the 'Door Strike' attribute is entered for the selected area.

38 - Chime Mimic

This output type activates for 2 seconds when a zone in the selected area with the 'Chime' attribute is activated.

39 - Chime Enabled

This output type activates when 'Chime' is enabled for the selected area, and deactivates when 'Chime' is disabled for the selected area.

40 - DK First Knock

This output type activates when a zone in the selected area with the 'Double Knock' attribute is activated for the first time, and deactivates when the zone causes an alarm or the 'Double Knock Delay' timer expires.

41 - BP First Knock

This output type activates when a zone in the selected area with the 'Beam Pair' attribute is activated for the first time and deactivates when another zone with the 'Beam Pair' attribute, causes an alarm or the 'Beam Pair Time' expires.

42 - On Test

This output type activates when a zone in the selected area with the 'Test' attribute is placed on test and deactivates when the 'Soak Test Time' expires.

43 - Test Fail

This output type activates when a zone in the selected area with the 'Test' attribute is placed on test (and fails) and deactivates when an Engineer code is entered or the 'Soak Test Time' expires.

44 - Internal Alarm

This output type activates when an Internal alarm occurs in the selected area, and deactivates when the alarm is cancelled.

45 - Auto Arming

This output type activates when the selected area 'Auto Arms', and deactivates when the selected area is disarmed.

46 - Time Arming

This output type activates for 5 minutes prior to the selected area being armed using the 'Control Timers'.

47 - 1st Code Entered

This output type activates for 30 seconds when a User code with the 'Dual Code' attribute is entered for the selected area.

48 - 2nd Code Entered

This output type activates for 30 seconds when two User codes with the 'Dual Code' attribute are entered for the selected area.

49 - Area Secured

This output type activates whenever a 'Security Key' zone type is used to lock keypads out and deactivates when the keypads are unlocked again.

50 - Part Armed 1

This output type activates when a Part Arm 1 is selected for the selected area and deactivates when part arm 1 is disarmed.

51 - Part Armed 2

This output type activates when a Part Arm 2 is selected for the selected area and deactivates when part arm 2 is disarmed.

52 - Part Armed 3

This output type activates when a Part Arm 3 is selected for the selected area and deactivates when part arm 3 is disarmed.

53 - Custom Alarm

This output type activates when any 'Custom' zone type causes an alarm in the selected area and deactivates when a valid user code is entered.

54 - Zone Warning

This output type activates when 'Custom' zone type in the selected area with the 'Warning Req' attribute (see page 38 for details) is activated for the duration of the 'Warning Delay' timer (see page 48 for details) and deactivates when the zone activity is cleared.

55 - Arm Fail Warning

This output type activates when the selected area fails to arm after a period of time (controlled by the area exit time) when using 'Entry/Exit' or 'Exit Term.' arming and deactivates when the area arms.

56 - Forced Entry

This output type activates for the duration of the 'Forced Entry' timer (see page 48 for details) when any 'Guard' or 'Custom' zone with the 'Guard' attribute is activated (see page 37 for details),.

57 - Zones Locked Out

This output type activates when any zone is locked out following an Intruder Alarm activation and deactivates when all zones are clear and reinstated.

58 - All Areas Armed

This output type activates when all of the selected areas are armed and deactivates when any one of those areas is disarmed.

59 - Time Arm Disabled

This output type activates when the timed arming procedure is disabled (see page 38 for details) and deactivates when timed arming is reinstated.

60 - Armed/Alarm

This output type activates when the selected area is armed and deactivates when the selected area is disarmed

This output type also pulses when an Intruder alarm occurs in the selected area, and deactivates when the selected area is disarmed.

61 - Intruder Alarm

This output type activates when an Intruder alarm occurs, and deactivates when the Intruder alarm is cancelled.



NOTE Tamper alarms will not activate this output

62 - Speaker Mimic

This output type activates whenever the internal speaker output is on, and deactivates when the speaker output is off.

63 - Full Armed/Exit

This output type activates when the selected area is in the full arm exit mode and then arms and deactivates when the area is disarmed.

64 - Detector Fault

This output type activates when a detector fault occurs and deactivates when the fault is reset.

65 - Detector Masked

This output type activates when a detector mask occurs and deactivates when the mask is reset.

66 - Fault Present

This output type activates when a general fault occurs i.e. Line Fault, AC Mains Fail, Detector Fault etc. and deactivates when the fault is cleared.

67 - LED Control

This output type is always activate and deactivates when a User or Engineers code is entered to gain access to a menu. The output activates again 30 seconds after the user/engineer exits the menu. This output type is for use with detectors that require 0V applied to disable their LED's.

68 - Full Arm Entry

This output type activates when the entry mode is started and deactivates when the entry mode finishes whenever the system in Full Armed.

Output Group - Zone

Any zone can be assigned to this output type. Select a zone number from 1 to 48 (*Premier 48*), 1 to 88 (*Premier 88*) or 1 to 168 (*Premier 168*).then select an output type from the following options:

Mimic

This output type activates when the selected zone is activated and deactivates when the zone is secure. This output will work if the zone is armed or disarmed.

MimicArm

This output type activates when the selected zone is activated and deactivates when the zone is secured. This output will only work if the zone is armed.

Alarm

This output type activates when the selected zone causes an alarm and deactivates when the alarm is reset. This output will only work if the zone is armed.

Tamper

This output type activates when the selected zone causes a Tamper alarm and deactivates when the tamper is reset. This output will work if the zone is armed or disarmed.

MimicLat

This output type activates when the selected zone is activated and deactivates when the next time the zone is activated. This output will work if the zone is armed or disarmed.

Omitted

This output type activates when the selected zone is omitted and deactivates when the zone is reinstated.

Output Group - User Code Entered

Any user can be assigned to this output type. Select a user number from 1 to 25 (*Premier 48*), 1 to 50 (*Premier 88*) or 1 to 99 (*Premier 168*).

This output type activates for 5 seconds when the selected User code is entered.

Output Group - Control Timer

Select a Control Timer from 1 to 4 (*Premier 48*) or 1 to 8 (*Premier 88/168*).

These output types activate when the respective control timer turns on and deactivate when the timer turns off.

Output Group - PC Control

Select a PC Control from 1 to 4 (*Premier 48*), 1 to 8 (*Premier 88/168/640*).

These output types can be activated and deactivated using a PC running the *Wintex UDL* software.

Output Group - Door Control

Select a Door Control from 1,1 to 1,4 (*Premier 48*), 1,1 to 1,8 (*Premier 88*), 1,1 to 2,8 (*Premier 168*) or 1,1 to 8,8 (*Premier 640*).

These output types activate for the duration of the 'Door Strike' timer when a valid User code (assigned to the same door) is entered and deactivates when the timer expires.

These output types are used in conjunction with the 'Door Control' User option (see page 88 for details).

Output Attributes

Assigning an attribute to an output will alter how the output works. The following attributes can be assigned to any of the various types listed.

Select attributes by pressing keys 1 to 8 (a letter on the display means the attribute is selected, a 'Dot' on the display means the attribute is not selected).

U - User Test

The output will activate when a user performs a User test (see page 93 for details).

I - Inverted

The output is inverted (an output that applies 0V when active will become an output that applies 12V when active).

L - Latching

When activated, the output will remain on until a valid User code is entered.

1 - Use Pulse Period 1

When activated, the output will remain on for the duration of the 'Pulse Period 1' timer (see page 47 for details).

2 - Use Pulse Period 2

When activated, the output will remain on for the duration of the 'Pulse Period 2' timer (see page 47 for details).

3 - Use Pulse Period 3

When activated, the output will remain on for the duration of the 'Pulse Period 3' timer (see page 47 for details).

C - Only Active With Custom Output 1 Stage A

The output will only operate whilst 'Custom Output Stage A' is 'On' (see page 'Custom Outputs' for details).

R - Random

The output will activate randomly. A minimum and maximum 'On' time can also be programmed (see page 47 for details).

Custom Outputs

Custom outputs are NOT physical outputs they are 'Software outputs that can be configured to operate under certain conditions. Once configured these outputs can then be assigned to a physical output (see system outputs 22-27 and 32-37, page 62 for details).

Custom Output 1 - 4, Stage A


Will activate when switches 1 or 2 and 3 and 4 are active.

Custom Output 1 - 4, Stage B

Will activate when switches 5 or 6 and 7 and 8 are active.

Custom Output 1 - 4, Stage AB

Will activate when switches 1 or 2 and 3 and 4 are active **OR** switches 5 or 6 and 7 and 8 are active.

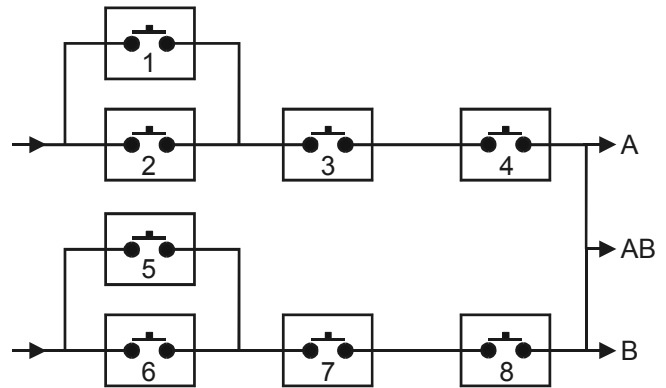

Example

Switch 1 is programmed as: **Zone 1 Mimic**

Switch 2 is programmed as: **Zone 2 Mimic**

Switch 3 is programmed as: **Armed**

Switch 4 is programmed as: **Never Active (and inverted)**



Custom Output 1 Stage A will only activate when switches 1 OR 2 AND 3 AND 4 are closed.

i.e. if ZONE 1 or ZONE 2 ACTIVATES whilst the system is ARMED (switch 4 is always closed).

Assign up to 16 Characters of text to each unit to allow easy identification when the output needs to be manually triggered directly from the keypad using the **Menu 9** command i.e. 'Entrance Light'.

X-10 Outputs

X-10 Outputs are outputs that can be configured to operate devices that are connected to an X-10 controller. These outputs can be assigned a house and unit number.

To Program an output for X-10, proceed as follows:


Program the output type to ensure correct operation when the programmed condition occurs i.e. an output programmed as 'Entry/Exit' will activate when the selected area is in the entry or exit mode and deactivate when the area is no longer in the entry or exit mode.

Assign any attributes i.e. 'Pulsed 1' would cause the output to be timed for the duration of the 'Pulse 1' timer.

Assign a House and Unit number i.e. this is the physical address of the X-10 Unit and ensures that the correct unit in the correct area operates when the output condition is met i.e. the correct unit switches on and off during Entry/Exit.


5.7 UDL/Digi Options

Reset Digi

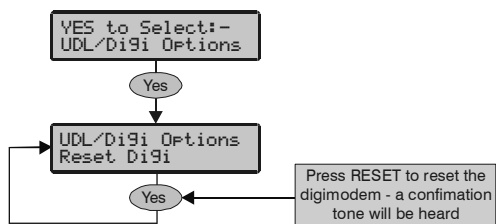


This option should be used whenever a *Premier* plug-on communicator is plugged on or removed from the control panel.

Start Test Call

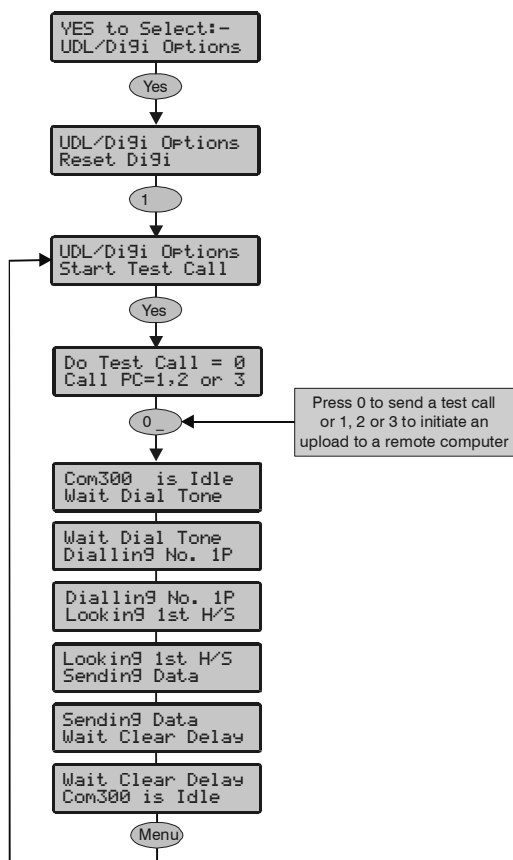

When a *Premier* plug-on communicator has been fitted to the control panel. This option can be used to send a test call to the Alarm Receiving Centre or to initiate a remote Upload/Download call to one of the programmed callback numbers.

MSN/Pre-Dial No.

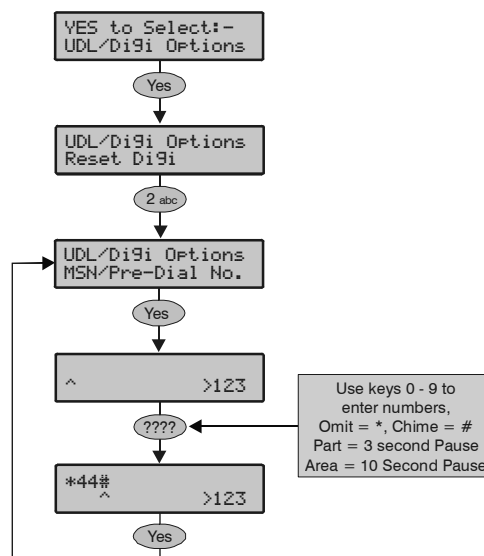


Use keys 0 - 9 to enter numbers, Omit = *, Chime = # Part = 3 second Pause Area = 10 Second Pause



When a *ComISDN* is connected to an extension of an ISDN line with more than 1 number, the direct dial number should be programmed in here, this ensures that the *ComISDN* will only answer a call when the direct dial number is dialled. This number can be up to 24 digits.

NOTE The Use MSN/Pre-Dial option must also be enabled (see page 71 for details).

When entering the telephone number the following extra keys can be used:

Program Digi

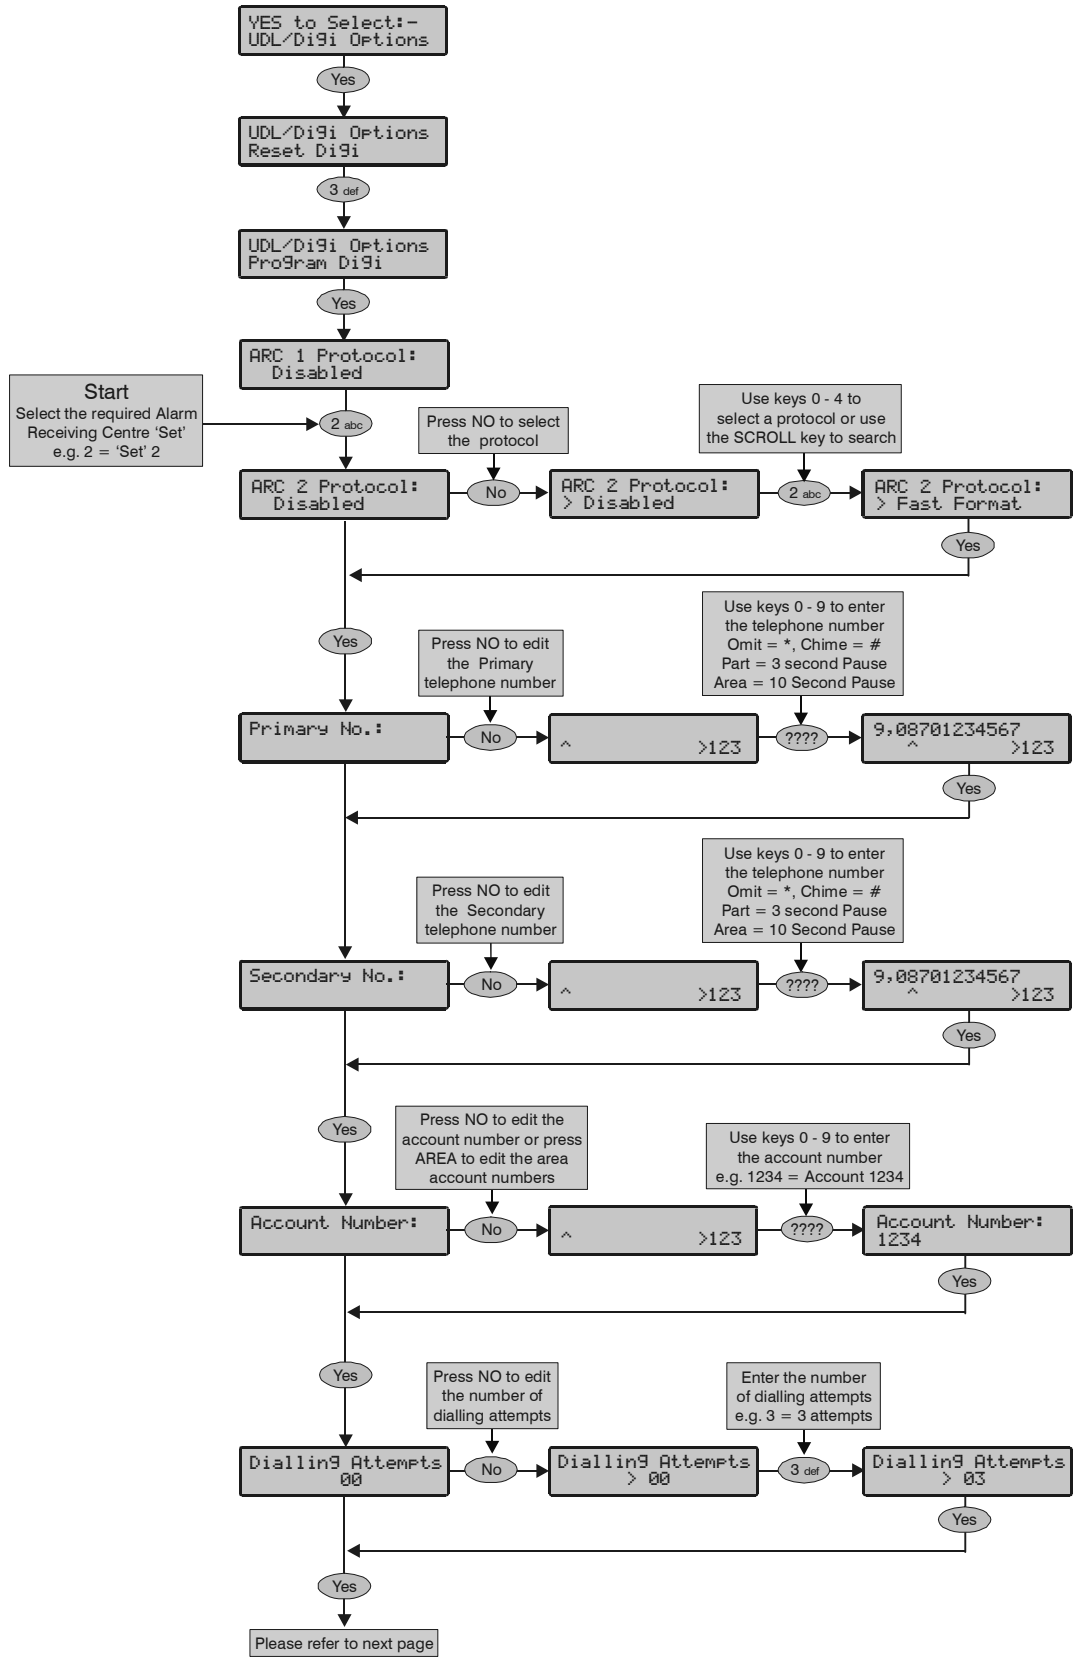

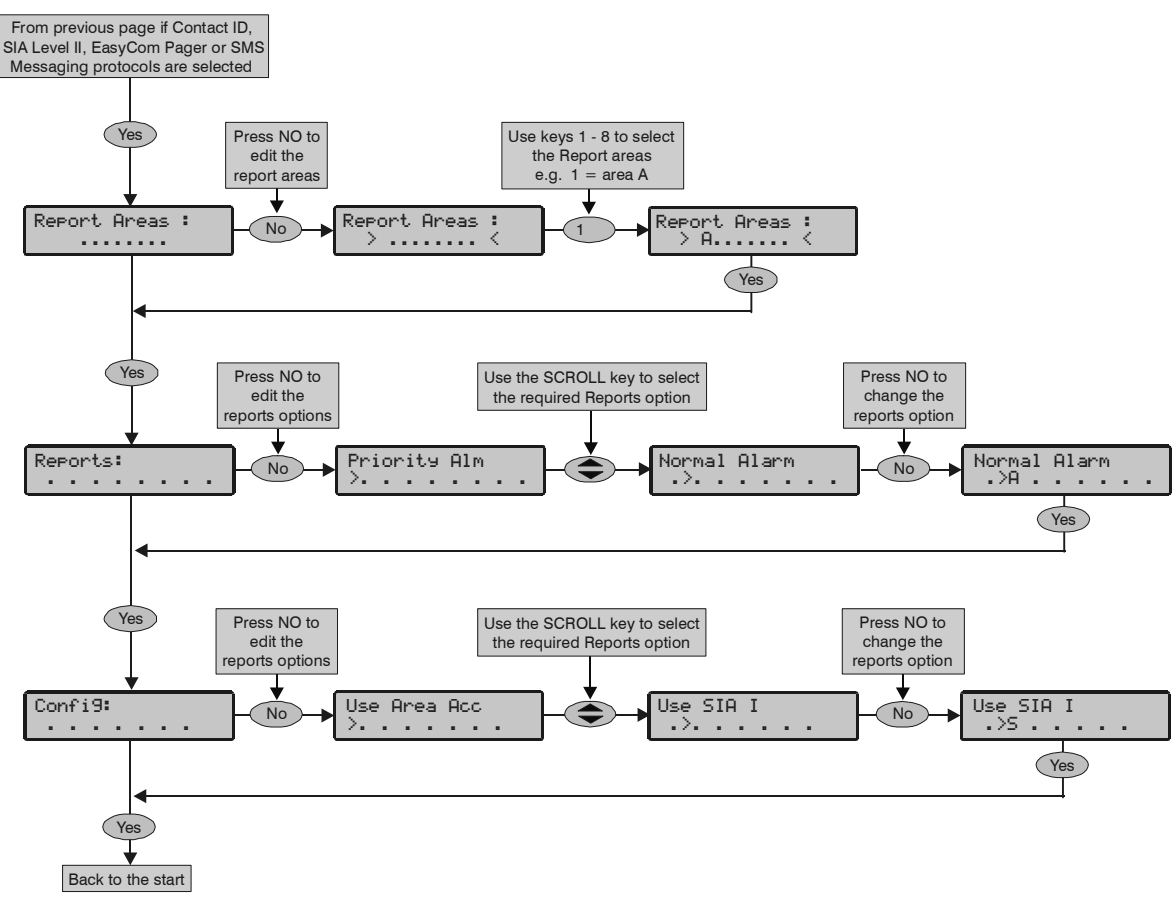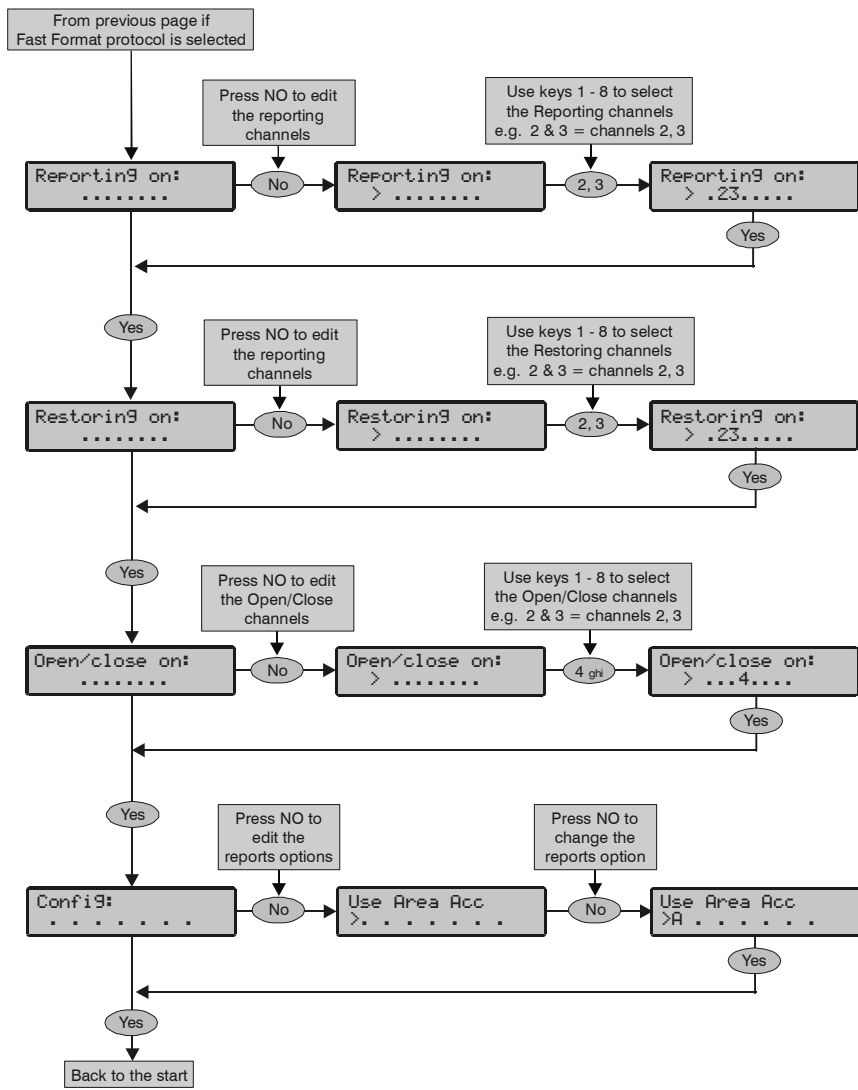

The plug-on communicator can be programmed to dial up to 3 sets of Alarm Receiving Centre (ARC) information. Each 'Set' consists of the following options:

Protocol

This is the reporting protocol that is used to communicate with the Alarm Receiving Centre. The following 4 protocols are supported:

- **Fast Format:** The panel will report using Fast Format. If this option is selected the 'Reporting Channels' must be programmed (see below)
- **Contact ID:** The panel will report using Contact ID. If this option is selected, the 'Reporting Areas' must be programmed (see below)
- **SIA Level II:** The panel will report using SIA Level II
- **EasyCom Pager:** The panel will report to an EasyCom type pager
- **SMS Messaging:** The panel will send Short Message Service (SMS) text messages to a mobile phone

Primary Telephone Number

This is the first telephone number that the communicator will dial for the Alarm Receiving Centre or the first mobile telephone number to send SMS to. Each telephone number can be up to 24 digits.

Secondary Telephone Number

This is the second telephone number that the communicator will dial for the Alarm Receiving Centre or the second mobile telephone number to send SMS to. Each telephone number can be up to 24 digits.

Account Number

This is the account number that will be reported to the Alarm Receiving Centre. Each account number can be up to 6 digits.



Each area can also have its own account number (see page 71 for details).

Dialling Attempts

This is the number of times the communicator will try to dial the Alarm Receiving Centre or Pager telephone number.



The number of dialling attempts is limited to 9. If this value is set to 0, the communicator will never dial out.

The following option is only displayed if the Fast Format protocol is selected

Reporting on

This option defines which channels report to the selected Alarm Receiving Centre.

Restoring on

This option defines which channels report a restore to the selected Alarm Receiving Centre.

Open/Close on

This option defines which channels report Open/Close to the selected Alarm Receiving Centre.

The following option is only displayed if Contact ID or SIA Level II protocols are selected

Reporting Areas

This option defines which areas report events to the selected Alarm Receiving Centre.

The following option is only displayed if Contact ID, SIA Level II or EasyCom Pager protocols are selected

Reports

This option defines which events report to the Alarm Receiving Centre when using Contact ID or SIA Level II.

P - Priority Alarm and Cancel Events

The system will report Priority alarm and cancel events to the selected Alarm Receiving Centre.

A - Normal Alarm and Cancel Events

The system will report alarm and cancel events to the selected Alarm Receiving Centre.

O - Open and Close Events

The system will report open and close events to the selected Alarm Receiving Centre.

B - Omit and Reinstate Events

The system will report omit and reinstate events to the selected Alarm Receiving Centre.

M - Maintenance Alarm Events

The system will report maintenance alarm events to the selected Alarm Receiving Centre.

T - Tamper Alarm Events

The system will report tamper alarm events to the selected Alarm Receiving Centre.

C - Test Call Events

The system will report test call events to the selected Alarm Receiving Centre.

R - Restore Events

The system will report restore events to the selected Alarm Receiving Centre.

The following option is only displayed if Fast Format Contact ID or SIA Level II protocols are selected

Config.

This option defines which secondary options are enabled.

A - Area Account

Events are reported to the Alarm Receiving Centre using the area account numbers (see page 71 for details).

S - SIA Level I / UCP

Events are reported to the Alarm Receiving Centre using SIA Level I or to an SMS Messaging Server using UCP.

R - Enable Radio-Pad

The system will use the Paknet radio-pad to report events to the selected Alarm Receiving Centre.

G - Enable GSM Module

The system will use the GSM Module to report events to the selected Alarm Receiving Centre.

A - AV Module

The AV Module will dial the Alarm Receiving Centre.

F - Use GSM First

The GSM module is the primary path when this is enabled


I - Connect Via IP

The system will use the IP Module to report events to the selected Alarm Receiving Centre.

T - Send SIA Text

Text is sent to the Alarm Receiving Centre when using SIA II (this makes the protocol SIA III)

Digi Options

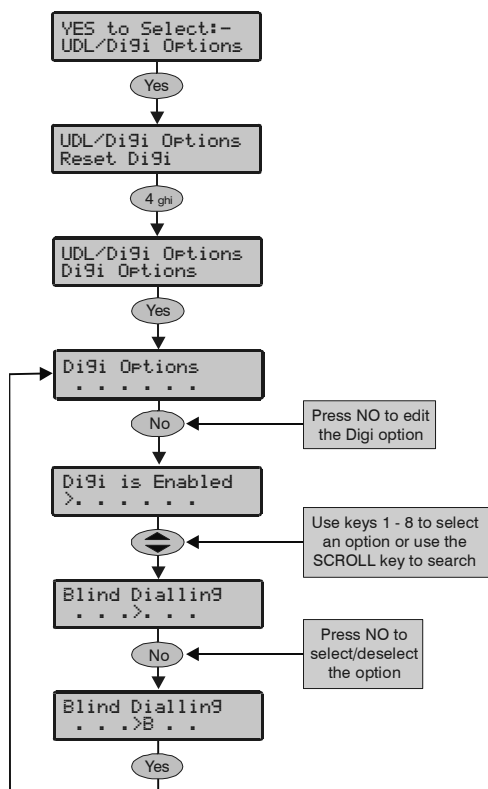

There are 6 options that control how the plug-on communicator works.

Select options by pressing keys 1 to 8 (a letter on the display means the option is selected, a Dot on the display means the option is not selected).

E - Digi is Enabled

The plug-on communicator will report all system events to the Alarm Receiving Centre.

P - Pulse Dialling

The plug-on communicator will always dial telephone numbers using pulse dialling.

3 - Pulse After 3

The plug-on communicator will always dial telephone numbers using tone dialling. However, if the Communicator fails to dial the number three times in a row, it will revert to pulse dialling for the remaining attempts.

B - Blind Dialling

The plug-on communicator will not look for a dial tone before dialling a telephone number.


U - Use MSN/Pre-Dial

The *Com/SDN* will only answer a call when the programmed MSN/Pre-Dial telephone number is dialled.

A - Dial All Numbers

If the communicator is acknowledged by the first ARC, it will continue to dial any other programmed ARC. This is normally used when a second or third ARC is programmed with SMS Messaging.

Area Accounts

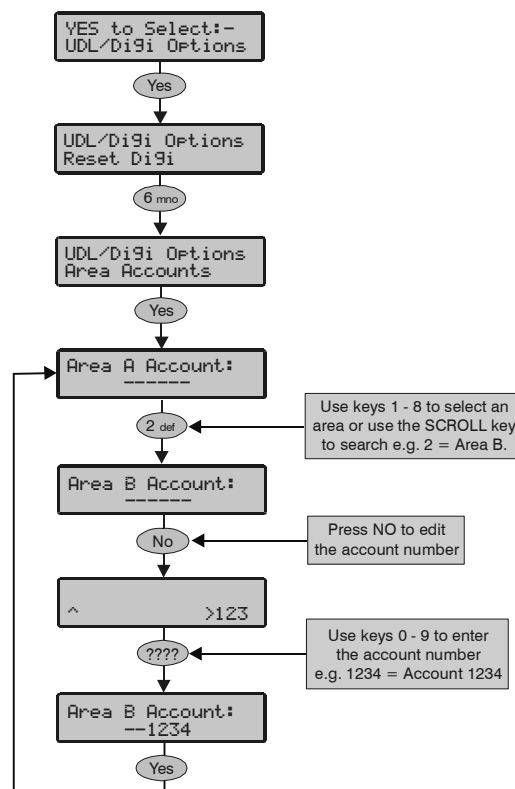

When using Fast Format, Contact ID or SIA, each area can have its own account number to identify events.


Account Numbers A to H (I to P)

This is the account number that will be reported to the Alarm Receiving Centre. Each account number can be up to 6 digits.



In order for the control panel to use the area account numbers, the area account Config. option must be enabled (see page 70 for details).

UDL Options

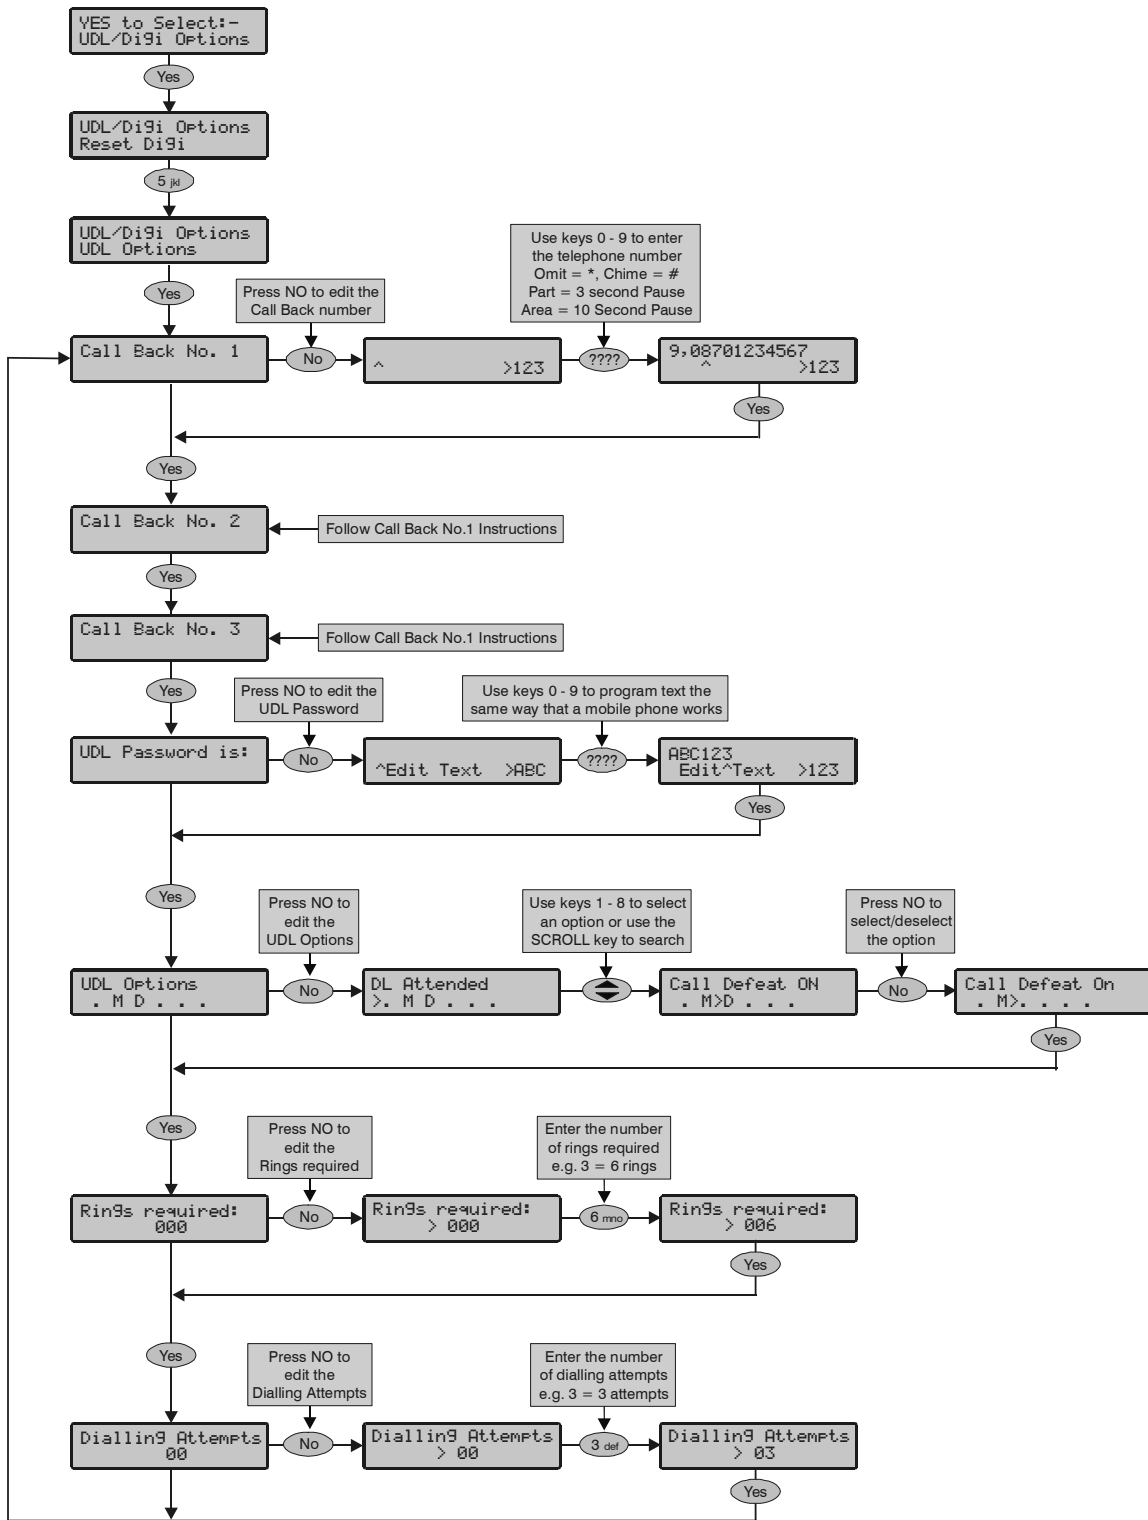

The system has the following UDL download options:

Download Call Back Number 1

This is the telephone number that is dialled by the modem when 'Call-back Number 1' is requested by the remote UDL computer. This telephone number can be up to 24 digits.

Download Call Back Number 2

This is the telephone number that is dialled by the modem when 'Call-back Number 2' is requested by the remote UDL computer. This telephone number can be up to 24 digits.

Download Call Back Number 3

This is the telephone number that is dialled by the modem when 'Call-back Number 3' is requested by the remote UDL computer. This telephone number can be up to 24 digits.

UDL Password is:

When the remote downloading computer dials into the system, the control panel compares the UDL password sent by the computer with UDL password stored in the control panel. If the passwords match, access to the control panel is granted, if they don't match, access is denied.



If more than three attempts at reporting are made with a wrong password, the modem will lock out for 4 hours or until a Master User code is entered.

The UDL password programmed in this option must also be programmed in the customer account on the remote downloading computer. This password can be up to 16 characters (numbers and letters).

If no UDL Password has been programmed, access to the control panel can be gained by using the engineers code as the UDL Password.

UDL Options

There are 6 UDL options that affect how and when access to the control panel via the *Wintex UDL* software is allowed.

Select options by pressing keys 1 to 6 (a letter on the display means the option is selected, a Dot on the display means the option is not selected).

The following UDL options are available:

A - DL Attended

The system will not allow the remote downloading computer access without user authorisation first.

M - Man Call-Back

The system will not use the automatic call back feature. The user must instruct the panel to call back the remote downloading computer.

The Auto Call-Back feature operates as follows:

- The remote downloading computer calls the control panel and establishes a connection
- The UDL password is verified and the remote downloading computer instructs the panel to call it back using one of the 3 call back numbers
- The panel hangs up and dials the requested number and re-establishes the connection with the remote downloading computer

D - Call Defeat

The modem will answer incoming calls as follows:

- The modem must detect one or more rings and the number of rings must NOT exceed the value set up in 'Rings Required'
- When the ringing stops, the panel will start a 30 second delay timer
- If the modem detects ringing before the timer expires it will answer the call immediately

L - Armed DL Limited

The panel will not allow download access when the system is armed (also see below).

A - Any Area Armed

The panel will not allow download access when any areas are armed.

K - Online RKP = Off

The control panel cannot be accessed using the 'On-line' keypad feature of the *Wintex UDL* software.

Rings Required

This counter controls the number of rings the modem needs to see before it will answer the call (Default = 003).

UDL Dial Attempt


If a 'Call-Back' is started, this option controls how many times the modem will try to call the remote downloading computer before giving up (Default = 003).



Enter the number of dialling attempts. This number is limited to 9. If this value is set to 0, the communicator will never dial out.

This only affects the modem for download access and does not affect the operation of the communicator in any way.

Radio/SMS Options

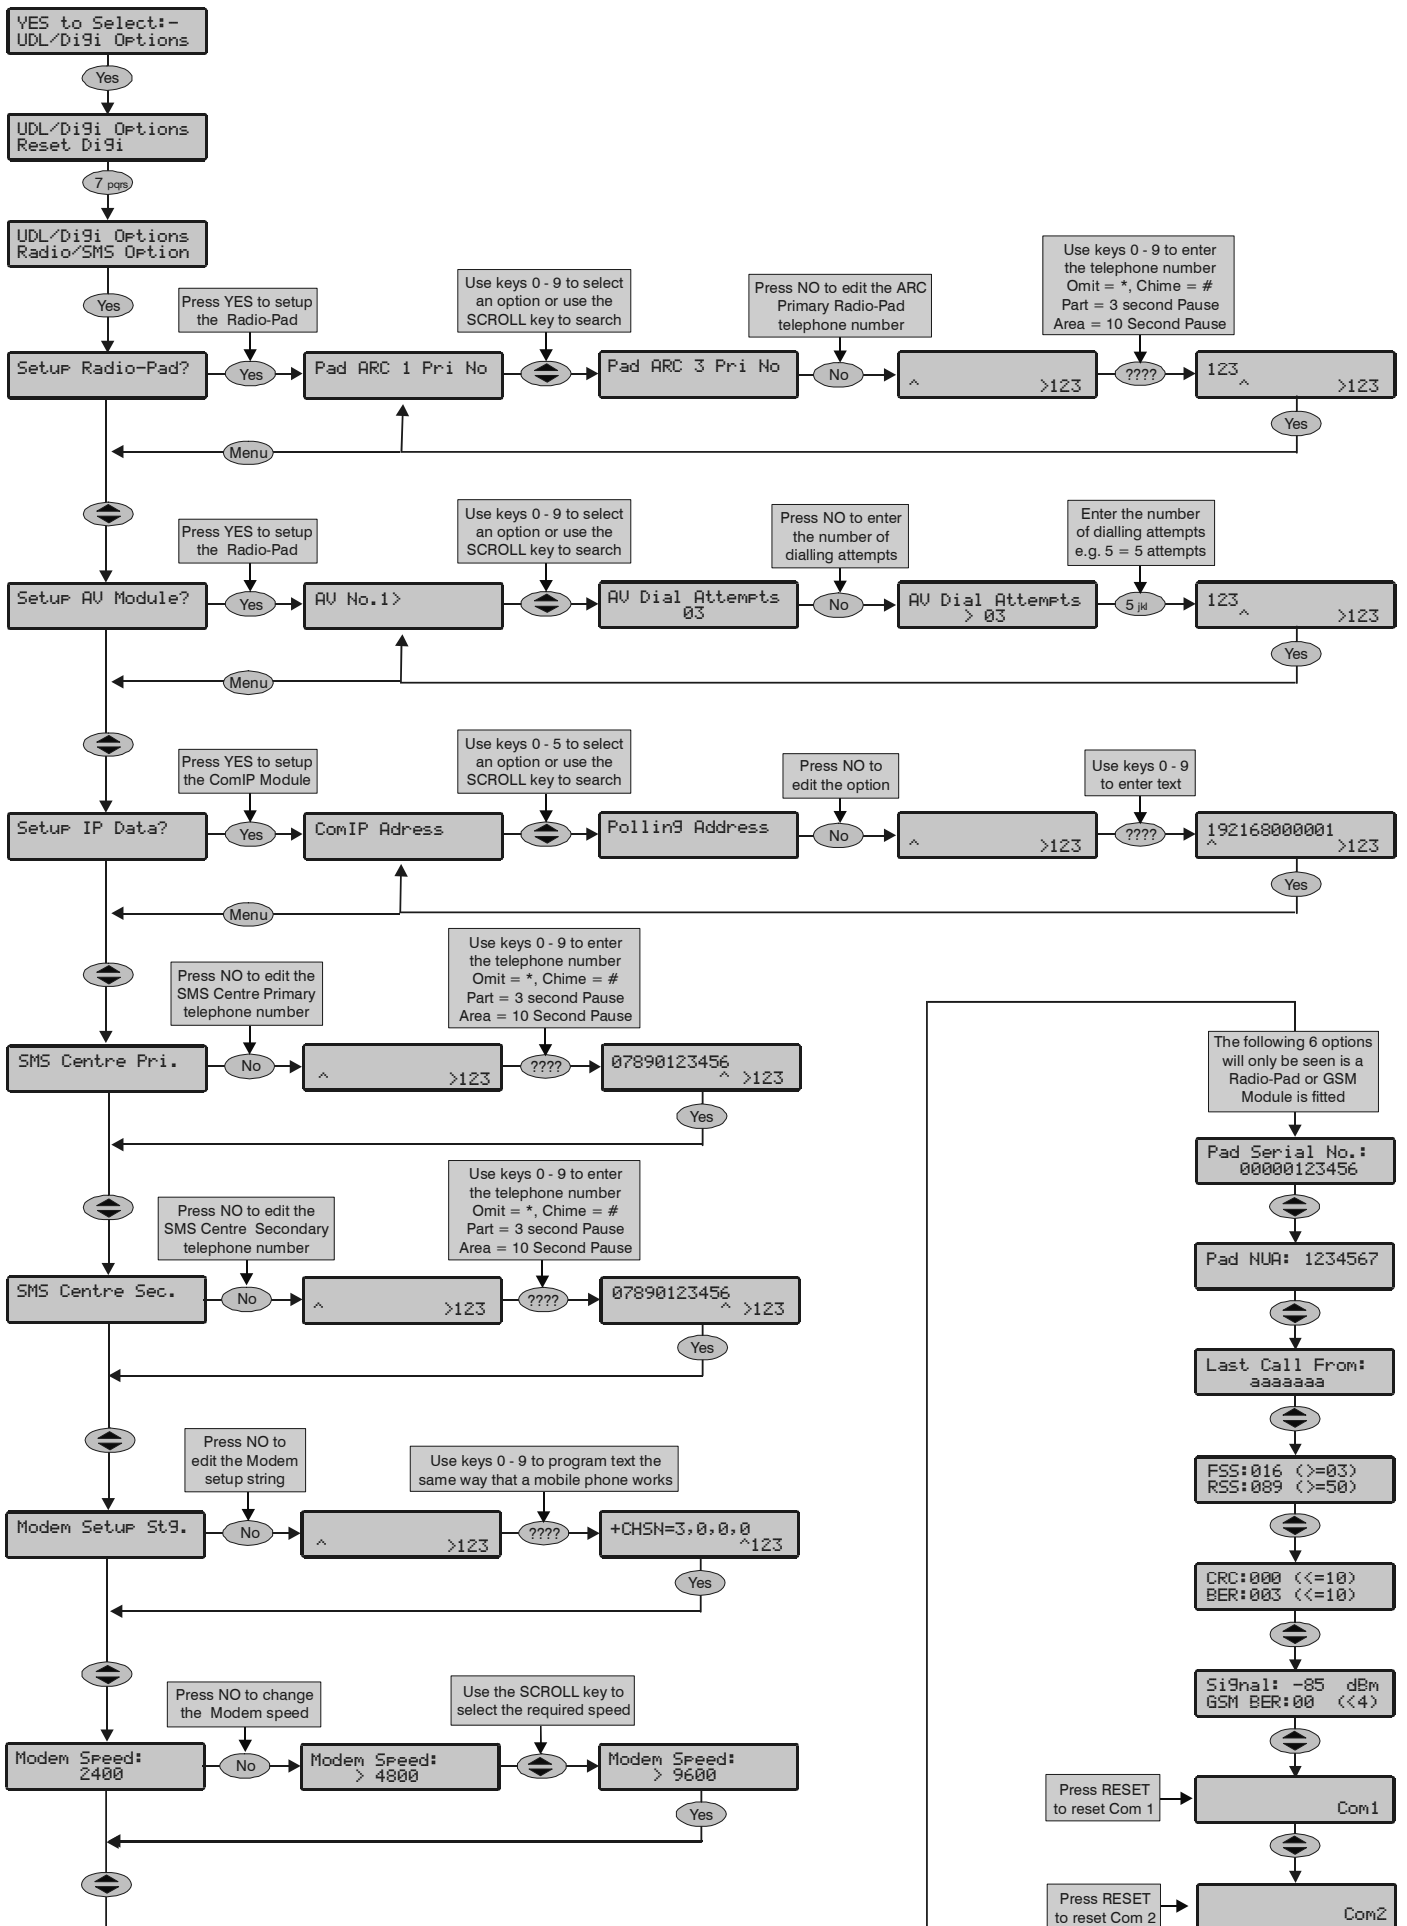

The following options are used when a Paknet Radio-Pad is connected to the control panel in order to achieve DUAL SIGNALLING to an Alarm Receiving Centre, when a MODEM (External PC or Com2400) is used to connect to the control panel or send SMS messages to mobile phones, when an AV Module is connected to the control panel in order to achieve AUDIO VERIFICATION to an Alarm Receiving Centre or when a TCP/IP Module is connected for communications over a Broadband/ADSL/DSL Line.

Setup Radio-Pad

Pad ARC 1 Pri No

This is the first number that is used by the Radio-Pad for reporting events to ARC 1.

Pad ARC 1 Sec No

This is the second number that is used by the Radio-Pad for reporting events to ARC 1.

Pad ARC 1 Prefix

This number will prefix the account number for ARC 1.

Pad ARC 2 Pri No

This is the first number that is used by the Radio-Pad for reporting events to ARC 2.

Pad ARC 2 Sec No

This is the second number that is used by the Radio-Pad for reporting events to ARC 2.

Pad ARC 2 Prefix

This number will prefix the account number for ARC 2.

Pad ARC 3 Pri No

This is the first number that is used by the Radio-Pad for reporting events to ARC 3.

Pad ARC 3 Sec No

This is the second number that is used by the Radio-Pad for reporting events to ARC 3.

Pad ARC 3 Prefix

This number will prefix the account number for ARC 3.

Radio-Pad Attempts

This is the number of times the Radio-Pad will try to dial the Alarm Receiving Centre telephone number before giving up.



The number of dialling attempts is limited to 9. If this value is set to 0, the Radio-Pad will never dial out.

Setup AV Module

AV No. 1>

This is the first number that is dialled by the AV Module.

AV No. 3>

This is the second number that is dialled by the AV Module.

AV No. 3>

This is the third number that is dialled by the AV Module.

AV Dial Attempts

This is how many times the AV Module will attempt to dial before giving up.



The number of dialling attempts is limited to 9. If this value is set to 0, the AV Module will never dial out.

AV Re-Dial Delay

This is the amount of delay that the AV Module uses between re-dialling telephone numbers.

Setup IP Module

ComIP Address

This is the IP Address of the IP Module.

ComIP Port

This is the Port number of the IP Module.

ComIP Gateway

This is the Gateway IP Address that the IP Module communicates through.

ComIP Mask

This is the Subnet Mask number for the IP Module.

Polling/SMG Address

This is the IP address of a dedicated Polling or SMG Server that the IP Module might need to connect to.

Name/SMG Port

This is a descriptive name for the IP Module or SMG Port and might be used for authentication purposes.

SMS Centre Pri.

This is the first SMS centre telephone number that is used by for sending SMS to mobile phones. (Default = 07860 980480).

SMS Centre Sec.

This is the second SMS centre telephone number that is used by for sending SMS to mobile phones.

Modem Setup Stg.

If a standard PC modem is connected to Com1 or Com2, it may require a configuration string to make it work properly (please refer to instruction manual of modem being used for details of required AT commands).



The Setup string is programmed the same way that TEXT would be programmed and has a maximum length of 16 characters.

The setup string does NOT require AT to be entered at the beginning as this is done automatically.

Modem Speed

This option allows the speed of a standard PC modem connected to Com1 or Com2 to be adjusted.

Pad Serial No.

This screen displays the Serial number of the Radio-Pad that is connected.

Pad NUA

This screen displays the NUA number of the Radio-Pad that is connected.

Last Call From

This screen displays the NUA number of the last Radio-Pad that communicated with the Radio-Pad that is connected to the control panel.

FSS:??? (>=004), **Forward Signal Strength**

RSS:??? (>=050), **Reverse Signal Strength**

This screen displays the Radio-Pad Forward (FSS) and Reverse (RSS) Signal Strength of the Radio-Pad that is connected to the control panel.



The FSS value should be greater than or equal to 4 and the RSS value should be greater than or equal to 50.

CRC:??? (<=009), **Cyclic Redundancy Check**
BER:??? (<=009), **Bit Error Rate**

This screen displays the Cyclic Redundancy Check (CRC) and Bit Rate Error (BER) of the Radio-Pad that is connected to the control panel.

NOTE The CRC and BER values should be less than 10.

Signal =??? dBm (<=080), **GSM Signal**
GSM BER:??? (<=004), **GSM Bit Error Rate**

This screen displays the signal strength (GSM) and Bit Rate Error (BER) of a GSM Module that is connected to the control panel.

NOTE The GSM value should be greater than or equal to 80 and the BER value should be less than 9.


Com1 Monitor Screen

This screen allows you to view the data activity of Com1. Press RESET to reset the device connected to this port.

Com2 Monitor Screen

This screen allows you to view the data activity of Com2. Press RESET to reset the device connected to this port.

Com Port Setup

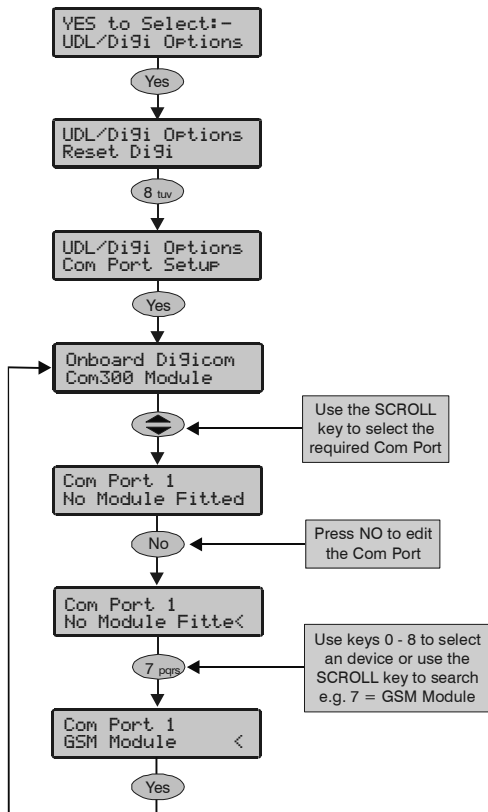

The control panel must be programmed with the type of device that are connected to each of its coms ports.

Com Port 1 and 2

Available Device Types:

- 0: No Module Fitted** - No Devices/PC-Com/ USB-Com
- 1: Com300** - Com300 Communicator.
- 2: Com2400** - Com2400 Communicator.
- 3: ComISDN** - ComISDN Communicator.
- 4: ComIP** - ComIP TCP/IP Communication Module.
- 5: Modem Unit** - Standard Serial PC Modem.
- 6: Radio Pad** - Paknet RP9 Radio-Pad.
- 7: GSM Module** - GSM Module/Mobile Phone.
- 8: Crestron System** - Crestron Home Automation System.
- 9: SIP** - Serial IP Protocol.
- 10: RadioPlus** - Premier Serial Wireless Receiver.
- 11: Inovonics Radio** - Inovonics Serial Wireless Receiver.
- 12: WebWayOne** - WebWayOne UDP Module.
- 13: X-10 Control** - X-10 Home Automation Module.
- 14: IRIS IP** - Chiron IRIS Serial TCP/IP Module.

Onboard DigiCom

This option determines what type of device is connected to the plug-on digmodem connector on the top right hand corner of the control panel. (Default = Com300).

Available Device Types:

- 0 / 1 / 2 / 3**

Com1

This option determines what type of device is connected to the Com1 connector on the left hand side of the control panel. (Default = No Module Fitted).

Available Device Types:

- 0 / 2 / 3 / 4 / 5 / 7 / 8 / 9 / 10 / 12 / 13 / 14**

NOTE If any of the above devices are connected to the control panel on Com1 and a PC needs to be connected (for uploading/downloading) the device must be disconnected from Com 1 and the 'Factory Default' button pressed for 3 seconds to allow the PC to talk to the control panel.

If the PC is not connected to the control panel (or is removed) the Com port will automatically revert back to normal operation after 1 minute.

Com2

This option determines what type of device is connected to the Com2 connector on the left hand side of the control panel. (Default = No Module Fitted).

Available Device Types:

- 0 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 10 / 11 / 12 / 13 / 14**

Expansion Port

This option determines what type of device is connected to the Expansion Port connector (Default = No Module Fitted).

Available Device Types:

- 0: No Module Fitted** - No Devices
- 1: AV Module** - Premier Audio Verification Module
- 2: iD Module** - Premier 60IXD iD Module
- 3: X10 Module** - X10 Controller
- 4: Premier OP8** - Premier Output Module (8 Outputs)

Zone Alarm Reporting Codes

The Reporting codes for Contact ID and SIA are fully configurable, however these codes can only be changed using *Wintex* downloading software.

The following tables show the default codes for each event on the system:

Default Zone Event Codes

No	Zone Type	Event	Reporting Group	Contact ID	SIA
00	Entry/Exit 1	Alarm	Alarm	134	BA
		Alarm Restore	Restore	134	BH
		Omit	Omit/Reinstate	573	BB
		Reinstate	Omit/Reinstate	573	BU
01	Entry/Exit 2	Alarm	Alarm	134	BA
		Alarm Restore	Restore	134	BH
		Omit	Omit/Reinstate	573	BB
		Reinstate	Omit/Reinstate	573	BU
02	Guard	Alarm	Alarm	132	BA
		Alarm Restore	Restore	132	BH
		Omit	Omit/Reinstate	573	BB
		Reinstate	Omit/Reinstate	573	BU
03	Guard Access	Alarm	Alarm	132	BA
		Alarm Restore	Restore	132	BH
		Omit	Omit/Reinstate	573	BB
		Reinstate	Omit/Reinstate	573	BU
04	24Hr Audible	Alarm	Tamper	133	BA
		Alarm Restore	Restore	133	BH
		Omit	Omit/Reinstate	572	BB
		Reinstate	Omit/Reinstate	572	BU
05	24Hr Silent	Alarm	Tamper	133	BA
		Alarm Restore	Restore	133	BH
		Omit	Omit/Reinstate	572	BB
		Reinstate	Omit/Reinstate	572	BU
06	Audible PA	Alarm	Priority Alarm	123	PA
		Alarm Restore	Restore	123	PH
		Omit	Omit/Reinstate	573	PB
		Reinstate	Omit/Reinstate	573	PU
07	Silent PA	Alarm	Priority Alarm	122	HA
		Alarm Restore	Restore	122	HH
		Omit	Omit/Reinstate	573	HB
		Reinstate	Omit/Reinstate	573	HU
08	Fire Alarm	Alarm	Priority Alarm	110	FA
		Alarm Restore	Restore	110	FH
		Omit	Omit/Reinstate	571	FB
		Reinstate	Omit/Reinstate	571	FU
09	Medical	Alarm	Priority Alarm	100	MA
		Alarm Restore	Restore	100	MH
		Omit	Omit/Reinstate	572	MB
		Reinstate	Omit/Reinstate	572	MU
10	24Hr Gas Alarm	Alarm	Tamper	151	GA
		Alarm Restore	Restore	151	GH
		Omit	Omit/Reinstate	572	GB
		Reinstate	Omit/Reinstate	572	GU

No	Zone Type	Event	Reporting Group	Contact ID	SIA
11	Auxiliary Alarm	Alarm	Tamper	150	UA
		Alarm Restore	Restore	150	UH
		Omit	Omit/Reinstate	572	UB
		Reinstate	Omit/Reinstate	572	UU
12	24Hr Tamper Alarm	Alarm	Tamper	137	TA
		Alarm Restore	Restore	137	TR
		Omit	Omit/Reinstate	572	TB
		Reinstate	Omit/Reinstate	572	TU
13	Exit Terminator	Alarm	Open/Close	---	--
		Alarm Restore	Open/Close	---	--
		Omit	Omit/Reinstate	570	UB
		Reinstate	Omit/Reinstate	570	UU
14	Keypad - Momentary	Alarm	Open/Close	409	OP
		Alarm Restore	Open/Close	409	CL
		Omit	Omit/Reinstate	570	UB
		Reinstate	Omit/Reinstate	570	UU
15	Keypad - Latching	Alarm	Open/Close	409	OP
		Alarm Restore	Open/Close	409	CL
		Omit	Omit/Reinstate	570	UB
		Reinstate	Omit/Reinstate	570	UU
16	Security Key	Alarm	Open/Close	421	DK
		Alarm Restore	Open/Close	421	DG
		Omit	Omit/Reinstate	570	UB
		Reinstate	Omit/Reinstate	570	UU
17	Omit Key	Alarm	Omit/Reinstate	---	--
		Alarm Restore	Omit/Reinstate	---	--
		Omit	Omit/Reinstate	570	UB
		Reinstate	Omit/Reinstate	570	UU

Non-Zone Event Types

The default Non-Zone Event codes are as follows:

No	Type	Event	Reporting Group	Contact ID	SIA	ID
20	Keypad Medical	Alarm	Priority Alarm	100	MA	Keypad No *
		Restore	Restore	100	MH	Keypad No *
21	Keypad Fire	Alarm	Priority Alarm	115	FA	Keypad No *
		Restore	Restore	115	FH	Keypad No *
22	Keypad Audible PA	Alarm	Priority Alarm	120	PA	Keypad No *
		Restore	Restore	120	PH	Keypad No *
23	Keypad Silent PA	Alarm	Priority Alarm	122	PA	Keypad No *
		Restore	Restore	122	PH	Keypad No *
24	Duress Code Alarm	Alarm	Priority Alarm	121	HA	User No
		Restore	Restore -	122	HH	User No
25	Alarm Active	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-
26	Bell Active	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-
27	Zones Locked Out	Alarm	Alarm	130	BA	Zone No
		Restore	Not Reported	-	-	-
28	Verified Cross Zone Alarm	Alarm	Alarm	130	BV	00
		Restore	Not Reported	-	-	-
29	User Code	Alarm	Not Reported	-	-	User No
		Restore	Not Reported	-	-	-

No	Type	Event	Reporting Group	Contact ID	SIA	ID
30	Exit Started	Alarm	Not Reported	-	-	Keypad No
		Restore	Not Reported	-	-	-
31	Exit Error (Arming Failed)	Alarm	Open/Close	457	EE	00
		Restore	Not Reported	-	-	-
32	Entry Started	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-
33	Area Arm Suite	Alarm	Open/Close	-	-	Suite No 1 - 8
		Restore	Open/Close	-	-	-
34	Armed with Line Fault	Alarm	Not Reported	-	-	User No
		Restore	Not Reported	-	-	-
35	Open/Close (Full Arm)	Alarm	Open/Close	401	OP	User No
		Restore	Open/Close	401	CL	User No
36	Open/Close (Part Arm)	Alarm	Open/Close	401	OP	User No
		Restore	Open/Close	401	CL	User No
37	Auto Open/Close	Alarm	Open/Close	403	OA	00
		Restore	Open/Close	403	CA	00
38	Auto Arm Deferred	Alarm	Open/Close	405	CE	User No
		Restore	Open/Close	-	-	-
39	Open After Alarm (Alarm Abort)	Alarm	Open/Close	406	OR	00
		Restore	Not Reported	-	-	-
40	Remote Open/Close	Alarm	Open/Close	407	OP	00
		Restore	Open/Close	407	CL	00
41	Quick Arm	Alarm	Not Reported	-	-	-
		Restore	Open/Close	408	CL	Keypad No *
42	Recent Closing	Alarm	Open/Close	459	CR	00
		Restore	Not Reported	-	-	-
43	Reset After Alarm	Alarm	Restore	-	-	Reset ID ****
		Restore	Not Reported	-	-	-
44	Auxiliary 12V Fuse Fail	Alarm	Maintenance	300	YP	Device ID **
		Restore	Restore	300	YQ	Device ID **
45	AC Fail	Alarm	Maintenance	301	AT	00
		Restore	Restore	301	AR	00
46	Low Battery	Alarm	Maintenance	302	YT	00
		Restore	Restore	302	YR	00
47	System Power Up	Alarm	Maintenance	305	RR	00
		Restore	Not Reported	-	-	-
48	Bell Fuse Failure	Alarm	Maintenance	321	YA	00
		Restore	Restore	321	YH	00
49	ATS Path Fault	Alarm	Maintenance	351	LT	Line Fault ID ***
		Restore	Restore	351	LR	Line Fault ID ***
50	Fail to Communicate	Alarm	Maintenance	354	YC	00
		Restore	Not Reported	-	-	-
51	Download Start	Alarm	Maintenance	411	RB	00
		Restore	Not Reported	-	-	-
52	Download End	Alarm	Maintenance	412	RS	-
		Restore	Not Reported	-	-	-
53	Log Capacity Alert (80%)	Alarm	Maintenance	623	JL	00
		Restore	Not Reported	-	-	-
54	Date Changed	Alarm	Maintenance	625	JD	User No
		Restore	Not Reported	-	-	-
55	Time Changed	Alarm	Maintenance	625	JT	User No
		Restore	Not Reported	-	-	-
56	Installer Programming Start	Alarm	Maintenance	627	LB	User No
		Restore	Not Reported	-	-	-

No	Type	Event	Reporting Group	Contact ID	SIA	ID
57	Installer Programming End	Alarm	Maintenance	628	LS	User No
		Restore	Not Reported	-	-	-
58	Panel Box Tamper	Alarm	Tamper	145	TA	00
		Restore	Restore	145	TR	00
59	Bell Tamper	Alarm	Tamper	145	TA	Device ID **
		Restore	Restore	145	TR	Device ID **
60	Auxiliary Tamper	Alarm	Tamper	145	TA	Device ID **
		Restore	Restore	145	TR	Device ID **
61	Expander Tamper	Alarm	Tamper	145	TA	Device ID **
		Restore	Restore	145	TR	Device ID **
62	Keypad Tamper	Alarm	Tamper	145	TA	Keypad No *
		Restore	Restore	145	TR	Keypad No *
63	Expander Trouble (Network Error)	Alarm	Tamper	333	ET	Device ID **
		Restore	Restore	333	ER	Device ID **
64	Keypad Trouble (Network Error)	Alarm	Tamper	333	ET	Keypad No *
		Restore	Restore	333	ER	Keypad No *
65	Fire Zone Tamper	Alarm	Tamper	373	FT	Zone No
		Restore	Restore	373	FJ	Zone No
66	Zone Tamper	Alarm	Tamper	383	TA	Zone No
		Restore	Restore	383	TR	Zone No
67	Keypad Lockout	Alarm	Tamper	421	JA	Keypad No *
		Restore	Not Reported	-	-	-
68	Code Tamper Alarm	Alarm	Tamper	421	JA	Keypad No *
		Restore	Not Reported	-	-	-
69	Soak Test Alarm	Alarm	Test	-	-	Zone No
		Restore	Restore	-	-	Zone No
70	Manual Test Call	Alarm	Test	601	RX	00
		Restore	Not Reported	-	-	-
71	Automatic Test Call	Alarm	Test	602	RP	00
		Restore	Not Reported	-	-	-
72	User Walk Test Start/End	Alarm	Test	607	TS	User No
		Restore	Restore	607	TE	User No
73	NVM Defaults Loaded	Alarm	Not Reported	-	-	Zone No
		Restore	Not Reported	-	-	Zone No
74	First Knock	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-
75	Door Access	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-
76	Part Arm 1	Alarm	Not Reported	-	-	-
		Restore	Close	401	CL	User No
77	Part Arm 2	Alarm	Not Reported	-	-	-
		Restore	Close	401	CL	User No
78	Part Arm 3	Alarm	Not Reported	-	-	-
		Restore	Close	401	CL	User No
79	Auto Arming Start	Alarm	Not Reported	-	-	-
		Restore	Close	401	CL	000
80	Confirmed Alarm	Alarm	Alarm	139	BV	Zone No
		Restore	Not Reported	-	-	-
81	Prox TAG	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-
82	Access Code Changed/Deleted	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-
83	Arm Failed	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-

No	Type	Event	Reporting Group	Contact ID	SIA	ID
84	Log Cleared	Alarm	Maintenance	-	-	-
		Restore	Not Reported	401	CL	000
85	iD Loop Shorted	Alarm	Tamper	145	TA	000
		Restore	Restore	145	TR	-
86	Communication Port	Alarm	Maintenance	-	-	000
		Restore	Restore	-	-	000
87	TAG System Exit (Batt. OK)	Alarm	Not Reported	-	-	Zone No
		Restore	Not Reported	-	-	Zone No
88	TAG System Exit (Batt. LOW)	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-
89	TAG System Entry (Batt. OK)	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-
90	TAG System Entry (Batt. LOW)	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-
91	Microphone Activated	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-
92	AV Cleared Doen	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-
93	Monitored Alarm	Alarm	Alarm	220	BA	Zone No
		Restore	Restore	220	BH	Zone No
94	Expander Low Voltage	Alarm	Maintenance	143	ET	Device No
		Restore	Restore	143	ER	Device No
95	Supervision Fault	Alarm	Maintenance	355	UT	Zone No
		Restore	Restore	355	UJ	Zone No
96	PA From Remote FOB	Alarm	Priority Alarm	121	121	Zone No
		Restore	Restore	HA	HH	Zone No
97	RF Device Low Battery	Alarm	Maintenance	384	XT	Zone/User No
		Restore	Restore	384	XR	Zone/User No
98	Site Data Changed	Alarm	Maintenance	-	-	-
		Restore	Restore	-	-	-
99	Radio Jamming	Alarm	Maintenance	344	XQ	000
		Restore	Restore	344	-	000
100	Test Call Passed	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-
101	Test Call Failed	Alarm	Not Reported	-	-	-
		Restore	Not Reported	-	-	-
102	Zone Fault	Alarm	Maintenance	380	UT	Zone No
		Restore	Restore	380	UJ	Zone No
103	Zone Masked	Alarm	Alarm	380	UT	Zone No
		Restore	Restore	380	UJ	Zone No
104	Faults Overridden	Alarm	Maintenance	-	-	000
		Restore	Not Reported	-	-	000
105	PSU AC Fail	Alarm	Maintenance	301	AT	Device No
		Restore	Restore	301	AR	Device No
106	PSU Low Battery Fail	Alarm	Maintenance	302	YT	Device No
		Restore	Restore	302	YR	Device No
107	PSU Low Output Fail	Alarm	Maintenance	300	YP	Device No
		Restore	Restore	300	YQ	Device No
108	PSU Tamper	Alarm	Tamper	333	TA	Device No
		Restore	Restore	333	TR	Device No

Tamper Fault ID ***

Panel ID is transmitted as follows:

Device	ID
Panel	000

Keypad ID is transmitted as follows:

RKP	Network							
	1	2	3	4	5	6	7	8
1	11	21	31	41	51	61	71	81
2	12	22	32	42	52	62	72	82
3	13	23	33	43	53	63	73	83
4	14	24	34	44	54	64	74	84
5	15	25	35	45	55	65	75	85
6	16	26	36	46	56	66	76	86
7	17	27	37	47	57	67	77	87
8	18	28	38	48	58	68	78	88

Expander ID is transmitted as follows:

EXP	Network							
	1	2	3	4	5	6	7	8
1	11	21	31	41	51	61	71	81
2	12	22	32	42	52	62	72	82
3	13	23	33	43	53	63	73	83
4	14	24	34	44	54	64	74	84
5	15	25	35	45	55	65	75	85
6	16	26	36	46	56	66	76	86
7	17	27	37	47	57	67	77	87
8	18	28	38	48	58	68	78	88

ATS Path Fault ID ***

Line Fault ID is transmitted as follows:

Device	ID
Panel	00
RedCARE	01
Com300	03

Expander ID is transmitted as follows:

EXP	Network							
	1	2	3	4	5	6	7	8
1	11	21	31	41	51	61	71	81
2	12	22	32	42	52	62	72	82
3	13	23	33	43	53	63	73	83
4	14	24	34	44	54	64	74	84
5	15	25	35	45	55	65	75	85
6	16	26	36	46	56	66	76	86
7	17	27	37	47	57	67	77	87
8	18	28	38	48	58	68	78	88

Reset ID ****


Reset ID is transmitted as follows:

Device	ID
Panel (RR)	00
Engineer	01
Anti-Code	02
RedCARE	03
Keypad	04
User	05
Wintex	07

Expander ID is transmitted as follows:

EXP	Network							
	1	2	3	4	5	6	7	8
1	11	21	31	41	51	61	71	81
2	12	22	32	42	52	62	72	82
3	13	23	33	43	53	63	73	83
4	14	24	34	44	54	64	74	84
5	15	25	35	45	55	65	75	85
6	16	26	36	46	56	66	76	86
7	17	27	37	47	57	67	77	87
8	18	28	38	48	58	68	78	88

5.8 Setup Users

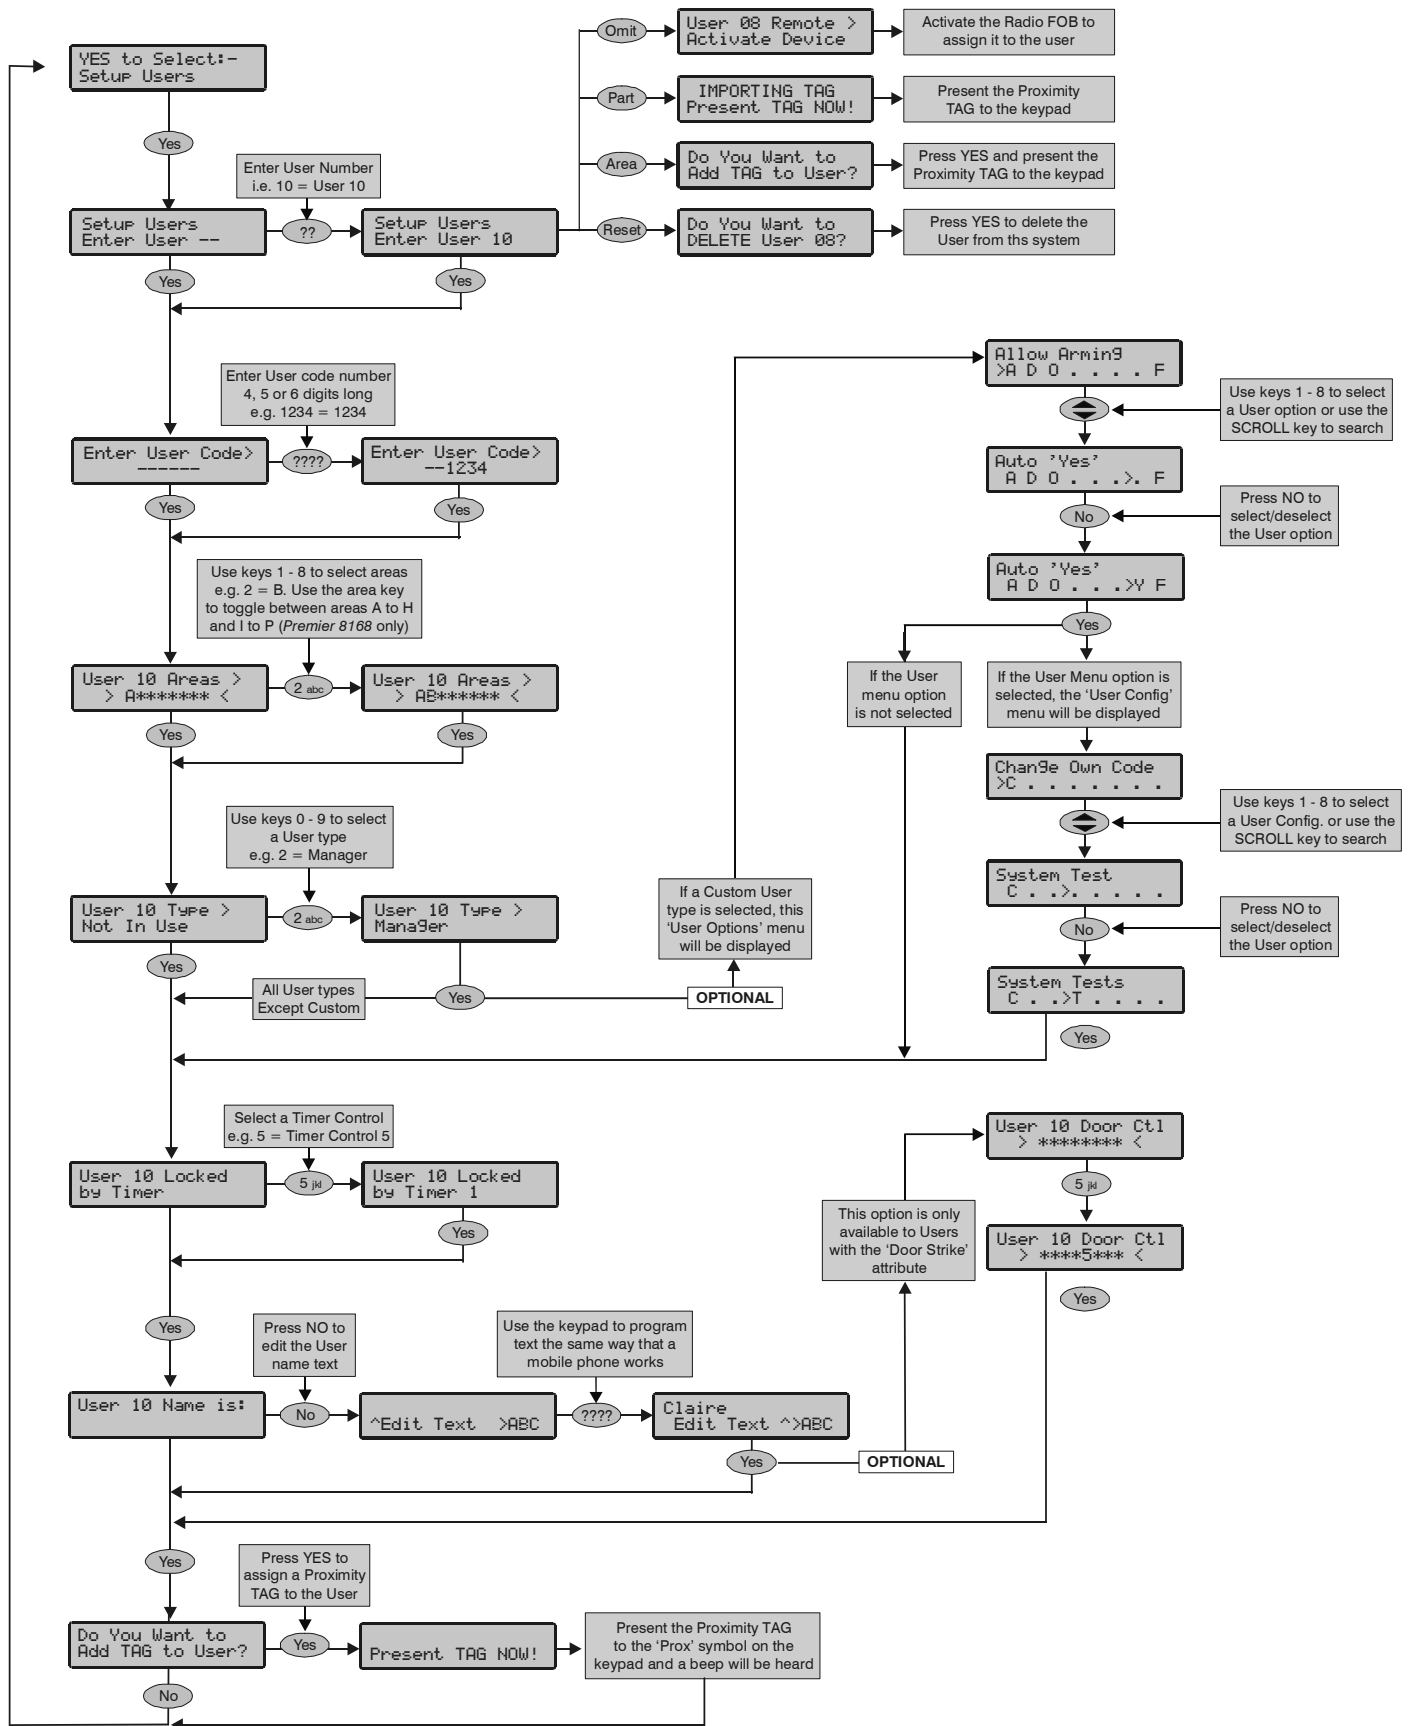

This section covers the alteration of existing users and the addition of new users to the system. The *Premier 48* can be assigned up to 24 users (plus Engineer), the *Premier 88* can be assigned up to 49 users (plus Engineer) and the *Premier 168* and *640* can be assigned up to 99 users (plus Engineer).

Default User Codes

When the control panel is first powered up and the factory default settings are loaded (see page 26 for details), only the Engineer code and the Master User code exist.

The Factory default Engineer User code is

① ②_{abc} ③_{def} ④_{ghi}.



The Engineer is always User 00.

If the Engineer code has been lost or forgotten, it can normally be reset back to the factory default without having to reprogram the entire system (see page 34 for details).

Resetting the Engineer code is only possible if the NVM has not been locked (see page 49 for details).

The Factory default Master User code is

⑤_{kl} ⑥_{mno} ⑦_{pqrs} ⑧_{tuv}.



The Master User is always User 01.

If the Master User code has been lost or forgotten, it can be reprogrammed by the Engineer in this menu.

Programming New Users

Each User code on the system is made up of the following elements. **Items 1, 2 or 8, 3 and 4** which are essential for the code to function correctly and **items 5, 6, 7, 8 and 9** which are optional.

1. User Number

When users are assigned to the system, they need to be identified by the control panel. Each user is identified as Users 01, 02, 03 etc. User 01 is always the Master User.

2. User Code

This is a unique 4, 5 or 6 digit code number that is assigned to a user. The system will allow a mixture of different length User codes. The User code must be entered at a keypad to operate the alarm system.

3. User Areas

Any number of areas can be assigned to the selected user. Assigning areas to a user determines which areas can be armed, disarmed, reset etc. by that user. In addition, assigning areas to a user determines which of the area related functions i.e. omitting zones, silent arming etc. will be available to that user.

4. User Types

The User type determines which functions are available to the user i.e. arming, disarming, resetting etc. In addition, the User type also determines which options the user can access i.e. Setup Users, System Tests etc.

5. User Time Lock

This option allows the selected user to be denied access to the system at different times of the day and days of the week. When a Control Timer is assigned to a user, the User code will not allow access to any functions during the timers 'On' period.

6. User Name Text

Each user can be assigned up to 8 characters of name text. The name text is displayed whenever a code is entered and also when reading the log, making identification of people using the alarm easier.

7. Door Control

This option would normally be used for access control. Users are able to open/unlock doors that are assigned to their user code.

8. Proximity TAG

As well as or instead of operating the alarm system with a code number, it is also possible to operate it by presenting a Proximity TAG to the keypad (this requires a Proximity keypad).

9. Radio FOB

As well as or instead of operating the alarm system with a code number or Proximity TAG, it is also possible to operate it Using a Wireless Radio Transmitter (this requires a Wireless Radio Receiver keypad).

User Types

The User type determines which functions are available to the user i.e. arming, disarming etc. In addition, the User type also determines which options the user can access i.e. Setup Users etc. The following User types are available:

0: Engineer

Engineers can arm, disarm, omit zones, silence alarms and reset their assigned areas. In addition, Engineers can access the Programming Menu and all User menu options. Engineers can also change their own User codes and assign new users to the system.



The default Engineer User type (User 00) can assign any User types to the system.

Engineers can only disarm areas that were armed using an Engineer code. They cannot disarm any areas that were armed with another User code.

1: Master

Master users can arm, disarm, omit zones, silence alarms and reset their assigned areas. In addition, Master users can access all User menu options. Master users can also change their own User codes and assign new users to the system. The Master user will also activate any output programmed as 'Door Strike'.

2: Manager

Manager users can arm, disarm, omit zones, silence alarms and reset their assigned areas. In addition, Manager users can access all User menu options except Setup Users. Manager users can also change their own User codes.

3: Standard

Standard users can arm all the areas assigned to the code and disarm all the areas assigned to the code (even if only one area is in entry or alarm) from any keypad, omit zones, silence alarms and reset their assigned areas. In addition, Standard users can access all User menu options except for Setup Users, System Tests, and Change Timers. Standard users can also change their own User codes.

4: Local

Local users behave the same way as Standard users. However, Local users will only arm the area that the keypad is assigned to and disarm the area that is in entry or alarm (provided that the code has that area assigned to it

5: Duress

Duress users behave the same way as Standard users. However, Duress users will activate any outputs programmed as 'Panic Alarm' or 'Duress' whenever their code is entered.

6: Arm Only

Arm Only users can only arm or reset their assigned areas and view the event log.

7: Door Strike

Door Strike users have no access to User functions or Menu options. However, Door Strike users will activate any outputs programmed as 'Door Strike' whenever their code is entered (see page 64 for details).

8: Vacation

Vacation users behave the same way as Standard users. However, Vacation users will automatically be deleted the first time that the Master User code (User 01) is used to disarm the system.



Vacation user can only be deleted by the Master user after it has been used to disarm the system at least once.

9: Custom

Custom users can access any functions and User menu options that have been assigned to them in 'User Options 1 or 2' and 'User Config'. This flexibility allows new User types to be created that have their own unique set of characteristics. Any number of Custom users can be assigned to the system and each one will respond differently, depending on the functions and features that have been assigned to them.

User Functions and Options

The table below shows the options that are available to each user.

NOTE All users that have access to the 'Arming Menu' have the ability to 'View Zone Status', 'Set Chime Areas', 'View Act. Faults' and 'View Act. Counts'.

All users have access to the 'User Menu' have the ability to 'View Event Log', 'Adjust Volumes' and 'Print Event Log'.

User Options 1									
Engineer	Master	Manager	Standard	Local	Duress	Arm Only	Door Strike	Vacation	Custom
Arming	Arming	Arming	Arming	Arming	Arming	Arming	-	Arming	-
Disarming	Disarming	Disarming	Disarming	Disarming	Disarming	-	-	Disarming	-
Omitting	Omitting	Omitting	Omitting	Omitting	Omitting	-	-	Omitting	-
Eng. Reset	-	-	-	-	-	-	-	-	-
-	-	-	-	Local Arming	-	-	-	-	-
-	-	-	-	Local Disarm	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-
Disarm First	Disarm First	Disarm First	Disarm First	Disarm First	Disarm First	-	-	Disarm First	-

User Options 1									
User Menu	User Menu	User Menu	User Menu	User Menu	-	User Menu	-	User Menu	-
Eng. Program	-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	Vacation	-
Door Strike	Door Strike	-	-	-	-	-	Door Strike	-	-
Call Rem. PC	Call Rem. PC	Call Rem. PC	-	-	-	-	-	-	-
-	-	-	-	-	Duress Code	-	-	-	-
Open/Close	Open/Close	Open/Close	Open/Close	Open/Close	Open/Close	Open/Close	-	Open/Close	-

User Config.									
Engineer	Master	Manager	Standard	Local	Duress	Arm Only	Door Strike	Vacation	Not Used
Change Code	Change Code	Change Code	Change Code	Change Code	-	-	-	-	-
Chime Zones	Chime Zones	Chime Zones	Chime Zones	Chime Zones	-	-	-	-	-
Change Timer	Change Timer	Change Timer	-	-	-	-	-	-	-
System Tests	System Tests	System Tests	-	-	-	-	-	-	-
Setup Users	Setup Users	-	-	-	-	-	-	-	-
Eng. Access	Eng. Access	Eng. Access	Eng. Access	Eng. Access	-	Eng. Access	-	Eng. Access	-
Add Eng. code	-	-	-	-	-	-	-	-	-
NVM Locking	-	-	-	-	-	-	-	-	-

User Options 1

This menu defines which options are available to the user when their code is entered.

Press **⏮** to scroll through the options and press **No** to select them or use keys **1** - **8_{sw}** ('Letter' = option **IS** selected, 'Star' = option is **NOT** selected).

The following options are available:

A - Arming

Areas assigned to the selected user can be armed.

D - Disarming

Areas assigned to the selected user can be disarmed.

O - Omitting

Zones assigned to the same areas as the selected user can be omitted, providing that they have the 'omit' attribute assigned to them.

R - Eng. Reset (Engineers only)

Areas programmed as 'Engineer reset' can be reset after an Alarm has occurred.

a - Local Arming

The User can only arm areas that the keypad is assigned to.

d - Local Disarm

The User can only disarm areas that the keypad is assigned to, or areas that are in entry or alarm (provided that the code has that area assigned to it).

Y - Auto 'YES'

After a User code has been entered, pressing the **Yes** key to confirm the next action is not required.

F - Disarm First

If an area is already armed and the selected user enters their code, the 'Disarm' option is displayed.

User Options 1

This menu is only displayed if the Custom User type is selected (see page 86 for details).

This menu defines which options are available to the user when their code is entered.

Press **⏮** to scroll through the options and press **No** to select them or use keys **1** - **8_{sw}** ('Letter' = option **IS** selected, 'Star' = option is **NOT** selected).

The following options are available:

U - User Menu

The selected user has access to the User menu. However, the selected user will only have access to options assigned in 'User Config.' (see page 88 for details).

E - Eng. Program (Engineers only)

Only Available to Engineers.

D - Dual Code

The selected user can only access an area when a second User code (with the 'Dual Code' attribute and also assigned to the same area) is entered. Dual Code users will also activate the '1st and 2nd Code' output type.

V - Vacation

The selected user is enabled the first time it is used to disarm the system and can be used as many times as required. However, it will be automatically deleted the first time that the User 01 code is used to disarm. Vacation users will only be deleted by the Master user, once they have been used on the system.

S - Door Strike

The selected user will activate any outputs programmed as 'Door Strike', whenever their codes are entered.

R - Call Rem. PC

The selected user has access to the 'Call Remote PC' option, allowing them to initiate a call to a remote upload/download PC.

C - Duress Code

The selected user will activate any outputs programmed as 'Duress', whenever their codes are entered.


 
 

O - Open/Close

The selected user will report open (disarm) and close (arm) events to an Alarm Receiving Centre every time they arm or disarm.

User Config.

This menu will only be displayed if a Custom User type is selected AND 'User Menu' (**User Option: U**) is enabled (see page 87 for details).

This menu defines which menu options are available to the user when their code is entered.

Press  to scroll through the options and press  to select them or use keys  -  ('Letter' = option **IS** selected, 'Star' = option is **NOT** selected).

The following options are available:

C - Change Code

The selected user can change their own User code.

Z - Chime Zones

The selected user can access the 'Edit Chime Zones' option, allowing them to select which zones chime when activated.

T - Change Timers

The selected user can access the 'Override Timers', 'Alter Timers', 'Alter Part Arms', 'Alter Hol. Dates' and 'Edit Phone No.' menu options.

S - System Tests

The selected user can access the 'System Tests' option, allowing them to walk test zones, activate the external sounder etc..

U - Setup Users

The selected user can access the 'Setup Users' option, allowing them to alter existing users or assign new users. However, users cannot assign User types to the system that have a higher access level than themselves. Also, if a user assigns a Custom User type, functions that are not available to them cannot be assigned to the Custom user.

E - Eng. Access

The selected user can access the 'Enable Engineer' option, allowing them to authorise Engineer access or Remote UDL access to the system.

A - Add Eng. Code (Engineers only)

Only Available to Engineers.

N - NVM Locking (Engineers only)

Only Available to Engineers.

User Time Lock

This option allows the selected user to be denied access to the system at different times of the day and days of the week. When a Control Timer is assigned to a user, the User code will not allow access to any functions during the timer 'On' period (see page 52 for timer programming).


The first 4 options (*Premier 48*) or 6 options (*Premier 88/168/640*) will lockout the selected user (Code and TAG) when the corresponding control timer is active. The last two options will lock out the selected users TAG (T) when Custom Output 2 Stage A is active or lock out the selected users Code (C) when Custom Output 2 Stage B is active.

This allows conditions to be set up in the custom outputs and then the TAG or Code to be locked out during those conditions i.e. Custom Output 2 Stage B could be programmed to activate during entry, resulting in the code being disabled during the entry period.

User Name Text

Each user can be assigned up to 8 characters of name text. This can be beneficial when reading the log, as identification of people is made easier.

See page 34 for details on programming text.

Text is programmed in a similar way to mobile phones. Select characters by pressing the corresponding key the appropriate number of times (to select a character on the same key, press the  key to move the cursor along).

Door Control

This option would normally be used for access control as it only allows the user to open/unlock doors that are assigned to that user code.



Door control is only available to users with the 'Door Strike' attribute assigned to it.

Deleting Users

If a User code needs to be deleted from the system, this must be done, by a user that has access to the 'Setup Users' menu.

 
 

To delete User codes proceed as follows:

Ensure that Setup Users is selected, the display should look like this:


```
Do you want to
Setup Users?
```

Press , the display should look like this:

```
Setup Users
Enter User --
```

Select a user from 1 to 24 (*Premier 48*), 1 to 49 (*Premier 88*) or 1 to 99 (*Premier 168*)   then press , the display should look like this:


```
Enter User Code>
_____
```

Press , the display will look something like this:

```
Do you want to
DELETE User 15
```


Where '15' is the selected User number.

Press  to confirm deletion of the selected User code

Press  to exit from Setup Users

5.9 Engineer Utilities

View Event Log

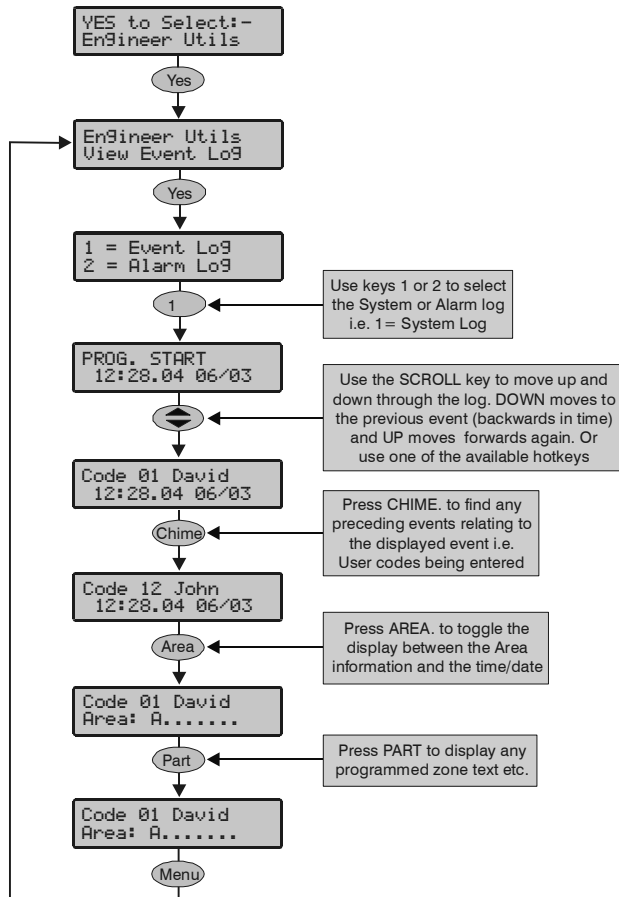

The control panel has two Event Logs, which are time and date stamped. The first log which is a system log, records all events that occur on the system, i.e. Users entering their codes to arm or disarm areas, alarm events, failures to arm etc. and the second log which is an alarm log, only records alarm events that occur on the system.

Event Log Hotkeys

When viewing the system log there are 8 hotkeys available. These hotkeys allow certain events to be found easier without the need for searching.

The following hotkeys are available:


- ① = Priority Alarms (PA, Fire etc.)
- ②_{abc} = Normal Alarms (Guard, 24hr, Entry/Exit etc.)
- ③_{def} = Opens and Closings (Arm, Disarm etc.)
- ④_{ghi} = Omits and Reinstates (Zone Omits etc.)
- ⑤_{jkl} = Maintenance (System Tests, Engineer Program etc.)
- ⑥_{mno} = Tamperers (Zone, Bell, Aux etc.)
- ⑦_{pqrs} = Test Calls (Communicator Active, successful etc.)
- ⑧_{tuv} = Entry/Exit (Entry and Exit Procedures)
- ⑨_{wxyz} = User Codes (User codes being used)

Event Log Descriptions

Log Event	Description
### ARM FAILED	An exit fault from Zone ### has caused the system to fail to arm
### Fit Alarm	Zone ### has detected a Fault condition
### Mask Alarm	Zone ### has detected a Mask condition
### Test Failed	Zone ### has activated whilst it has been on soak test
### Tested OK	Zone ### has activated during the walk test
#, # RESET AREAS -	Area have been reset using keypad #, # following an Intruder alarm
AC Off Alarm	The control panel has detected an AC Mains failure
ALARM ABORT	An Open After Alarm-Abort has occurred for area ?
ALARM Active	An Intruder alarm signal has been activated for area ?
Anti-Code Reset	A reset has been performed using the Anti-code reset procedure
AREA Armed	Area ? has been armed
AREA Disarmed	Area ? has been disarmed
ARMED WITH L/F	The system has been armed with a Line Fault condition present
ARMING FAILED	A Exit Error-Arm Fail has occurred on area ?
ARMING SUITE #	Area Arm Suite # was used to arm the system
ATS FAILED	The Com300 or Com2400 has failed to report to the Alarm Receiving Centre
ATS FLT Alarm	There is a problem with the telephone line
AUTO TEST CALL	An Automatic test call has been initiated
AUX #, # Tamper	An Auxiliary Tamper input from device #, # has been activated
AV CLEARED by ##	The Audio Verification unit has been cleared down by user ##
BELL #, # Tamper	A Bell Tamper input from device #, # has been activated
BELL Active	The Bell output has been activated for area ?
BELL FUSE Alarm	The control panel Bell Fuse has failed
BOX LID Tamper	The control panel lid has been removed causing a Tamper alarm
CODE #, # Tamper	Too many invalid key presses have caused a tamper alarm from keypad #, #
Com??? Line Fault	The Com300, 2400 or ISDN has detected a line fault
COM PORT Alarm	A com port has generated an alarm
CONFIRMED ALARM	Two or more detectors have activated, resulting in a confirmed alarm condition
CORRUPT EVENT	No event has been stored in memory
CROSS ### Alarm	A Verified Cross Zone Alarm has occurred from zone ###
DATA CHANGED	Programming data has been changed
DATE CHANGED	The control panel Time has been changed
DEFAULTS LOADED	The factory default values have been loaded into memory
DEFERRED	The arming mode was deferred for area ?
DOOR #, #	Door #, # has been opened by a user with Door Control
DOWNLOAD START	An Upload/Download has been initiated
DOWNLOAD END	The Upload/Download has finished
DURESS	User ## has entered a Duress Code at a keypad
Engineer Reset	A reset has been performed using an Engineers code
ENTRY Area ##	The Entry mode has been started for area ?
EXIT Area ##	The Exit mode has been started for area ?
EXP #, # Reset	A reset has been performed using the input on expander #, # (programmed as reset)
EXP #, # Line Fault	The Input on expander #, # (programmed as line fault) has been activated
EXP #, # LOST	Expander ## has been lost from the network
EXP #, # Tamper	The cover of expander #, # has been removed
F_PA ##	A Panic Alarm from a Radio FOB has been generated
Fault Override	The system has been armed with a Fault condition present by a user
FIRE ### Active	Zone ### (programmed as Fire Alarm) has caused an alarm
FIRE ### Tamper	Zone ### (programmed as Fire Alarm) has caused an Tamper alarm
FIRST KNOCK ###	Zone ### (which is programmed as double knock) has activated for the first time
FUSE #, # Alarm	The Auxiliary 12V Fuse in device #, # has failed
GSM MODULE LOST	The GSM Module has lost communications with the control panel
iD Loop# Tamper	There is a short circuit on iD loop # on the iD expander
Key switch Reset	A reset has been performed using a key switch
KSW ### Disarmed	A Keyswitch zone type has been activated (zone number ###)
LOG ALERT	80% of the Event Log has filled (since the last Upload/Download)
LOG CLEARED	The event log has been erased
LOW BAT Alarm	The control panel has registered a low battery condition
LOW V #, # Alarm	Expander #, # has detected that's its supply voltage is low

Log Event	Description
MANUAL TEST CALL	A Manual test call has been initiated
MIC ## TESTED	Microphone ## on the Audio Verification Module has been tested
No RF Signal ###	The Wireless receiver has detected a signal loss from zone ###
Panel Line Fault	The control panel line fault input has been activated
PART Armed	Area ? has been Part Armed
PART 1 Armed	Part Arm 1 has been selected
PART 2 Armed	Part Arm 2 has been selected
PART 3 Armed	Part Arm 3 has been selected
POWERED UP	System Power Up (without doing a factory restart)
PROG. END	The Engineer has logged out of the Programming menu
PROG. START	An Engineer code has been entered
PSUac ## Alarm	An expander input programmed as PSU Monitor control panel has detected an AC Mains failure
PSUbat## Alarm	An expander input programmed as PSU Monitor control panel has detected a Battery fault
PSUvol## Alarm	An expander input programmed as PSU Monitor control panel has detected a 12V Output failure
PSUTam## Alarm	An expander input programmed as PSU Monitor control panel has detected a Tamper condition
QUICK Armed	Quick Arm from keypad #, #
R/Bat ## Alarm	The Wireless receiver has detected a low battery signal from device ##
Radio Jammed	The Wireless receiver has detected an attempt to jam its radio signal
RADIO PAD LOST	The Radio-Pad has no signal or has lost communications with the control panel
REARM LOCK ###	Zone ### has locked out after reaching its re-arm limit (after causing an alarm)
RECENT Armed	Area ? has been armed recently
Redcare Line Fault	The Redcare has detected a line fault
REMOTE Armed	Area ? was armed using the <i>Wintex UDL</i> software
REMOTE Disarmed	Area ? was disarmed using the <i>Wintex UDL</i> software
Remote PC Reset	A reset has been performed by the remote download PC
Remote Reset	A reset has been performed using the 'Remote Reset' input
Redcare Reset	A reset has been performed by the Redcare
RKP #, # MEDICAL	A Medical alarm (7 & 9) has occurred from keypad number #, #
RKP #, # FIRE	A Fire alarm (4 & 6) has occurred from keypad number #, #
RKP #, # AUD PA	An Audible PA alarm (1 & 3) has occurred from keypad number #, #
RKP #, # SIL PA	A Silent PA alarm (1 & 3) has occurred from keypad number #, #
RKP #, # Tamper	The cover of keypad #, # has been removed
RKP #, # LOST	Keypad ## has been lost from the network
RKP LOCKED #, #	Keypad #, # has been locked out from too many invalid key presses
TAG ##	User ## has presented their Prox TAG
TESTED ###	Zone ### has been tested
TEST FAIL ###)	Zone ### has failed its Soak test
TIME Armed	Area ? was armed automatically using one of the control timers
TIME CHANGED	The control panel Date has been changed
TIME Disarmed	Area ? was disarmed automatically using one of the control timers
TUBE ### Alarm	Zone ### (programmed as Tube Key) has caused an alarm
USER ##	User ## has entered their code
USER CODE CHANGED	A User code has been altered or added
USER CODE DELETED	A User code has been deleted
User Reset	A reset has been performed using a User code
WALK Tst start	The Walk Test mode has been initiated
Zone ### Alarm	Zone ### has been activated
Zone ### Tamper	Zone ### has caused a Tamper alarm
Zone ### Restore	Zone ### has restored to its normal condition
Zone ### Omitted	Zone ### has been omitted
Zone ### Un-Omit	Zone ### has been reinstated
Zone ### Test Start	Zone ### has been put on test
Zone ### Test End	Zone ### has been removed from test

Do Bell Test

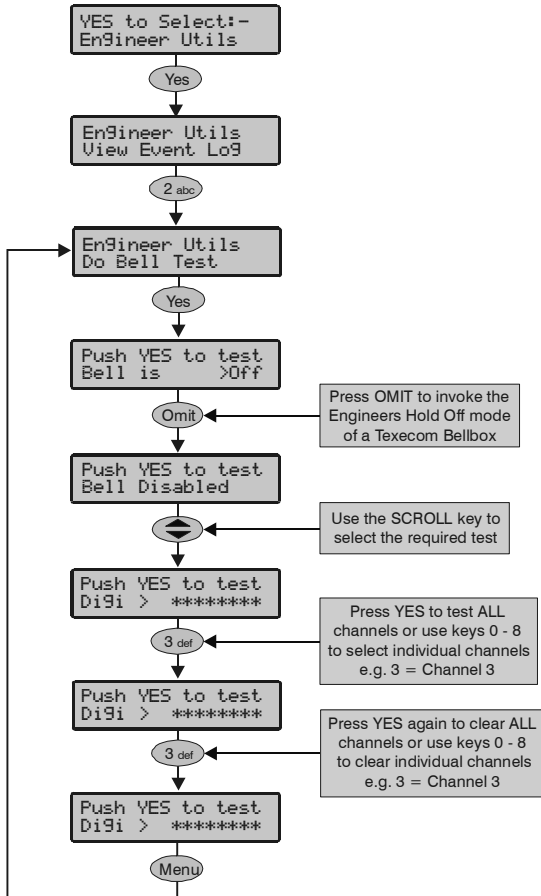


This option allows Allows the Bell, Speaker and various control panel outputs to be tested.

The following outputs can be individually tested:

- Test Bell** The Bell output
- Test Strobe** The Strobe output
- Test Speaker** The Speaker output
- Test Digi** The Hardwired digicom outputs
- Test Panel** The panel outputs
- Test RedCARE** The plug on RedCARE outputs
- Test Com????** The plug on digi outputs
- LCD Display** The LCD keypad display
- User Outputs** Any outputs that have the 'User Test' attribute (see page 66 for details).

NOTE Pressing OMIT at the Bell or Strobe Test will cause the Strobe output to pulse 3 times, invoking Engineers Hold Off mode if a Texecom bell box is connected.

Do Walk Test

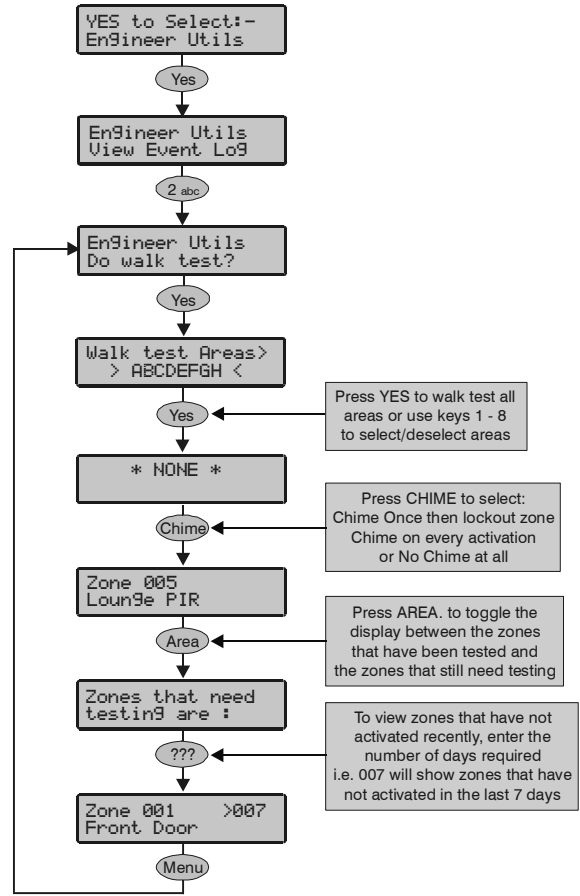


Any of the zones on the system can be walk tested to ensure that they operate correctly. A walk test can only be performed when the system or area is disarmed.

NOTE Once a zone has been activated it will not generate a chime tone again. If however the **Chime** key is pressed, a zone will chime every time it is activated.

The Walk test menu also includes a last activation log that can be recalled when doing a walk test. This log shows zones that have NOT been activated over a period of days.

Pressing the **Area** key will firstly show the zones that still need testing, pressing the **Area** key a second time will display the zones that have not been activated that day, to view zones that have not been activated for 3 days, type in 003 the maximum number of days that can be recalled is 255, pressing the **Area** key a third time will revert back to the standard walk test display.


View Zone Status

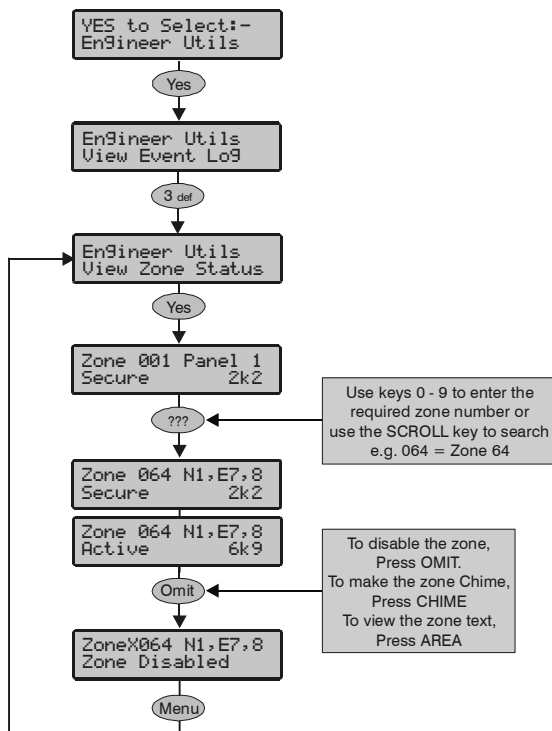

This option can be used to view the status of any zone on the system to see whether it is 'Active', 'Secure', 'Tampered' or 'Shorted'. The selected zone can also be temporarily disabled (zone and tamper) to allow the zone to be worked on or made to chime every time it is activated.

NOTE When leaving the View Zone Status menu, all zones will be automatically reinstated and cleared of Chime.

Do System Tests

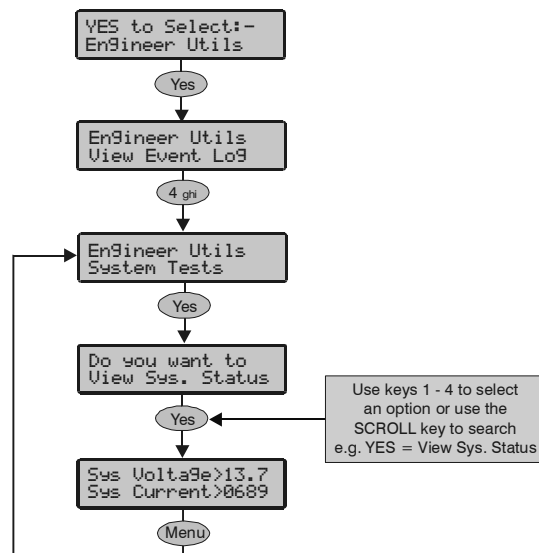

This option allows various control panel features to be tested or reviewed.

1 - View Sys. Status

Allows the system voltage and current to be viewed.

2 - View Batt Status

Allows the battery voltage and charging status to be viewed.


3 - Test Outputs

Allows the Bell, Speaker and system outputs to be tested.

4 - View Version No.

This option allows the control panel software version and serial number to be viewed.

Confirm Devices

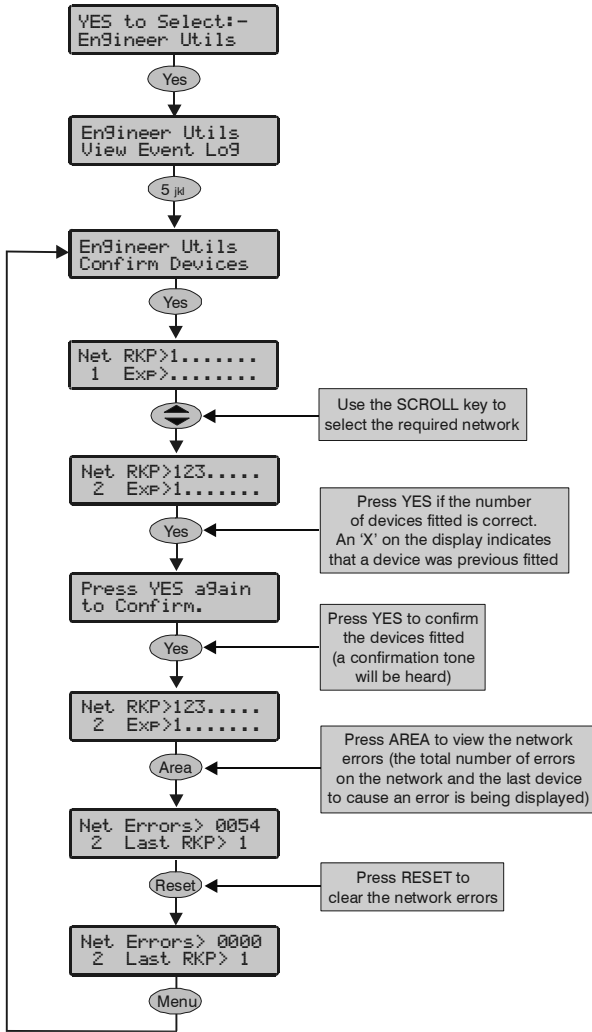


This option allows the networks to be viewed to see what devices are connected and whether there are any problems. Whenever new devices are added to the system, the networks must be checked and confirmed.

NOTE If any devices are removed from the system, the networks must be rechecked and reconfirmed.


An 'X' on the display indicates that device that was previous fitted is no longer being seen by the control panel.

View RKP Status

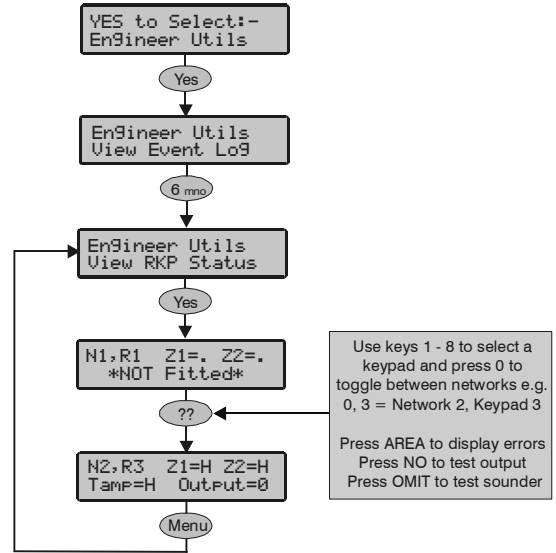


This option allows the status of the keypad, the zones and the output to be viewed.

Check Exp. Status

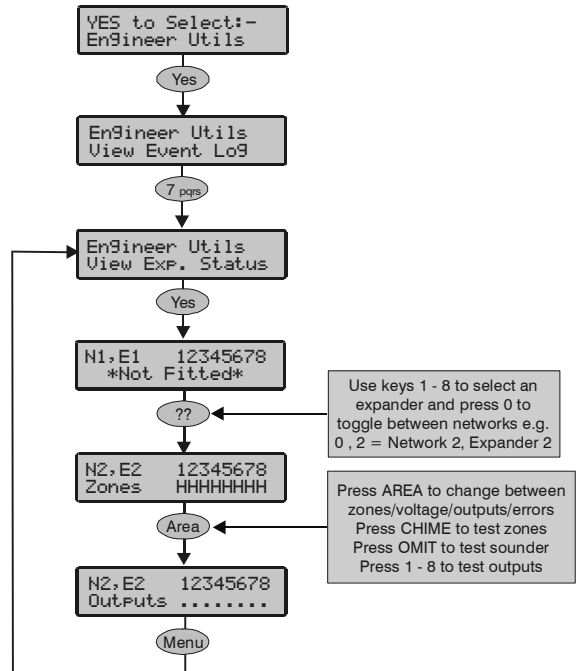


This option allows the status of the expander, the zones, voltage/inputs and outputs to be viewed.

Set System Time

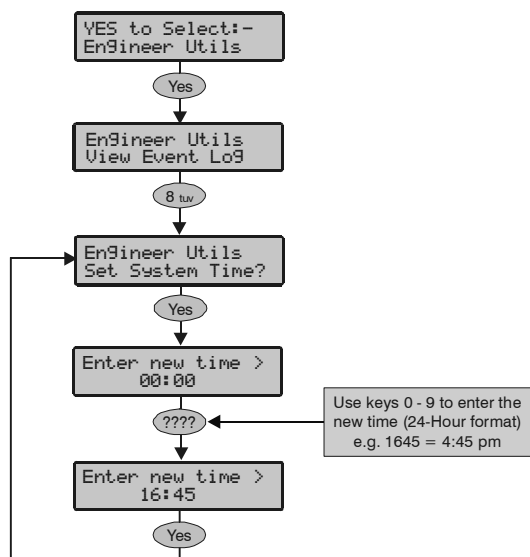


The control panel has a real time clock that is used to date and time stamp events that are recorded within the system log. The option allows you to set the control panel time.

Change Eng. Code

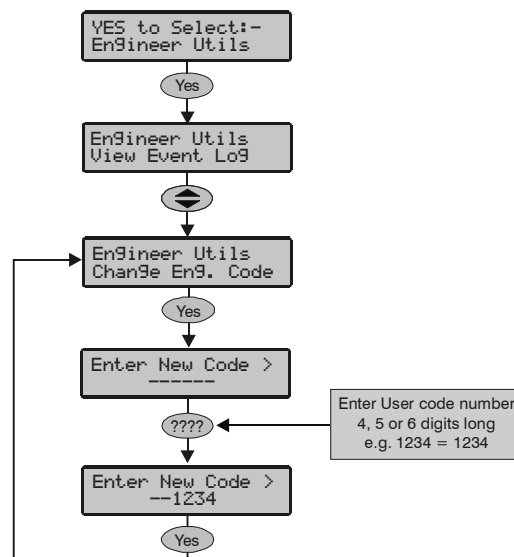


This option allows the Engineer code (User 00) to be changed. This code can be 4, 5 or 6 digits in length. The system will allow a mixture of different length User codes.

Set System Date

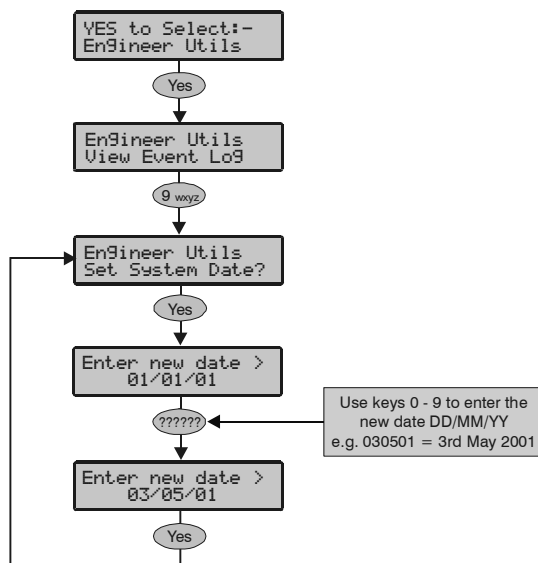

The control panel has a real time clock that is used to date and time stamp events that are recorded within the system log. The option allows you to set the control panel date.

Adjust Volumes

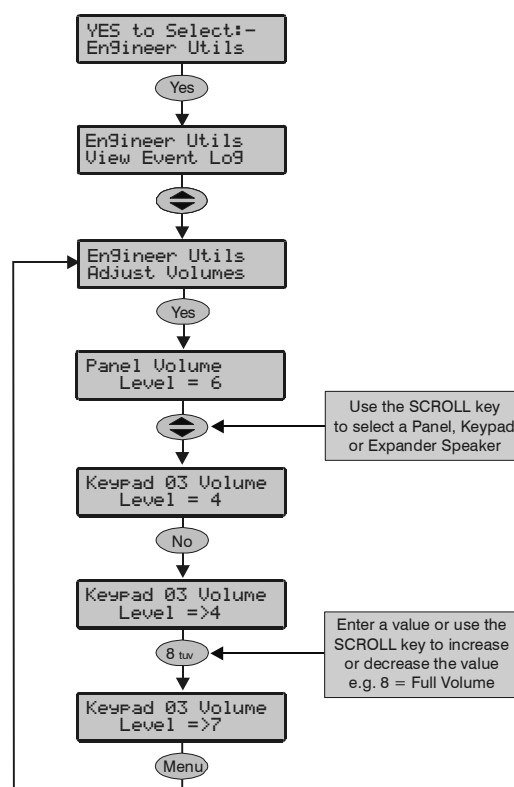


This option is used to adjust the volume level of speakers that are connected to the control panel, keypads and expanders.

NOTE Pressing the **CHIME** key will cause the speaker that is being programmed to generate the exit tone at the selected volume level.




Default NVM Data

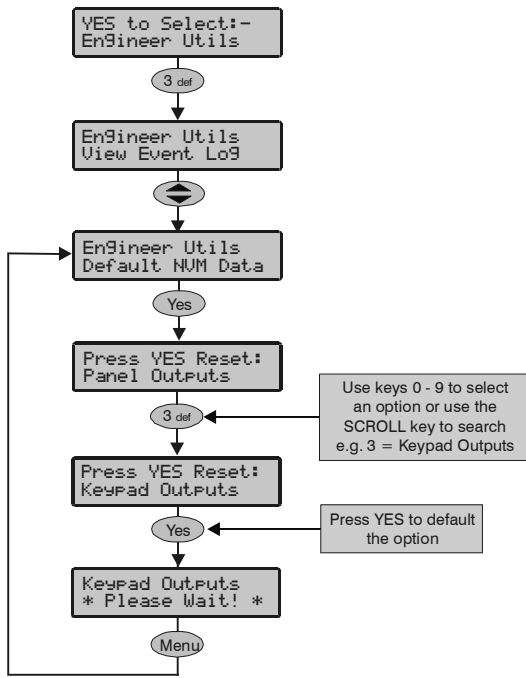

This option allows various parts of the NVM to be defaulted without having to 'Factory Default' the system.


Location Text

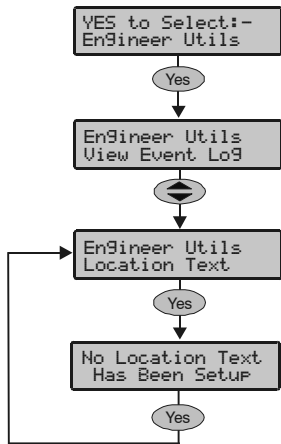

This option allows the 'Panel Location' text that has been programmed in 'System Text' to be displayed (see page 53 for programming details).


NOTE The display will automatically clear after 5 seconds.

Print Log Data

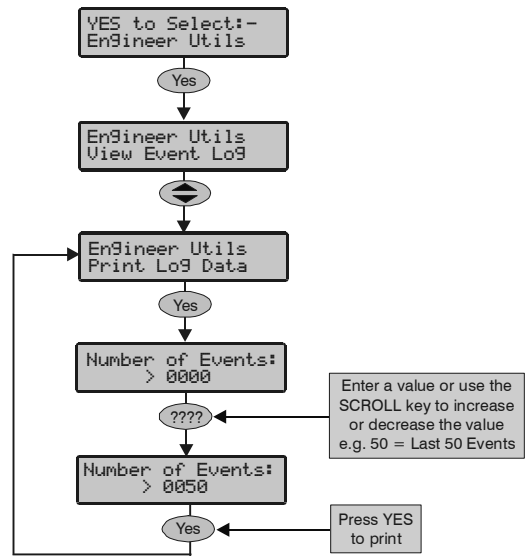


This option allows the 'Event Log' to be printed to a standard RS232 printer (see page 25 for details).

Soak Test Areas

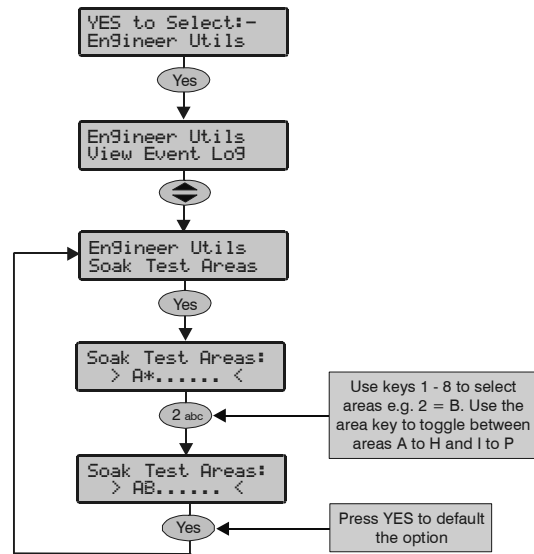

This option allows zones with the 'Soak Test' attribute to be tested by starting the 'Zone Soak Test' timer.

View iD Data

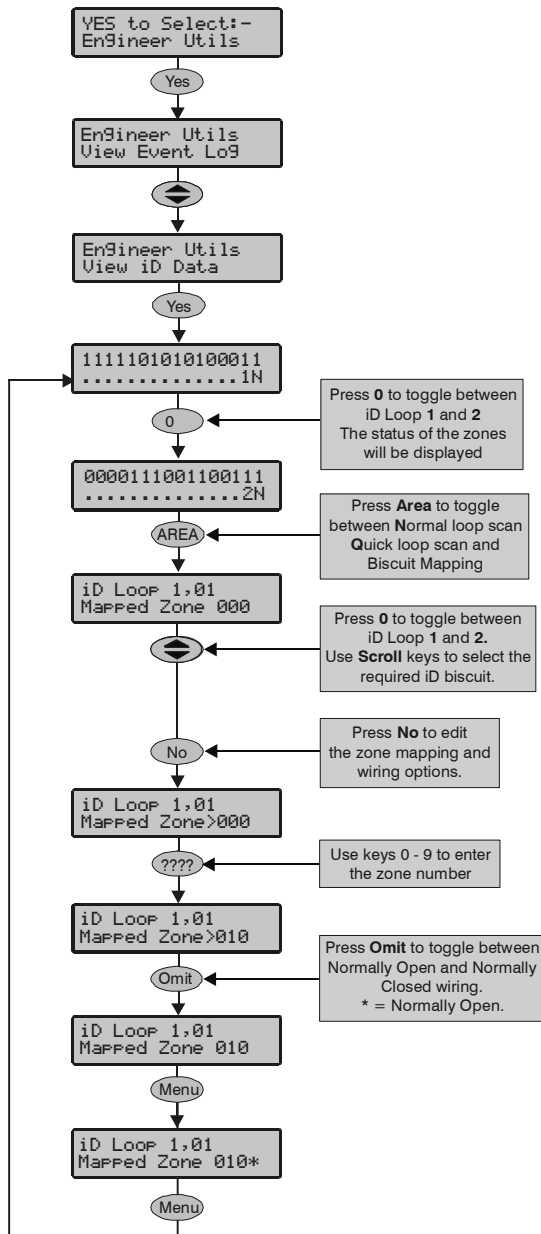

Viewing the iD Data

This option allows the 60IXD expander the iD biscuit data to be viewed to diagnostic purposes. There are two way of viewing the data from the expander:

Normal Scan Mode


This is the normal operation mode of the expander and the data being displayed is the average result of 4 successive scans of the iD loop.

Quick Scan Mode

In this mode the data being displayed is the result of each scan of the iD loop. This mode is useful for identifying problems with biscuits due to interference, high resistance connections etc.

"iD" is a registered trade mark of Chloride Safety System Limited.

Configure Radio

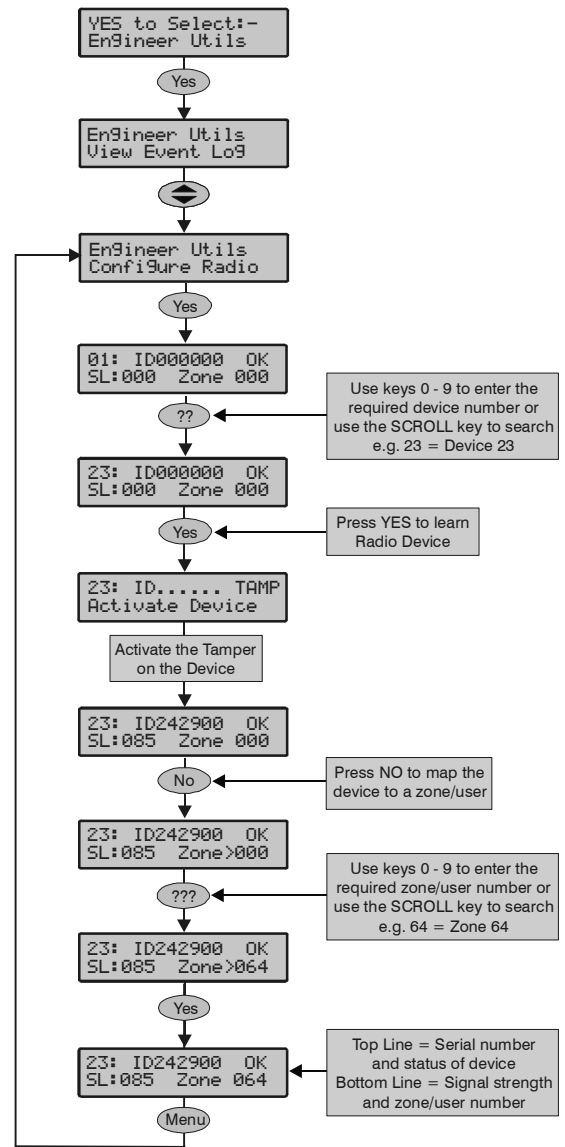

Configuring Radio devices

Up to 32 wireless detectors and up to the maximum number of users in remote FOBS can be learnt on to the system.

Wireless devices can then be mapped on to the system along with conventional detectors.

The top line on the display shows the serial number of the device and also the status i.e. Active, Tamper etc.

The bottom line of the display shows the signal strength and also which zone/user the device is mapped to.


NOTE Signal strength should be greater than 30.

The signal range is between 0 and 90

See Radio-Plus installation manual for full details.

5.10 Programming Part Arms

Alter Part Arms

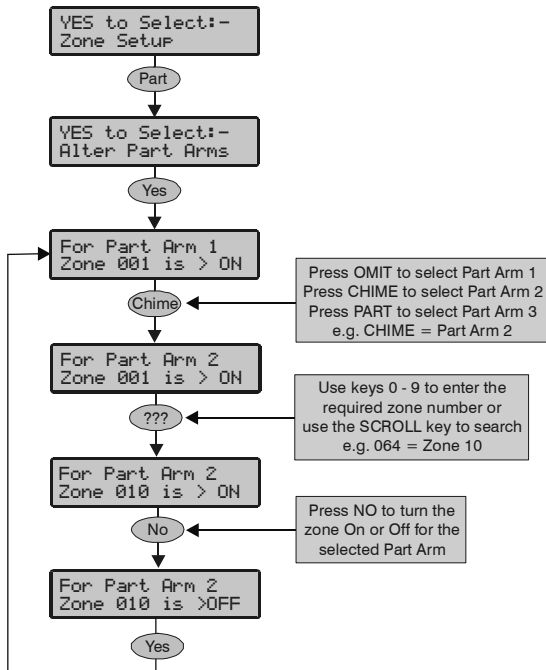

Each area on the system can have up to 3 Part Arms.

When Part Arm 1, 2 or 3 is selected, pre-programmed zones are omitted to allow access to certain parts of the building.

6. Specifications

Control Panel

Power supply

Mains Supply Voltage:	230VAC ($\pm 10\%$)
Maximum Total Current Rating	
16.5V _{AC} , 40VA transformer:	2.0ADC
Ripple	<5%
Power Supply	2A
Battery Charging Current	750mA
Maximum Available Current	1.25A
PD6662 Rated Output	See Page 11
Standby Battery Capacity	7Ah to 18Ah
Recharge Time	<24Hrs
Low Battery Fault	10.5V
Deep Discharge Protection	9.5V

Electrical

Current Consumption 48/88/168

Quiescent	70mA
Alarm (Nothing Connected)	70mA

Current Consumption 640

Quiescent	160mA
Alarm (Nothing Connected)	160mA

Fuses

Mains (2.0A _{DC})	500mA, 250V, 20mm
Battery	1.6 Amp, 250V, 20mm
Auxiliary	1 Amp, 250V, 20mm
Bell	1 Amp, 250V, 20mm
Network 1 (48/88/168)	1 Amp, 250V, 20mm
Network 2 (168)	1 Amp, 250V, 20mm
Networks 1 to 8 (640)	900mA, 250V PTC

Data Network	4-wire standard 7/0.2 alarm cable up to 500m Star, Daisy Chain or any combination of the two
---------------------	--

Remote Keypads

Premier 48	Up to 4
Premier 88	Up to 8
Premier 168	Up to 16
Premier 640	Up to 64

Expanders

Premier 48	Up to 4
Premier 88	Up to 8
Premier 168	Up to 16
Premier 640	Up to 64

Output Modules

Premier 48	Up to 2
Premier 88	Up to 4
Premier 168	Up to 8
Premier 640	Up to 32

Zones

Premier 48	8 expandable to 48
Premier 88	8 expandable to 88
Premier 168	8 expandable to 168
Premier 640	0 expandable to 640

EOL Resistor Values

EOL Resistor	2k2 (3k3)
Contact Resistor	4k7 (3k3)
Fault Resistor	2k2
0 - 1k	Zone Short
1k1 to 4k	Zone Secure
4k1 to 5k6	Zone Fault
5k7 to 8k	Zone Active
8k1 to 20k (30k)	Zone Mask
21k+ (30k+)	Zone Tamper

Digicom Outputs

Outputs 1 to 8	100mA switched to 0V
----------------	----------------------

Panel Outputs

Outputs 1 & 2 (48/88/168/640)	500mA switched to 0V
Outputs 3 & 4 (88/168/640)	500mA switched to 12V
Output 5 (88/168/640)	3 Amp Relay

Siren Outputs

Bell Trigger	1A switched to 0V
Strobe Trigger	1A switched to 0V

Speaker Output

Minimum load 8 Ω

Environmental

Operating Temperature

-10°C (+14°F) to +55°C (+131°F)

Storage Temperature

-20°C (-4°F) to +60°C (+140°F)

Maximum Humidity

95% non-condensing

EMC Environment

Residential
Commercial
Light Industrial
Industrial

Physical

Housing

Metal

Dimensions (W x H x D)

305mm x 405mm x 100mm x 2mm Steel

Battery Compartment

Up to two 12V 7.0Ah batteries or one 12V 18Ah battery

Packed Weight

5.5 Kg

Remote Keypads

Electrical

Operating Voltage	10 - 13.7VDC
Current Consumption without Prox	
Quiescent (Not Backlit)	25mA
Alarm (Not Backlit)	45mA
Fully Backlit	100mA
Alarm + Fully Backlit	145mA
Current Consumption with Prox	
Quiescent (Not Backlit)	85mA
Alarm (Not Backlit)	105mA
Fully Backlit	185mA
Alarm + Fully Backlit	205mA

Data Network	4-wire standard 7/0.2 alarm cable up to 500m Star, Daisy Chain or any combination of the two
---------------------	--

Keypad Type

<i>Premier LCD</i>	32 Character LCD
<i>Premier LCDL</i>	32 Character large LCD
<i>Premier LCDP</i>	LCD + Prox Reader
<i>Premier LCDLP</i>	LCDL + Prox Reader

Zones	2
--------------	---

EOL Resistor Values

EOL Resistor	2k2 (3k3)
Contact Resistor	4k7 (3k3)
Fault Resistor	2k2
0 - 1k	Zone Short
1k1 to 4k	Zone Secure
4k1 to 5k6	Zone Fault
5k7 to 8k	Zone Active
8k1 to 20k (30k)	Zone Mask
21k+ (30k+)	Zone Tamper

Output	100mA switched to 0V
---------------	----------------------

Back Lighting	Fully adjustable
----------------------	------------------

Speaker Output (LCDL/LCDLP)	Minimum load 8Ω
------------------------------------	-----------------

Speaker Volume (LCDL/LCDLP)	Fully adjustable
------------------------------------	------------------

Proximity Reader (LCDP/LCDLP)	Tag
--------------------------------------	-----

Environmental

Operating Temperature	-10°C (+14°F) to +55°C (+131°F)
------------------------------	---------------------------------

Storage Temperature	-20°C (-4°F) to +60°C (+140°F)
----------------------------	--------------------------------

Maximum Humidity	95% non-condensing
-------------------------	--------------------

EMC Environment	Residential Commercial Light Industrial Industrial
------------------------	---

Physical

Dimensions (W x H x D)	145mm x 115mm x 30mm
-------------------------------	----------------------

Packed Weight	260g Approx.
----------------------	--------------

Zone Expanders

Electrical

Operating Voltage	9 - 13.7VDC
--------------------------	-------------

Current Consumption 4XP 8XP

Quiescent	65mA
Alarm (Nothing Connected)	65mA

Data Network	4-wire standard 7/0.2 alarm cable up to 500m Star, Daisy Chain or any combination of the two
---------------------	--

Zones

<i>Premier 4XP</i>	4 DP or EOL zones
<i>Premier 8XP</i>	8 DP or EOL zones
<i>Premier 60IXD</i>	60 iD zones (2 loops)

EOL Resistor Values

EOL Resistor	2k2 (3k3)
Contact Resistor	4k7 (3k3)
Fault Resistor	2k2
0 - 1k	Zone Short
1k1 to 4k	Zone Secure
4k1 to 5k6	Zone Fault
5k7 to 8k	Zone Active
8k1 to 20k (30k)	Zone Mask
21k+ (30k+)	Zone Tamper

Outputs

Outputs 1 & 2 (4XP)	100mA switched to 0V
Outputs 1 - 8 (8XP)	100mA switched to 0V

Speaker Output (4XP & 8XP)	Minimum load 8Ω
---------------------------------------	-----------------

Environmental

Operating Temperature	-10°C (+14°F) to +55°C (+131°F)
------------------------------	---------------------------------

Storage Temperature	-20°C (-4°F) to +60°C (+140°F)
----------------------------	--------------------------------

Maximum Humidity	95% non-condensing
-------------------------	--------------------

EMC Environment	Residential Commercial Light Industrial Industrial
------------------------	---

Physical

Dimensions (W x H x D)	170mm x 140mm x 35mm
-------------------------------	----------------------

Packed Weight	200g Approx.
----------------------	--------------

Output Expanders

Electrical

Operating Voltage 9 - 13.7VDC

Current Consumption

Quiescent 65mA

Alarm (Nothing Connected) 65mA

Network

4-wire standard 7/0.2 alarm cable up to 250m Star, Daisy Chain or any combination of the two

Bank 1 Outputs

Outputs 1 to 8 100mA switched to 0V

Bank 2 Outputs

Outputs 1 to 8 100mA switched to 0V

Environmental

Operating Temperature -10°C (+14°F) to +55°C (+131°F)

Storage Temperature -20°C (-4°F) to +60°C (+140°F)

Maximum Humidity 95% non-condensing

EMC Environment

Residential

Commercial

Light Industrial

Industrial

Physical

Dimensions (W x H x D) 170mm x 140mm x 35mm

Packed Weight 200g Approx.

Standards

Conforms to European Union (EU) Low Voltage Directive (LVD) 73/23/EEC and Electro-Magnetic Compatibility (EMC) Directive 89/336/EEC.

The CE mark indicates that this product complies with the European requirements for safety, health, environmental and customer protection.

This equipment is designed to enable an intruder alarm system in which it is installed to comply with the requirements of security grades 1, 2 or 3 of EN 50131-1 and EN 50131-6 and is suitable for installation in any indoor environment.

Warranty

All Texecom products are designed for reliable, trouble free operation. Quality is carefully monitored by extensive computerised testing. As a result the control panel is covered by a two-year warranty against defects in materials or workmanship.

As the control panel is not a complete alarm system but only a part thereof, Texecom cannot accept responsibility or liability for any damages whatsoever based on a claim that the control panel failed to function correctly.

Due to our policy of continuous improvements Texecom reserve the right to change specification without prior notice.

Premier Keypads and Expanders are protected by UK & International Registered Design. Registered Design Numbers: 2089016 and 3004996.

Premier is a trademark of Texecom.

EN50131 Markings

All equipment is marked with the following information:

1) Name of manufacturer or supplier

This can be found on the PCB as part of the silk screen.

2) Description of the equipment

This can be found on the Barcode Label as either a full description or as a code number.

Barcode Acronyms

FEC Premier 48 1.5Adc

FEN Premier 48 2Adc

NEE Premier 88

SEN Premier 168

PSF Premier 640

3) Standard to which component claims compliance

This can be found on a small white label along with the security grade and environmental class.

4) Security Grade

This can be found on a small white label along with the standard compliance and environmental class.

5) Environmental Class

This can be found on a small white label along with the standard compliance and security grade



Declaration of Conformity

(D0247-99 Rev03)

This declaration is valid for the following product:

Device Type: Intruder Alarm Control Panel
Product Name: Premier 48, Premier 88, Premier 168 and Premier 640.

This is to confirm that this product meets all essential protection requirements relating to:

EMC Directive: 89/336/EEC (amended by 92/31/EEC & 93/68/EEC)

LVD Directive: 73/23/EEC (amended by 93/68/EEC)

The assessment of this product has been based on the following standards:

EN 55022 1998	Emission Standard for Information Technology Equipment.
EN 50024 1998	Immunity Standard for Information Technology Equipment.
EN 50130-4 1996	Immunity Standard for Fire Intruder and Social Alarm Systems.
EN 50131-1	Security Grade 3, Environmental Class II
PD6662: 2004	
EN 60950: 2000	Information Technology Equipment Essential Requirements for Safety.

On behalf of the manufacturer:

Texecom Ltd.
Texecom House
559 Wilbraham Road
Manchester
M21 0AE

This declaration is submitted by:

R J Austen
Managing Director

17th February 2003

7. Quick Reference Guide

0	Log Off Engineer
Yes	Press Yes to log out of the Engineer Programming menu

1	Zone Setup																					
Yes	Zone Types	<p>Use 1 - 8 to enter zone number, No to edit, 0 - 9 or to select a zone type, Yes to accept</p> <table border="0"> <tr> <td>0 Null</td> <td>Medical</td> </tr> <tr> <td>1 Entry/Exit 1</td> <td>24Hr Gas</td> </tr> <tr> <td>2 Entry/Exit 2</td> <td>Auxiliary</td> </tr> <tr> <td>3 Guard</td> <td>Tamper</td> </tr> <tr> <td>4 Guard Access</td> <td>Exit Terminator</td> </tr> <tr> <td>5 24Hr Audible</td> <td>Moment Key</td> </tr> <tr> <td>6 24Hr Silent</td> <td>Latching Key</td> </tr> <tr> <td>7 PA Audible</td> <td>Security Key</td> </tr> <tr> <td>8 PA Silent</td> <td>Omit Key</td> </tr> <tr> <td>9 Fire</td> <td>Custom</td> </tr> </table>	0 Null	Medical	1 Entry/Exit 1	24Hr Gas	2 Entry/Exit 2	Auxiliary	3 Guard	Tamper	4 Guard Access	Exit Terminator	5 24Hr Audible	Moment Key	6 24Hr Silent	Latching Key	7 PA Audible	Security Key	8 PA Silent	Omit Key	9 Fire	Custom
0 Null	Medical																					
1 Entry/Exit 1	24Hr Gas																					
2 Entry/Exit 2	Auxiliary																					
3 Guard	Tamper																					
4 Guard Access	Exit Terminator																					
5 24Hr Audible	Moment Key																					
6 24Hr Silent	Latching Key																					
7 PA Audible	Security Key																					
8 PA Silent	Omit Key																					
9 Fire	Custom																					
Yes	Zone Attributes 1	<p>Press No to edit, 1 - 8 to select an attribute, Yes to accept</p> <table border="0"> <tr> <td>1 O = Omittable</td> <td>5 3 = Part 3 Omit</td> </tr> <tr> <td>2 F = Force Omit</td> <td>6 A = Access</td> </tr> <tr> <td>3 1 = Part 1 Omit</td> <td>7 E = Entry/Exit 2</td> </tr> <tr> <td>4 2 = Part 2 Omit</td> <td>8 G = Guard</td> </tr> </table>	1 O = Omittable	5 3 = Part 3 Omit	2 F = Force Omit	6 A = Access	3 1 = Part 1 Omit	7 E = Entry/Exit 2	4 2 = Part 2 Omit	8 G = Guard												
1 O = Omittable	5 3 = Part 3 Omit																					
2 F = Force Omit	6 A = Access																					
3 1 = Part 1 Omit	7 E = Entry/Exit 2																					
4 2 = Part 2 Omit	8 G = Guard																					
Yes	Zone Attributes 2	<p>Press No to edit, 1 - 8 to select an attribute, Yes to accept</p> <table border="0"> <tr> <td>1 D = Double Knock</td> <td>5 R = Reset</td> </tr> <tr> <td>2 B = Beam Pair</td> <td>6 A = Auto Re-arm</td> </tr> <tr> <td>3 S = Soak Test</td> <td>7 Q = Quick Resp.</td> </tr> <tr> <td>4 F = Activity</td> <td>8 E = Eng. Alarm</td> </tr> </table>	1 D = Double Knock	5 R = Reset	2 B = Beam Pair	6 A = Auto Re-arm	3 S = Soak Test	7 Q = Quick Resp.	4 F = Activity	8 E = Eng. Alarm												
1 D = Double Knock	5 R = Reset																					
2 B = Beam Pair	6 A = Auto Re-arm																					
3 S = Soak Test	7 Q = Quick Resp.																					
4 F = Activity	8 E = Eng. Alarm																					
Yes	Key Attributes (only applicable for keyswitch zone types)	<p>Press No to edit, 1 - 5 to select an attribute, Yes to accept</p> <table border="0"> <tr> <td>1 I = Instant Arming</td> <td>5 S = Silent Arming</td> </tr> <tr> <td>2 P = Part Arming</td> <td>6 T = Time Arm Disable</td> </tr> <tr> <td>3 F = Full Disable</td> <td>7 K = Key Tube</td> </tr> <tr> <td>4 D = Disarm Only</td> <td></td> </tr> </table>	1 I = Instant Arming	5 S = Silent Arming	2 P = Part Arming	6 T = Time Arm Disable	3 F = Full Disable	7 K = Key Tube	4 D = Disarm Only													
1 I = Instant Arming	5 S = Silent Arming																					
2 P = Part Arming	6 T = Time Arm Disable																					
3 F = Full Disable	7 K = Key Tube																					
4 D = Disarm Only																						
Yes	Custom Attributes (only applicable for custom zone types)	<p>Press No to edit, 1 - 5 to select an attribute, Yes to accept</p> <table border="0"> <tr> <td>1 B = Bell/Strobe</td> <td>4 C = Enable Coms</td> </tr> <tr> <td>2 I = Internals</td> <td>5 W = Warning</td> </tr> <tr> <td>3 M = Monitor 24Hr</td> <td></td> </tr> </table>	1 B = Bell/Strobe	4 C = Enable Coms	2 I = Internals	5 W = Warning	3 M = Monitor 24Hr															
1 B = Bell/Strobe	4 C = Enable Coms																					
2 I = Internals	5 W = Warning																					
3 M = Monitor 24Hr																						
Yes	Zone Areas	Press No to edit, 1 - 8 to select an area, (0 = all areas, Area = areas A - H and I - P), Yes to accept.																				
Yes	Zone Text	<p>Press No to edit, 0 - 9 to select characters (press the required key the appropriate number of times), Yes to accept</p> <table border="0"> <tr> <td>1 . , ? ! 1 @ " -</td> <td>6 M N O 6</td> <td>Move Cursor</td> </tr> <tr> <td>2 A B C 2</td> <td>7 P Q R S 7</td> <td>Chime Copy Text to Memory</td> </tr> <tr> <td>3 D E F 3</td> <td>8 T U V 8</td> <td>Part Paste Text from Memory</td> </tr> <tr> <td>4 G H I 4</td> <td>9 W X Y Z 9</td> <td>No Upper, Lower Case, Predictive Text and Numerical</td> </tr> <tr> <td>5 J K L 5</td> <td>0 0</td> <td></td> </tr> </table>	1 . , ? ! 1 @ " -	6 M N O 6	Move Cursor	2 A B C 2	7 P Q R S 7	Chime Copy Text to Memory	3 D E F 3	8 T U V 8	Part Paste Text from Memory	4 G H I 4	9 W X Y Z 9	No Upper, Lower Case, Predictive Text and Numerical	5 J K L 5	0 0						
1 . , ? ! 1 @ " -	6 M N O 6	Move Cursor																				
2 A B C 2	7 P Q R S 7	Chime Copy Text to Memory																				
3 D E F 3	8 T U V 8	Part Paste Text from Memory																				
4 G H I 4	9 W X Y Z 9	No Upper, Lower Case, Predictive Text and Numerical																				
5 J K L 5	0 0																					
Yes	Zone Chime	<p>Press No to alter chime tone, Yes to accept</p> <table border="0"> <tr> <td>No Silent</td> <td>No Chime 1</td> <td>No Chime 2</td> <td>No Chime 3</td> </tr> </table>	No Silent	No Chime 1	No Chime 2	No Chime 3																
No Silent	No Chime 1	No Chime 2	No Chime 3																			
Yes	Zone Mask	Press No to alter Mask option, Yes to accept																				

2 _{abc}		Area Programming																																										
0 _{...}	Timers	Use <input type="button" value="↕"/> to select an area, <input type="button" value="Yes"/> to select a timer, 0_{...} - 9_{wpd} to enter a value, <input type="button" value="Yes"/> to accept <table border="0" style="width:100%; border:none;"> <tr> <td></td> <td style="text-align:right;"><i>Premier 48</i></td> <td style="text-align:right;"><i>Premier 88</i></td> <td style="text-align:right;"><i>Premier 168</i></td> </tr> <tr> <td>1: Exit Dly for Areas:</td> <td style="text-align:right;">A - D (1 - 4)</td> <td style="text-align:right;">A - H (1 - 8)</td> <td style="text-align:right;">A to P (1 - 16)</td> </tr> <tr> <td>2: Entry Dly 1 for Areas:</td> <td style="text-align:right;">A - D (1 - 4)</td> <td style="text-align:right;">A - H (1 - 8)</td> <td style="text-align:right;">A to P (1 - 16)</td> </tr> <tr> <td>3: Entry Dly 2 for Areas:</td> <td style="text-align:right;">A - D (1 - 4)</td> <td style="text-align:right;">A - H (1 - 8)</td> <td style="text-align:right;">A to P (1 - 16)</td> </tr> <tr> <td>4: 2nd Entry Dly for Areas:</td> <td style="text-align:right;">A - D (1 - 4)</td> <td style="text-align:right;">A - H (1 - 8)</td> <td style="text-align:right;">A to P (1 - 16)</td> </tr> <tr> <td>5: Bell Dly for Areas:</td> <td style="text-align:right;">A - D (1 - 4)</td> <td style="text-align:right;">A - H (1 - 8)</td> <td style="text-align:right;">A to P (1 - 16)</td> </tr> <tr> <td>6: Bell Duration for Areas:</td> <td style="text-align:right;">A - D (1 - 4)</td> <td style="text-align:right;">A - H (1 - 8)</td> <td style="text-align:right;">A to P (1 - 16)</td> </tr> <tr> <td>7: Coms Dly for Areas:</td> <td style="text-align:right;">A - D (1 - 4)</td> <td style="text-align:right;">A - H (1 - 8)</td> <td style="text-align:right;">A to P (1 - 16)</td> </tr> <tr> <td>8: Part Bell Dly for Areas:</td> <td style="text-align:right;">A - D (1 - 4)</td> <td style="text-align:right;">A - H (1 - 8)</td> <td style="text-align:right;">A to P (1 - 16)</td> </tr> </table>				<i>Premier 48</i>	<i>Premier 88</i>	<i>Premier 168</i>	1: Exit Dly for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)	2: Entry Dly 1 for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)	3: Entry Dly 2 for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)	4: 2 nd Entry Dly for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)	5: Bell Dly for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)	6: Bell Duration for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)	7: Coms Dly for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)	8: Part Bell Dly for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)				
	<i>Premier 48</i>	<i>Premier 88</i>	<i>Premier 168</i>																																									
1: Exit Dly for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)																																									
2: Entry Dly 1 for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)																																									
3: Entry Dly 2 for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)																																									
4: 2 nd Entry Dly for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)																																									
5: Bell Dly for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)																																									
6: Bell Duration for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)																																									
7: Coms Dly for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)																																									
8: Part Bell Dly for Areas:	A - D (1 - 4)	A - H (1 - 8)	A to P (1 - 16)																																									
1	Arming Modes	Use <input type="button" value="↕"/> to select an area, 1 - 5_{sv} to select arming an mode, <input type="button" value="Yes"/> to accept <table border="0" style="width:100%; border:none;"> <tr> <td><input type="button" value="1"/> Entry/Exit</td> <td><input type="button" value="4<sub>sv</sub>"/> Instant</td> </tr> <tr> <td><input type="button" value="2<sub>sv</sub>"/> Exit Term.</td> <td><input type="button" value="5<sub>sv</sub>"/> Deferred</td> </tr> <tr> <td><input type="button" value="3<sub>sv</sub>"/> Timed Exit</td> <td></td> </tr> </table>			<input type="button" value="1"/> Entry/Exit	<input type="button" value="4<sub>sv</sub>"/> Instant	<input type="button" value="2<sub>sv</sub>"/> Exit Term.	<input type="button" value="5<sub>sv</sub>"/> Deferred	<input type="button" value="3<sub>sv</sub>"/> Timed Exit																																			
<input type="button" value="1"/> Entry/Exit	<input type="button" value="4<sub>sv</sub>"/> Instant																																											
<input type="button" value="2<sub>sv</sub>"/> Exit Term.	<input type="button" value="5<sub>sv</sub>"/> Deferred																																											
<input type="button" value="3<sub>sv</sub>"/> Timed Exit																																												
2 _{sv}	Area Arm Suites	Use <input type="button" value="↕"/> to select a suite, <input type="button" value="No"/> no to edit, 1 - 8_{sv} to select an area, (0_{...}) = all areas, <input type="button" value="Area"/> = areas A - H and I - P), <input type="button" value="Yes"/> to accept																																										
3 _{sv}	Area Suite Text	Use 1 - 8 _{sv} to select a suite, <input type="button" value="No"/> to edit, 0_{...} - 9_{wpd} to select characters (press the required key the appropriate number of times), <input type="button" value="Yes"/> to accept <table border="0" style="width:100%; border:none;"> <tr> <td><input type="button" value="1"/> . , ? ! 1 @ " -</td> <td><input type="button" value="6<sub>sv</sub>"/> M N O 6</td> <td><input type="button" value="↕"/> Move Cursor</td> </tr> <tr> <td><input type="button" value="2<sub>sv</sub>"/> A B C 2</td> <td><input type="button" value="7<sub>wpd</sub>"/> P Q R S 7</td> <td><input type="button" value="Chime"/> Copy Text to Memory</td> </tr> <tr> <td><input type="button" value="3<sub>sv</sub>"/> D E F 3</td> <td><input type="button" value="8<sub>sv</sub>"/> T U V 8</td> <td><input type="button" value="Part"/> Paste Text from Memory</td> </tr> <tr> <td><input type="button" value="4<sub>sv</sub>"/> G H I 4</td> <td><input type="button" value="9<sub>wpd</sub>"/> W X Y Z 9</td> <td><input type="button" value="No"/> Upper, Lower Case, Predictive Text & Numerical</td> </tr> <tr> <td><input type="button" value="5<sub>sv</sub>"/> J K L 5</td> <td><input type="button" value="0<sub>...</sub>"/> 0 _</td> <td></td> </tr> </table>			<input type="button" value="1"/> . , ? ! 1 @ " -	<input type="button" value="6<sub>sv</sub>"/> M N O 6	<input type="button" value="↕"/> Move Cursor	<input type="button" value="2<sub>sv</sub>"/> A B C 2	<input type="button" value="7<sub>wpd</sub>"/> P Q R S 7	<input type="button" value="Chime"/> Copy Text to Memory	<input type="button" value="3<sub>sv</sub>"/> D E F 3	<input type="button" value="8<sub>sv</sub>"/> T U V 8	<input type="button" value="Part"/> Paste Text from Memory	<input type="button" value="4<sub>sv</sub>"/> G H I 4	<input type="button" value="9<sub>wpd</sub>"/> W X Y Z 9	<input type="button" value="No"/> Upper, Lower Case, Predictive Text & Numerical	<input type="button" value="5<sub>sv</sub>"/> J K L 5	<input type="button" value="0<sub>...</sub>"/> 0 _																										
<input type="button" value="1"/> . , ? ! 1 @ " -	<input type="button" value="6<sub>sv</sub>"/> M N O 6	<input type="button" value="↕"/> Move Cursor																																										
<input type="button" value="2<sub>sv</sub>"/> A B C 2	<input type="button" value="7<sub>wpd</sub>"/> P Q R S 7	<input type="button" value="Chime"/> Copy Text to Memory																																										
<input type="button" value="3<sub>sv</sub>"/> D E F 3	<input type="button" value="8<sub>sv</sub>"/> T U V 8	<input type="button" value="Part"/> Paste Text from Memory																																										
<input type="button" value="4<sub>sv</sub>"/> G H I 4	<input type="button" value="9<sub>wpd</sub>"/> W X Y Z 9	<input type="button" value="No"/> Upper, Lower Case, Predictive Text & Numerical																																										
<input type="button" value="5<sub>sv</sub>"/> J K L 5	<input type="button" value="0<sub>...</sub>"/> 0 _																																											
4 _{sv}	Suite Arm Mode	Use <input type="button" value="↕"/> to select an area, 1 - 5_{sv} to select an arming mode, <input type="button" value="Yes"/> to accept <table border="0" style="width:100%; border:none;"> <tr> <td><input type="button" value="1"/> Entry/Exit</td> <td><input type="button" value="4<sub>sv</sub>"/> Instant</td> </tr> <tr> <td><input type="button" value="2<sub>sv</sub>"/> Exit Term.</td> <td><input type="button" value="5<sub>sv</sub>"/> Deferred</td> </tr> <tr> <td><input type="button" value="3<sub>sv</sub>"/> Timed Exit</td> <td></td> </tr> </table>			<input type="button" value="1"/> Entry/Exit	<input type="button" value="4<sub>sv</sub>"/> Instant	<input type="button" value="2<sub>sv</sub>"/> Exit Term.	<input type="button" value="5<sub>sv</sub>"/> Deferred	<input type="button" value="3<sub>sv</sub>"/> Timed Exit																																			
<input type="button" value="1"/> Entry/Exit	<input type="button" value="4<sub>sv</sub>"/> Instant																																											
<input type="button" value="2<sub>sv</sub>"/> Exit Term.	<input type="button" value="5<sub>sv</sub>"/> Deferred																																											
<input type="button" value="3<sub>sv</sub>"/> Timed Exit																																												
5 _{sv}	Area Options	Use <input type="button" value="↕"/> to select an option, <input type="button" value="No"/> to edit, 1 - 8_{sv} to select an area, (0_{...}) = all areas, <input type="button" value="Area"/> = areas A - H and I - P), <input type="button" value="Yes"/> to accept <table border="0" style="width:100%; border:none;"> <tr> <td>01: Auto Part Arm</td> <td>21: Unarm Fire Coms</td> </tr> <tr> <td>02: Part Arm Instant</td> <td>22: Unarm Tamper Coms</td> </tr> <tr> <td>03: Part Arm Silent</td> <td>23: Auto Arm Areas</td> </tr> <tr> <td>04: Remote Arm</td> <td>24: Area A Foyer</td> </tr> <tr> <td>05: Remote Disarm</td> <td>25: Log Part Omits</td> </tr> <tr> <td>06: Panel Tamper</td> <td>26: Multi Knock Area</td> </tr> <tr> <td>07: Bell Tamper</td> <td>27: UDL Keypad</td> </tr> <tr> <td>08: Auxiliary Tamper</td> <td>28: Auto Chime (C2A)</td> </tr> <tr> <td>09: Panel Speaker</td> <td>29: Confirm in Entry</td> </tr> <tr> <td>10: Bell & Strobe op</td> <td>30: Conf. After Entry</td> </tr> <tr> <td>11: Alarm Eng Reset</td> <td>31: Enable Part Arms</td> </tr> <tr> <td>12: Confirmation Reset</td> <td>32: Bell Squawk</td> </tr> <tr> <td>13: Tamper Eng Reset</td> <td>33: Fob After Entry</td> </tr> <tr> <td>14: Anti-code Reset</td> <td>34: Armed = Coms</td> </tr> <tr> <td>15: ATS Path Fault</td> <td>35: 2-Wire Smoke</td> </tr> <tr> <td>16: Arm With No ATS</td> <td>36: Fault Eng Reset</td> </tr> <tr> <td>17: AC Mains Fail</td> <td>37: No ATS Eng Rst</td> </tr> <tr> <td>18: Arm With AC Fail</td> <td>38: AC Fail Eng Rst</td> </tr> <tr> <td>19: Area Arm Coms</td> <td>39: Mask When Armed</td> </tr> <tr> <td>20: Part Arm Coms</td> <td></td> </tr> </table>			01: Auto Part Arm	21: Unarm Fire Coms	02: Part Arm Instant	22: Unarm Tamper Coms	03: Part Arm Silent	23: Auto Arm Areas	04: Remote Arm	24: Area A Foyer	05: Remote Disarm	25: Log Part Omits	06: Panel Tamper	26: Multi Knock Area	07: Bell Tamper	27: UDL Keypad	08: Auxiliary Tamper	28: Auto Chime (C2A)	09: Panel Speaker	29: Confirm in Entry	10: Bell & Strobe op	30: Conf. After Entry	11: Alarm Eng Reset	31: Enable Part Arms	12: Confirmation Reset	32: Bell Squawk	13: Tamper Eng Reset	33: Fob After Entry	14: Anti-code Reset	34: Armed = Coms	15: ATS Path Fault	35: 2-Wire Smoke	16: Arm With No ATS	36: Fault Eng Reset	17: AC Mains Fail	37: No ATS Eng Rst	18: Arm With AC Fail	38: AC Fail Eng Rst	19: Area Arm Coms	39: Mask When Armed	20: Part Arm Coms	
01: Auto Part Arm	21: Unarm Fire Coms																																											
02: Part Arm Instant	22: Unarm Tamper Coms																																											
03: Part Arm Silent	23: Auto Arm Areas																																											
04: Remote Arm	24: Area A Foyer																																											
05: Remote Disarm	25: Log Part Omits																																											
06: Panel Tamper	26: Multi Knock Area																																											
07: Bell Tamper	27: UDL Keypad																																											
08: Auxiliary Tamper	28: Auto Chime (C2A)																																											
09: Panel Speaker	29: Confirm in Entry																																											
10: Bell & Strobe op	30: Conf. After Entry																																											
11: Alarm Eng Reset	31: Enable Part Arms																																											
12: Confirmation Reset	32: Bell Squawk																																											
13: Tamper Eng Reset	33: Fob After Entry																																											
14: Anti-code Reset	34: Armed = Coms																																											
15: ATS Path Fault	35: 2-Wire Smoke																																											
16: Arm With No ATS	36: Fault Eng Reset																																											
17: AC Mains Fail	37: No ATS Eng Rst																																											
18: Arm With AC Fail	38: AC Fail Eng Rst																																											
19: Area Arm Coms	39: Mask When Armed																																											
20: Part Arm Coms																																												
6 _{sv}	Time Arm Areas	Use <input type="button" value="↕"/> to select an area, <input type="button" value="Yes"/> to toggle between the arm and disarm timer, 1 - 8_{sv} to select timers, <input type="button" value="Yes"/> to accept																																										
7 _{wpd}	Area Text	Use <input type="button" value="↕"/> to select an area, <input type="button" value="No"/> to edit, 0_{...} - 9_{wpd} to select characters (press the required key the appropriate number of times), <input type="button" value="Yes"/> to accept																																										

3 _{def}	Global Options																																									
0 _{...}	System Timers	<p>Use ↕ to select a timer, 0_{...} - 9_{wp} to enter a value, Yes to accept</p> <table border="0"> <tr> <td>01: Exit Settle Time</td> <td>13: Pulse Period 2</td> <td>25: Zone Response</td> </tr> <tr> <td>02: Global Bell Dly.</td> <td>14: Pulse Period 3</td> <td>26: Keypad PA Delay</td> </tr> <tr> <td>03: Global Bell Dur.</td> <td>15: ATS Fault Delay</td> <td>27: Confirmation Dly</td> </tr> <tr> <td>04: Double Knock Dly</td> <td>16: AC Off Delay</td> <td>28: Warning Delay</td> </tr> <tr> <td>05: Beam Pair Time</td> <td>17: Batt Test Period</td> <td>29: Keypad Lock Time</td> </tr> <tr> <td>06: Activity Delay</td> <td>18: Batt Test Time</td> <td>30: Eng. Log Off Dly</td> </tr> <tr> <td>07: Abort Delay</td> <td>19: Soak Test Time</td> <td>31: Fire Bell Delay</td> </tr> <tr> <td>08: Courtesy Time</td> <td>20: Service Interval</td> <td>32: Forced Entry Dly</td> </tr> <tr> <td>09: Defer Arming By</td> <td>21: Test Call Every</td> <td>33: Supervision Time</td> </tr> <tr> <td>10: Auto Arm Delay</td> <td>22: Min Random Time</td> <td>34: Poll IP Every</td> </tr> <tr> <td>11: Menu Time Out</td> <td>23: Max Random Time</td> <td></td> </tr> <tr> <td>12: Pulse Period 1</td> <td>24: Door Strike Time</td> <td></td> </tr> </table>	01: Exit Settle Time	13: Pulse Period 2	25: Zone Response	02: Global Bell Dly.	14: Pulse Period 3	26: Keypad PA Delay	03: Global Bell Dur.	15: ATS Fault Delay	27: Confirmation Dly	04: Double Knock Dly	16: AC Off Delay	28: Warning Delay	05: Beam Pair Time	17: Batt Test Period	29: Keypad Lock Time	06: Activity Delay	18: Batt Test Time	30: Eng. Log Off Dly	07: Abort Delay	19: Soak Test Time	31: Fire Bell Delay	08: Courtesy Time	20: Service Interval	32: Forced Entry Dly	09: Defer Arming By	21: Test Call Every	33: Supervision Time	10: Auto Arm Delay	22: Min Random Time	34: Poll IP Every	11: Menu Time Out	23: Max Random Time		12: Pulse Period 1	24: Door Strike Time					
01: Exit Settle Time	13: Pulse Period 2	25: Zone Response																																								
02: Global Bell Dly.	14: Pulse Period 3	26: Keypad PA Delay																																								
03: Global Bell Dur.	15: ATS Fault Delay	27: Confirmation Dly																																								
04: Double Knock Dly	16: AC Off Delay	28: Warning Delay																																								
05: Beam Pair Time	17: Batt Test Period	29: Keypad Lock Time																																								
06: Activity Delay	18: Batt Test Time	30: Eng. Log Off Dly																																								
07: Abort Delay	19: Soak Test Time	31: Fire Bell Delay																																								
08: Courtesy Time	20: Service Interval	32: Forced Entry Dly																																								
09: Defer Arming By	21: Test Call Every	33: Supervision Time																																								
10: Auto Arm Delay	22: Min Random Time	34: Poll IP Every																																								
11: Menu Time Out	23: Max Random Time																																									
12: Pulse Period 1	24: Door Strike Time																																									
1	System Config.	<p>Use ↕ to select an option, No to change the option, Yes to accept</p> <table border="0"> <tr> <td>00: (No Bell/Bell on) Arm Fail</td> <td>20: (Predictive/Normal) Text</td> </tr> <tr> <td>01: Bell is an (SAB/SCB)</td> <td>21: Zone Short=(Active/Tamper)</td> </tr> <tr> <td>02: Clock is (12Hr/24Hr)</td> <td>22: R/R=(Reset Only/Silence/RST)</td> </tr> <tr> <td>03: (Manual/Auto) BST/GMT</td> <td>23: User Codes (Pulse/Latch)</td> </tr> <tr> <td>04: (Hide/View) Armed Areas</td> <td>24: Test Call = (Timed/Unarmed)</td> </tr> <tr> <td>05: (Area/Global) Bell Time</td> <td>25: Batt Test = (Timed/Disarm)</td> </tr> <tr> <td>06: 24Hr Omit (Global/Local)</td> <td>26: Bell = (1st Alarm/2nd Alarm)</td> </tr> <tr> <td>07: (Leave/Remove) Omits</td> <td>27: SNDR = (1st Alarm/2nd Alarm)</td> </tr> <tr> <td>08: Away (Override/Enforce) Delay</td> <td>28: Conf. = (Instant/Delayed)</td> </tr> <tr> <td>09: NVM is (Unlocked/Locked)</td> <td>29: Abort = (Eng. Reset/User Reset)</td> </tr> <tr> <td>10: Engineer (Only/+ User)</td> <td>30: (Auto/Manual) AV Outputs</td> </tr> <tr> <td>11: Chime (Audible/Visible)</td> <td>31: Clock = (50Hz/Crystal)</td> </tr> <tr> <td>12: Omit Tamper (NO/YES)</td> <td>32: (40/80) Column Printer</td> </tr> <tr> <td>13: (Offline/Online) Printing</td> <td>33: (Enable/Disable) Text</td> </tr> <tr> <td>14: Activity Fault (View/Hide)</td> <td>34: EN50131 (Disabled/Enabled)</td> </tr> <tr> <td>15: (Hide/View) Exit Errors</td> <td>34: (2nd Zone /1st Zone) = Confirm</td> </tr> <tr> <td>16: (No/Enable) Code Tamper</td> <td>35: (Global/Local) Keypads</td> </tr> <tr> <td>17: Code Tamp (Alarms/Locks)</td> <td>36: Panel Grade (2/3)</td> </tr> <tr> <td>18: Areas (1-8/A-H) & I-P</td> <td>37: (Enable/Disable) RF FOB PA</td> </tr> <tr> <td>19: (Auto/Manual) Area Select</td> <td>38: Mask=(Fault/Alarm)</td> </tr> </table>	00: (No Bell/Bell on) Arm Fail	20: (Predictive/Normal) Text	01: Bell is an (SAB/SCB)	21: Zone Short=(Active/Tamper)	02: Clock is (12Hr/24Hr)	22: R/R=(Reset Only/Silence/RST)	03: (Manual/Auto) BST/GMT	23: User Codes (Pulse/Latch)	04: (Hide/View) Armed Areas	24: Test Call = (Timed/Unarmed)	05: (Area/Global) Bell Time	25: Batt Test = (Timed/Disarm)	06: 24Hr Omit (Global/Local)	26: Bell = (1 st Alarm/2 nd Alarm)	07: (Leave/Remove) Omits	27: SNDR = (1 st Alarm/2 nd Alarm)	08: Away (Override/Enforce) Delay	28: Conf. = (Instant/Delayed)	09: NVM is (Unlocked/Locked)	29: Abort = (Eng. Reset/User Reset)	10: Engineer (Only/+ User)	30: (Auto/Manual) AV Outputs	11: Chime (Audible/Visible)	31: Clock = (50Hz/Crystal)	12: Omit Tamper (NO/YES)	32: (40/80) Column Printer	13: (Offline/Online) Printing	33: (Enable/Disable) Text	14: Activity Fault (View/Hide)	34: EN50131 (Disabled/Enabled)	15: (Hide/View) Exit Errors	34: (2 nd Zone /1 st Zone) = Confirm	16: (No/Enable) Code Tamper	35: (Global/Local) Keypads	17: Code Tamp (Alarms/Locks)	36: Panel Grade (2/3)	18: Areas (1-8/A-H) & I-P	37: (Enable/Disable) RF FOB PA	19: (Auto/Manual) Area Select	38: Mask=(Fault/Alarm)
00: (No Bell/Bell on) Arm Fail	20: (Predictive/Normal) Text																																									
01: Bell is an (SAB/SCB)	21: Zone Short=(Active/Tamper)																																									
02: Clock is (12Hr/24Hr)	22: R/R=(Reset Only/Silence/RST)																																									
03: (Manual/Auto) BST/GMT	23: User Codes (Pulse/Latch)																																									
04: (Hide/View) Armed Areas	24: Test Call = (Timed/Unarmed)																																									
05: (Area/Global) Bell Time	25: Batt Test = (Timed/Disarm)																																									
06: 24Hr Omit (Global/Local)	26: Bell = (1 st Alarm/2 nd Alarm)																																									
07: (Leave/Remove) Omits	27: SNDR = (1 st Alarm/2 nd Alarm)																																									
08: Away (Override/Enforce) Delay	28: Conf. = (Instant/Delayed)																																									
09: NVM is (Unlocked/Locked)	29: Abort = (Eng. Reset/User Reset)																																									
10: Engineer (Only/+ User)	30: (Auto/Manual) AV Outputs																																									
11: Chime (Audible/Visible)	31: Clock = (50Hz/Crystal)																																									
12: Omit Tamper (NO/YES)	32: (40/80) Column Printer																																									
13: (Offline/Online) Printing	33: (Enable/Disable) Text																																									
14: Activity Fault (View/Hide)	34: EN50131 (Disabled/Enabled)																																									
15: (Hide/View) Exit Errors	34: (2 nd Zone /1 st Zone) = Confirm																																									
16: (No/Enable) Code Tamper	35: (Global/Local) Keypads																																									
17: Code Tamp (Alarms/Locks)	36: Panel Grade (2/3)																																									
18: Areas (1-8/A-H) & I-P	37: (Enable/Disable) RF FOB PA																																									
19: (Auto/Manual) Area Select	38: Mask=(Fault/Alarm)																																									
2 _{acc}	System Options	<p>Use ↕ to select an Option, 0_{...} - 9_{wp} to enter a value, Yes to accept</p> <table border="0"> <tr> <td>1: Advisory Volume</td> <td>4: Anti-code Resets</td> <td>7: Quick Count</td> </tr> <tr> <td>2: Chime Volume</td> <td>5: Multiple Knocks</td> <td>8: Modem Level</td> </tr> <tr> <td>3: Number Of Re-Arms</td> <td>6: Modem Levels</td> <td></td> </tr> </table>	1: Advisory Volume	4: Anti-code Resets	7: Quick Count	2: Chime Volume	5: Multiple Knocks	8: Modem Level	3: Number Of Re-Arms	6: Modem Levels																																
1: Advisory Volume	4: Anti-code Resets	7: Quick Count																																								
2: Chime Volume	5: Multiple Knocks	8: Modem Level																																								
3: Number Of Re-Arms	6: Modem Levels																																									
3 _{def}	Monitor Hardware	<p>Press No to edit, ↕ to select an option, No to change the option, Yes to accept</p> <table border="0"> <tr> <td>1 P = ATS Path Fault</td> <td>4_{ps} B = Bell Tamper</td> <td>7_{ps} B = Battery Faults</td> </tr> <tr> <td>2_{acc} A = AC Power</td> <td>5_{ps} A = Aux Tamper</td> <td></td> </tr> <tr> <td>3_{def} F = Aux Fuse Blown</td> <td>6_{ms} L = Panel Lid</td> <td></td> </tr> </table>	1 P = ATS Path Fault	4 _{ps} B = Bell Tamper	7 _{ps} B = Battery Faults	2 _{acc} A = AC Power	5 _{ps} A = Aux Tamper		3 _{def} F = Aux Fuse Blown	6 _{ms} L = Panel Lid																																
1 P = ATS Path Fault	4 _{ps} B = Bell Tamper	7 _{ps} B = Battery Faults																																								
2 _{acc} A = AC Power	5 _{ps} A = Aux Tamper																																									
3 _{def} F = Aux Fuse Blown	6 _{ms} L = Panel Lid																																									
4 _{ps}	Control Timers	<p>Use ↕ to select an area, 0_{...} - 9_{wp} to enter the 1st On time, Yes to accept Use 1 - 7_{ps} to select the 1st On time days of operation, Yes to accept Use 0_{...} - 9_{wp} to enter the 1st Off time, Yes to accept Use 1 - 7_{ps} to select the 1st Off time days of operation, Yes to accept</p>																																								
5 _{ps}	System Text	<p>Use ↕ to select a message, 0_{...} - 9_{wp} to select characters (press the required key the appropriate number of times), Yes to accept</p>																																								
6 _{ms}	Part Arm Text	<p>Use ↕ to select a Part Arm, No to edit the Part Arm text, 0_{...} - 9_{wp} to select characters (press the required key the appropriate number of times), Yes to accept</p>																																								
7 _{ps}	Holiday Dates	<p>Use ↕ to select a holiday date, 0_{...} - 9_{wp} to enter the required date (D D M M Y Y), Yes to accept</p>																																								
8 _{ps}	Speaker Tones	<p>Use ↕ to select a tone type, No to turn the tone on/off, Yes to accept</p>																																								
9 _{wp}	PC Output Text	<p>Use ↕ to select an Output, No to edit, 0_{...} - 9_{wp} to select characters (press the required key the appropriate number of times), Yes to accept</p>																																								
↕	Custom O/P Text	<p>Use ↕ to select an Output, No to edit, 0_{...} - 9_{wp} to select characters (press the required key the appropriate number of times), Yes to accept</p>																																								

Key	Output Group	Outputs Types																																																																					
0	Not Used:	Press Yes to accept																																																																					
1	System:	<p>Use 0 - 9 to enter an output type or use \blacktriangleleft to search, Yes to accept</p> <table border="0"> <tr> <td>00: ATS Path Fault</td> <td>18: UDL Lockout</td> <td>35: Custom 4 Stage A</td> </tr> <tr> <td>01: Mains Power Off</td> <td>19: UDL Call Active</td> <td>36: Custom 4 Stage B</td> </tr> <tr> <td>02: Aux Fuse Fault</td> <td>20: UDL Enabled</td> <td>37: Custom 4 Stage AB</td> </tr> <tr> <td>03: Auxiliary Tamper</td> <td>21: Confirmed Alarm</td> <td>38: Com 1 Fault</td> </tr> <tr> <td>04: Bell Tamper</td> <td>22: Custom 1 Stage A</td> <td>39: Com 2 Fault</td> </tr> <tr> <td>05: Panel Lid Tamper</td> <td>23: Custom 1 Stage B</td> <td>40: Com 1 No Signal</td> </tr> <tr> <td>06: Engineer Working</td> <td>24: Custom 1 Stage AB</td> <td>41: Com 2 No Signal</td> </tr> <tr> <td>07: Confirm Devices</td> <td>25: Custom 2 Stage A</td> <td>42: Coms Fault</td> </tr> <tr> <td>08: Service Required</td> <td>26: Custom 2 Stage B</td> <td>43: Radio Jamming</td> </tr> <tr> <td>09: Bell Fuse Blown</td> <td>27: Custom 2 Stage AB</td> <td>46: Radio RX Tamper</td> </tr> <tr> <td>10: Battery Fault</td> <td>28: Radio-Pad Failed</td> <td>47: Detector Test</td> </tr> <tr> <td>11: Battery Test On</td> <td>30: No Radio Signal</td> <td>48: ATS Remote Test</td> </tr> <tr> <td>12: Courtesy Light</td> <td>31: Radio-Pad Lost</td> <td>49: No ATS Available</td> </tr> <tr> <td>13: System Open</td> <td>30: No Radio Signal</td> <td>50: CIE Fault</td> </tr> <tr> <td>14: Fully Arm</td> <td>31: Radio-Pad Lost</td> <td>51: PSU Fuse Blown</td> </tr> <tr> <td>15: Digi Failed</td> <td>32: Custom 3 Stage A</td> <td>52: PSU Battery Fit</td> </tr> <tr> <td>16: Digi Successful</td> <td>33: Custom 3 Stage B</td> <td></td> </tr> <tr> <td>17: Digi Active</td> <td>34: Custom 3 Stage AB</td> <td></td> </tr> </table>	00: ATS Path Fault	18: UDL Lockout	35: Custom 4 Stage A	01: Mains Power Off	19: UDL Call Active	36: Custom 4 Stage B	02: Aux Fuse Fault	20: UDL Enabled	37: Custom 4 Stage AB	03: Auxiliary Tamper	21: Confirmed Alarm	38: Com 1 Fault	04: Bell Tamper	22: Custom 1 Stage A	39: Com 2 Fault	05: Panel Lid Tamper	23: Custom 1 Stage B	40: Com 1 No Signal	06: Engineer Working	24: Custom 1 Stage AB	41: Com 2 No Signal	07: Confirm Devices	25: Custom 2 Stage A	42: Coms Fault	08: Service Required	26: Custom 2 Stage B	43: Radio Jamming	09: Bell Fuse Blown	27: Custom 2 Stage AB	46: Radio RX Tamper	10: Battery Fault	28: Radio-Pad Failed	47: Detector Test	11: Battery Test On	30: No Radio Signal	48: ATS Remote Test	12: Courtesy Light	31: Radio-Pad Lost	49: No ATS Available	13: System Open	30: No Radio Signal	50: CIE Fault	14: Fully Arm	31: Radio-Pad Lost	51: PSU Fuse Blown	15: Digi Failed	32: Custom 3 Stage A	52: PSU Battery Fit	16: Digi Successful	33: Custom 3 Stage B		17: Digi Active	34: Custom 3 Stage AB																
00: ATS Path Fault	18: UDL Lockout	35: Custom 4 Stage A																																																																					
01: Mains Power Off	19: UDL Call Active	36: Custom 4 Stage B																																																																					
02: Aux Fuse Fault	20: UDL Enabled	37: Custom 4 Stage AB																																																																					
03: Auxiliary Tamper	21: Confirmed Alarm	38: Com 1 Fault																																																																					
04: Bell Tamper	22: Custom 1 Stage A	39: Com 2 Fault																																																																					
05: Panel Lid Tamper	23: Custom 1 Stage B	40: Com 1 No Signal																																																																					
06: Engineer Working	24: Custom 1 Stage AB	41: Com 2 No Signal																																																																					
07: Confirm Devices	25: Custom 2 Stage A	42: Coms Fault																																																																					
08: Service Required	26: Custom 2 Stage B	43: Radio Jamming																																																																					
09: Bell Fuse Blown	27: Custom 2 Stage AB	46: Radio RX Tamper																																																																					
10: Battery Fault	28: Radio-Pad Failed	47: Detector Test																																																																					
11: Battery Test On	30: No Radio Signal	48: ATS Remote Test																																																																					
12: Courtesy Light	31: Radio-Pad Lost	49: No ATS Available																																																																					
13: System Open	30: No Radio Signal	50: CIE Fault																																																																					
14: Fully Arm	31: Radio-Pad Lost	51: PSU Fuse Blown																																																																					
15: Digi Failed	32: Custom 3 Stage A	52: PSU Battery Fit																																																																					
16: Digi Successful	33: Custom 3 Stage B																																																																						
17: Digi Active	34: Custom 3 Stage AB																																																																						
2	Area:	<p>Use 0 - 9 to enter an output type or use \blacktriangleleft to search, 1 - 8 to select an area, (0) = all areas, (Area) = areas A - H and I - P), Yes to accept</p> <table border="0"> <tr> <td>00: Intruder Alarm</td> <td>23: Part Armed</td> <td>46: Time Arming</td> </tr> <tr> <td>01: Guard 1 Alarm</td> <td>24: Part Arming</td> <td>47: 1st Code Entered</td> </tr> <tr> <td>02: Guard 2 Alarm</td> <td>25: Force Arm</td> <td>48: 2nd Code Entered</td> </tr> <tr> <td>03: Entry Alarm</td> <td>26: Force Arming</td> <td>49: Area Secured</td> </tr> <tr> <td>04: Confirmed Alarm</td> <td>27: Arm Fail</td> <td>50: Part Armed 1</td> </tr> <tr> <td>05: 24Hr Audible</td> <td>28: Bell SAB</td> <td>51: Part Armed 2</td> </tr> <tr> <td>06: 24Hr Silent</td> <td>29: Bell SCB</td> <td>52: Part Armed 3</td> </tr> <tr> <td>07: 24Hr Gas</td> <td>30: Strobe</td> <td>53: Custom Alarm</td> </tr> <tr> <td>08: PA Audible</td> <td>31: Switch 12 Volts</td> <td>54: Zone Warning</td> </tr> <tr> <td>09: PA Silent</td> <td>32: Detector Reset</td> <td>55: Arm Fail Warning</td> </tr> <tr> <td>10: Duress</td> <td>33: Walk Test Active</td> <td>56: Forced Entry</td> </tr> <tr> <td>11: Fire Alarm</td> <td>34: Zones Omitted</td> <td>57: Zones Locked Out</td> </tr> <tr> <td>12: Medical</td> <td>35: 24Hr Zones Omit</td> <td>58: All Armed</td> </tr> <tr> <td>13: Auxiliary Alarm</td> <td>36: Reset Required</td> <td>59: Auto Arm Disable</td> </tr> <tr> <td>14: Tamper Alarm</td> <td>37: Door Strike</td> <td>60: Armed / Alarm</td> </tr> <tr> <td>15: Alarm Abort</td> <td>38: Chime Mimic</td> <td>61: Intruder Alarm</td> </tr> <tr> <td>16: Ready</td> <td>39: Chime Enabled</td> <td>62: Speaker Mimic</td> </tr> <tr> <td>17: Entry Mode</td> <td>40: DK First Knock</td> <td>63: Full Arm/Exit</td> </tr> <tr> <td>18: 2nd Entry Mode</td> <td>41: BP First Knock</td> <td>64: Detector Fault</td> </tr> <tr> <td>19: Exit Mode</td> <td>42: On Test</td> <td>65: Detector Mask</td> </tr> <tr> <td>20: Entry/Exit Mode</td> <td>43: Test Fail</td> <td>66: Fault Present</td> </tr> <tr> <td>21: Armed</td> <td>44: Internal Alarm</td> <td>67: LED Control</td> </tr> <tr> <td>22: Full Arm</td> <td>45: Auto Arming</td> <td>68: Full Arm Entry</td> </tr> </table>	00: Intruder Alarm	23: Part Armed	46: Time Arming	01: Guard 1 Alarm	24: Part Arming	47: 1 st Code Entered	02: Guard 2 Alarm	25: Force Arm	48: 2 nd Code Entered	03: Entry Alarm	26: Force Arming	49: Area Secured	04: Confirmed Alarm	27: Arm Fail	50: Part Armed 1	05: 24Hr Audible	28: Bell SAB	51: Part Armed 2	06: 24Hr Silent	29: Bell SCB	52: Part Armed 3	07: 24Hr Gas	30: Strobe	53: Custom Alarm	08: PA Audible	31: Switch 12 Volts	54: Zone Warning	09: PA Silent	32: Detector Reset	55: Arm Fail Warning	10: Duress	33: Walk Test Active	56: Forced Entry	11: Fire Alarm	34: Zones Omitted	57: Zones Locked Out	12: Medical	35: 24Hr Zones Omit	58: All Armed	13: Auxiliary Alarm	36: Reset Required	59: Auto Arm Disable	14: Tamper Alarm	37: Door Strike	60: Armed / Alarm	15: Alarm Abort	38: Chime Mimic	61: Intruder Alarm	16: Ready	39: Chime Enabled	62: Speaker Mimic	17: Entry Mode	40: DK First Knock	63: Full Arm/Exit	18: 2 nd Entry Mode	41: BP First Knock	64: Detector Fault	19: Exit Mode	42: On Test	65: Detector Mask	20: Entry/Exit Mode	43: Test Fail	66: Fault Present	21: Armed	44: Internal Alarm	67: LED Control	22: Full Arm	45: Auto Arming	68: Full Arm Entry
00: Intruder Alarm	23: Part Armed	46: Time Arming																																																																					
01: Guard 1 Alarm	24: Part Arming	47: 1 st Code Entered																																																																					
02: Guard 2 Alarm	25: Force Arm	48: 2 nd Code Entered																																																																					
03: Entry Alarm	26: Force Arming	49: Area Secured																																																																					
04: Confirmed Alarm	27: Arm Fail	50: Part Armed 1																																																																					
05: 24Hr Audible	28: Bell SAB	51: Part Armed 2																																																																					
06: 24Hr Silent	29: Bell SCB	52: Part Armed 3																																																																					
07: 24Hr Gas	30: Strobe	53: Custom Alarm																																																																					
08: PA Audible	31: Switch 12 Volts	54: Zone Warning																																																																					
09: PA Silent	32: Detector Reset	55: Arm Fail Warning																																																																					
10: Duress	33: Walk Test Active	56: Forced Entry																																																																					
11: Fire Alarm	34: Zones Omitted	57: Zones Locked Out																																																																					
12: Medical	35: 24Hr Zones Omit	58: All Armed																																																																					
13: Auxiliary Alarm	36: Reset Required	59: Auto Arm Disable																																																																					
14: Tamper Alarm	37: Door Strike	60: Armed / Alarm																																																																					
15: Alarm Abort	38: Chime Mimic	61: Intruder Alarm																																																																					
16: Ready	39: Chime Enabled	62: Speaker Mimic																																																																					
17: Entry Mode	40: DK First Knock	63: Full Arm/Exit																																																																					
18: 2 nd Entry Mode	41: BP First Knock	64: Detector Fault																																																																					
19: Exit Mode	42: On Test	65: Detector Mask																																																																					
20: Entry/Exit Mode	43: Test Fail	66: Fault Present																																																																					
21: Armed	44: Internal Alarm	67: LED Control																																																																					
22: Full Arm	45: Auto Arming	68: Full Arm Entry																																																																					
3	Zone:	<p>Use 1 - 8 to enter a zone number or use \blacktriangleleft to search, 0 - 5 to select a zone output type, Yes to accept</p> <table border="0"> <tr> <td>1 Mimic</td> <td>3 Alarm</td> <td>5 MimicLatch</td> </tr> <tr> <td>2 MimicArm</td> <td>4 Tamper</td> <td>6 Omitted</td> </tr> </table>	1 Mimic	3 Alarm	5 MimicLatch	2 MimicArm	4 Tamper	6 Omitted																																																															
1 Mimic	3 Alarm	5 MimicLatch																																																																					
2 MimicArm	4 Tamper	6 Omitted																																																																					
4	User:	Use 1 - 8 to select a User code or use \blacktriangleleft to search, Yes to accept																																																																					
5	Control Timer:	Use 1 - 8 to select a Control Timer, Yes to accept																																																																					
6	PC Control:	Use 1 - 8 to select a PC Control, Yes to accept																																																																					
7	Door Control:	Use 1 - 8 to select a Door Control, Yes to accept																																																																					
8	X-10:	Use 1 - 8 to select a an X-10 Output, Yes to accept																																																																					

Key	Attributes	Attribute Types
(Yes)	Attributes	Press (Yes) to edit, (1) - (8_{sw}) to select attributes, (Yes) to accept (1) U = User Test (2 _{abc}) I = Inverted (3 _{ser}) L = Latch Until (4 _{pr}) 1 = Use Pulse Timer 1 (5 _{pr}) 2 = Use Pulse Timer 2 (6 _{msc}) 3 = Use Pulse Timer 3 (7 _{pprs}) C = Custom Output 1, Stage A (8 _{pr}) R = Random

UDL/Digi Options		
(0 _{...})	Reset Digi	Press (Reset) to reset communicator
(1)	Test Com?	Press (Yes) to send test call to the ARC, (1) - (3_{ser}) to initiate a call to the remote UDL computer (using Call Back numbers 1, 2 or 3)
(2 _{msc})	Set Call Waiting	Press (No) to edit, enter call waiting number, (Yes) to accept (0 _{...}) - (9 _{msc}) = Numbers 0 to 9 (No) then (Yes) = Clear Screen (Omit) Insert a '*' (Chime) Insert a '#' (Part) , (3 Second pause) (Area) W (10 Second pause)
(3 _{ser})	Program Digi	Use (1) - (3_{ser}) to select ARC sets 1 - 3, (No) to edit
	Protocol	Press (No) to edit, (0_{...}) - (4_{pr}) to select protocol, (Yes) to accept (0 _{...}) Disabled (1) Fast Format (2 _{msc}) Contact ID (3 _{ser}) SIA Level II (4 _{pr}) EasyCom Pager (5 _{pr}) SMS
	Telephone Number 1	Press (No) to edit, (0_{...}) - (9_{msc}) to enter telephone number, (Yes) to accept
	Telephone Number 2	Press (No) to edit, (0_{...}) - (9_{msc}) to enter number, (Yes) to accept
	Account Number	Press (No) to edit, (0_{...}) - (9_{msc}) to enter number, (Yes) to accept
	Dialling Attempts	Press (No) to edit, (0_{...}) - (9_{msc}) to enter number, (Yes) to accept
	Reporting Channels	Press (No) to edit, (1) - (8_{sw}) to select channels, (Yes) to accept (only available for Fast Format)
	Restoring Channels	Press (No) to edit, (1) - (8_{sw}) to select channels, (Yes) to accept (only available for Fast Format)
	Open/Close Channels	Press (No) to edit, (1) - (8_{sw}) to select channels, (Yes) to accept (only available for Fast Format)
	Reporting Areas	Press (No) to edit, (1) - (8_{sw}) to select an area, (0_{...}) = all areas, (Area) = areas A - H and I - P, (Yes) to accept (only available for Contact ID, SIA Level II, EasyCom Pager and SMS Messaging)
	Reporting Options	Press (No) to edit, (1) - (8_{sw}) to select option, (Yes) to accept (only available for Contact ID, SIA Level II, EasyCom Pager and SMS Messaging) (1) P = Priority Alarms (2 _{msc}) A = Normal Alarms (3 _{ser}) C = Open/Close (4 _{pr}) O = Omits & Reinstates (5 _{pr}) M = Maintenance (6 _{msc}) T = Tamper Alarms (7 _{pprs}) C = Test Calls (8 _{sw}) R = Restores
	Config.	Press (No) to edit, (1) - (8_{sw}) to select option, (Yes) to accept (only available for Contact ID, SIA Level II, EasyCom Pager & SMS Messaging) (1) A = Use Area Acc (2 _{abc}) S = Use SIA I (3 _{ser}) R = Enable RadioPad (4 _{pr}) G = Enable GSM (5 _{pr}) A = Activate AV (6 _{msc}) F = Use GSM First (7 _{pprs}) I = Connect Via IP
(4 _{pr})	Digi Options	Press (No) to edit, (↕) to select an option, (No) to change the option, (Yes) to accept (1) E = Digi is Enabled (2 _{abc}) P = Pulse Dialling (3 _{ser}) 3 = Pulse after 3 (4 _{pr}) B = Blind Dialling (5 _{pr}) W = Call Waiting On (6 _{msc}) A = Dial All Numbers

UDL/Digi Options Continued	
7 <small>pages</small>	
5 <small>steps</small>	UDL Options
	Press No to edit Call Back number 1, enter the number, Yes to accept
	0 - 9 = Numbers 0 to 9
	No then Yes = Clear Screen
	Omit Insert a '*'
	Chime Insert a '#'
	Part . (3 Second pause)
	Area W (10 Second pause)
	Call Back Number 2
	Press No to edit Call Back number 2, enter the number, Yes to accept
	Call Back Number 3
	Press No to edit Call Back number 3, enter the number, Yes to accept
	UDL Password
	Press No to edit, 0 - 9 to enter number, Yes to accept
	UDL options
	Press No to edit, ↕ to select an option, No to change option, Yes to accept
	1 A = DL Attended
	2 M = Manual Call-back
	3 D = Call Defeat On
	4 L = Armed DL Limited
	5 A = Any Area Armed
	6 K = Online RKP = Off)
	Number of Rings
	Press No to edit, 0 - 9 to enter number of rings, Yes to accept
	Dialling Attempts
	Press No to edit, 0 - 9 to enter number of dialling attempts, Yes to accept
6 <small>pages</small>	Area Accounts
	Use ↕ to select an area, No to edit, 0 - 9 to enter account number, Yes to accept
7 <small>pages</small>	Setup Modules
	Press Reset to reset communicator
	Setup Radio-Pad?
	Press Yes to set-up Radio-Pad, Menu to exit
	Pad ARC 1 Pri No
	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Pad ARC 1 Sec No
	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Pad ARC 1 Prefix
	Press No to edit, 0 - 9 to enter pad prefix, Yes to accept
	Pad ARC 2 Pri No
	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Pad ARC 2 Sec No
	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Pad ARC 2 Prefix
	Press No to edit, 0 - 9 to enter pad prefix, Yes to accept
	Pad ARC 3 Pri No
	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Pad ARC 3 Sec No
	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Pad ARC 3 Prefix
	Press No to edit, 0 - 9 to enter pad prefix, Yes to accept
	Setup AV Module?
	Press Yes to set-up AV Module, Menu to exit
	AV No.1
	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	AV No.2
	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	AV No.3
	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	AV Dial Attempts
	Press No to edit, 0 - 9 to enter number of dialling attempts, Yes to accept
	AV Re-Dial Delay
	Press No to edit, 0 - 9 to enter the re-dial delay, Yes to accept
	Setup IP Module?
	Press Yes to set-up IP Module, Menu to exit
	ComIP Address
	Press No to edit, 0 - 9 to enter an IP Address, Yes to accept
	ComIP Port
	Press No to edit, 0 - 9 to enter a Port Number, Yes to accept
	ComIP Gateway
	Press No to edit, 0 - 9 to enter a Gateway Address, Yes to accept
	ComIP Mask
	Press No to edit, 0 - 9 to enter a Subnet Mask, Yes to accept
	Polling Address
	Press No to edit, 0 - 9 to an IP Address, Yes to accept
	ComIP Name
	Press No to edit, 0 - 9 to a Name, Yes to accept
	SMS Centre Pri
	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	SMS Centre Sec
	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Modem Setup Stg.
	Press No to edit, 0 - 9 to enter modem string, Yes to accept
	Modem Speed
	Press No to edit, 0 - 9 to enter telephone number, Yes to accept
	Pad ESN
	View only
	Pad NUA
	View only
	Forward Signal
	View only
	Reverse Signal
	View only
	Bit Error Rate
	View only
	Cyclic Redundancy
	View only
	GSM Signal/BER
	View only
	Com1
	Press Reset to reset com port
	Com2
	Press Reset to reset com port

7 pgs		UDL/Digi Options Continued		
8 _{sv}	Com Port Setup	Use 0 _{...} - 3 _{sv} to select a com port, No to edit, \updownarrow to select an option, Yes to accept		
	Onboard Digi Port	0 _{...} Nothing Fitted	5 _{sv} Modem Unit	9 _{sv} RadioPlus
	Com Ports 1 & 2	1 Com300	6 _{sv} Radio-pad	10 _{sv} Inovonics Radio
		2 _{sv} Com2400	7 _{sv} GSM Module	11 _{sv} WebWayOne Module
		3 _{sv} ComISDN	8 _{sv} Crestron System	12 _{sv} X-10 Control
		4 _{sv} ComIP	9 _{sv} SIP	13 _{sv} IRIS IP Module
	Expansion Port	0 _{...} Nothing Fitted	2 _{sv} ID Module	
		1 AV Module	3 _{sv} X10 Module	

8 _{sv}		Setup Users		
Yes	Select User	Use 0 _{...} - 9 _{sv} to enter enter a user number, Reset to Delete User, Omit to assign a Radio FOB, Chime to Copy a TAG, Part to Import a TAG, Yes to enter a Code		
Yes	User Code	Use 0 _{...} - 9 _{sv} to enter a code, Yes to accept		
Yes	User Areas	Use 1 - 8 _{sv} to select an area, (0 _{...} = all areas, Area = areas A - H and I -P), Yes to accept		
Yes	User Types	Use 0 _{...} - 9 _{sv} to select a user type, Yes to accept		
		1 Master	5 _{sv} Arm Only	9 _{sv} Custom
		2 _{sv} Manager	6 _{sv} Duress	0 _{...} Engineer
		3 _{sv} Standard	7 _{sv} Door Strike	
		4 _{sv} Local	8 _{sv} Vacation	
Yes	User Options 1	Press No to edit, \updownarrow to select an option, No to change option, Yes to accept		
		1 A = Arming	4 _{sv} R = Eng. Reset	7 _{sv} Y = Auto 'YES'
		2 _{sv} D = Disarming	5 _{sv} a = Local Arming	8 _{sv} D = Disarm First
		3 _{sv} O = Omitting	6 _{sv} d = Local Disarming	
Yes	User Options 2 (only available to Custom users)	Press No to edit, \updownarrow to select an option, No to change option, Yes to accept		
		1 U = User Menu	4 _{sv} V = Vacation	7 _{sv} C = Duress Code
		2 _{sv} E = Eng. Program	5 _{sv} S = Door strike	8 _{sv} O = Open/Close
		3 _{sv} D = Dual Code	6 _{sv} R = Call Rem. PC	
Yes	User Config. (only available to Custom users with User Menu)	Press No to edit, \updownarrow to select an option, No to change option, Yes to accept		
		1 C = Change Code	4 _{sv} S = System tests	7 _{sv} A = Add Eng. Code
		2 _{sv} Z = Chime Zones	5 _{sv} U = Setup Users	8 _{sv} N = NVM Locking
		3 _{sv} T = Change Timer	6 _{sv} E = Eng. Access	
Yes	User Time Lock	Use 1 - 8 _{sv} to select a control timer, Yes to accept		
Yes	User Text	Press No to edit, 0 _{...} - 9 _{sv} to select characters (press the required key the appropriate number of times), Yes to accept		
		1 . , ? ! 1 @ " -	6 _{sv} M N O 6	\updownarrow Move Cursor
		2 _{abc} A B C 2	7 _{sv} P Q R S 7	Chime Copy Text to Memory
		3 _{sv} D E F 3	8 _{sv} T U V 8	Part Paste Text from Memory
		4 _{sv} G H I 4	9 _{sv} W X Y Z 9	No Upper, Lower Case, Predictive Text & Numerical
		5 _{sv} J K L 5	0 _{...} 0 _	
Yes	Door Control (only available to Users with Door Strike attribute)	Use 1 - 8 _{sv} to select a door, 0 _{...} to select network Yes to accept		
		1 Door 1	4 _{sv} Door 4	7 _{sv} Door 7
		2 _{sv} Door 2	5 _{sv} Door 5	8 _{sv} Door 8
		3 _{sv} Door 3	6 _{sv} Door 6	0 _{...} Select Network
Yes	Assign Prox TAG	Press Yes to assign TAG, present TAG to 'Prox' symbol on keypad		

9 _{wpz}		Engineer Utils
0 _{sw}	View System Log	Use ↕ to move up and down through log (down moves back in time, up moves forward again), Area to show area information or time and date, 1 - 7_{ps} or Chime to find specific events ↕ Move backwards and forwards 4_{ps} View Omits/Reinstate Events Area View Area/Time and date 5_{sw} View Maintenance Events 1 View Priority Alarms 6_{sw} View Tamper Alarms 2_{sw} View Normal Alarms 7_{ps} View Test Call Events 3_{sw} View Open/Close Events Chime View Matching Events
1	Do Bell Test	Use ↕ to select an option, use 1 - 8_{sw} or Yes to activate outputs 1: Test Bell 6: Test RedCARE 2: Test Strobe 7: Fast 3: Test Speaker 8: LCD Display 4: Test Digi 9: User Outputs 5: Test Panel
2 _{sw}	Do Walk Test	Press Area to display zones that have been tested/still need testing, Chime to make zones Chime every time they are activated.
3 _{sw}	View Zone Status	Use 0_{sw} - 9_{wpz} to enter zone number or use ↕ to search, Chime to walk test selected zone, Omit to omit zone temporarily
4 _{ps}	System Tests	Use 1 - 4_{ps} to select an option or use ↕ to search, Yes to accept 1 View Sys. Status 3_{sw} Test Outputs (see Do Bell Test) 2_{sw} View Batt Status 4_{ps} View Version No.
5 _{sw}	Confirm Devices	Use ↕ to select network, Yes to confirm Devices, Area to view error count, Reset to reset error count
6 _{sw}	Check RKP Status	Use 1 - 8_{sw} to select keypad, 0_{sw} to select network, Area to display errors/tamper, No to test output, Omit to test sounder,
7 _{ps}	Check Exp. Status	Use 1 - 8_{sw} to select expander, 0_{sw} to select network, Area to display zones/voltage/outputs/errors, Chime to test zones, Omit to test sounder, 1 - 8_{sw} to test outputs
8 _{sw}	Set System Time	Use 0_{sw} - 9_{wpz} to enter time (24-hour format) H H M M , Yes to accept
9 _{wpz}	Set System Date	Use 0_{sw} - 9_{wpz} to enter date D D M M Y Y , Yes to accept
↕	Location Text	Press Yes to view Location Text
↕	Print Log	Use 1 - 8_{sw} to enter number of events to be printed, Yes to print log
↕	Start Soak Test	Use 1 - 8_{sw} to select an area, (0_{sw} = all areas, Area = areas A – H and I – P), Yes to accept, Yes to start test
↕	Change Eng.Code	Use 0_{sw} - 9_{wpz} to enter a code, Yes to accept
↕	Adjust Volumes	Use ↕ to select Panel, Keypad or Expander speakers. Press No to edit, 0_{sw} - 8_{sw} to enter a value, Yes to accept
↕	Default NVM Data	Press 1 - 8_{sw} to select an option or ↕ to search, Yes to default 00: Panel Outputs 09: Remote Options 01: Digi Outputs 10: User Codes 02: Expander Outputs 11: System Timers 03: Keypad Outputs 12: System Options 04: Com???? Channels 13: Area Options 05: RedCARE Pins 14: System Text 06: Zone Types 15: UDL Options 07: Zone Text 16: Digi Options 08: Expander Options
↕	View iD Data	Use 0_{sw} to select loop, Area to select normal scan, quick scan or biscuit mapping. Use ↕ to select biscuit, No to edit, 0_{sw} - 9_{wpz} to enter zone number, Yes to accept
↕	Configure Radio	Use 1 - 8_{sw} to select a device, Yes to learn device, No to map zone, 1 - 8_{sw} to enter zone number, Yes accept

Part		Alter Part Arms
Press 0_{sw} - 9_{wpz} to enter zone number or use ↕ to search, Omit , Chime or Part to select Part Arms 1, 2 or 3		
Omit	Part Arm 1	Chime Part Arm 2 Part Part Arm 3

Texecom

www.texe.com

Texecom Limited, Bradwood Court, St. Crispin Way, Haslingden, Lancashire BB4 4PW, England.

Technical Support:

Tel: +44 (0)1706 234833

Tel: +44 (0)1706 234811

Fax: +44 (0)1706 213187

© TEXECOM LTD. 2000 - 2005

IINS176-5